BDTIC www.bdtic.com/ATMEL

Features

- ARM7TDMI[®] ARM[®] Thumb[®] Processor Core – In-Circuit Emulator, 36 MHz Operation
- Ethernet Bridge
 - Dual Ethernet 10/100 Mbps MAC Interface
 - 16-Kbyte Frame Buffer
- 1 K-Byte Boot ROM, Embedding a Boot Program
 - Enable Application Download from DataFlash®
- External Bus Interface
 - On-chip 16-bit SDRAM Controller
 - 4-Chip Select Static Memory Controller
- Multi-level Priority, Individually Maskable, Vectored Interrupt Controller
- Three 16-bit Timer/Counters
- Two UARTs with Modem Control Lines
- Serial Peripheral Interface (SPI)
- Two PIO Controllers, Managing up to 48 General-purpose I/O Pins
- Available in a 208-lead PQFP Package
- Power Supplies
 - VDDIO 3.3V nominal
 - VDDCORE and VDDOSC 1.8V nominal
- -40°C to + 85°C Operating Temperature Range

1. Description

The AT91C140 is a member of the Atmel AT91 16- and 32-bit microcontroller family based on the ARM7TDMI processor core. This processor has a high performance 32-bit RISC architecture with a high density 16-bit instruction set and very low power consumption.

In addition, the AT91C140 integrates a double Ethernet 10/100 base-T MAC capable of operating as an Ethernet bridge, thus making it ideally suited for networking applications. It supports a wide range of memory devices such as SDRAM, SRAM and Flash and embeds an extensive array of peripherals.

The device is manufactured using Atmel's high-density CMOS technology. By combining the ARM7TDMI processor core with an expansive assortment of peripheral functions and low-power oscillators and PLL on a monolithic chip, the Atmel AT91C140 is a powerful microcontroller that provides a highly flexible and cost effective solution to many networking applications.



AT91 ARM[®] Thumb[®] Microcontrollers


AT91C140


6069C-ATARM-15-Sep-05





2. Block Diagram



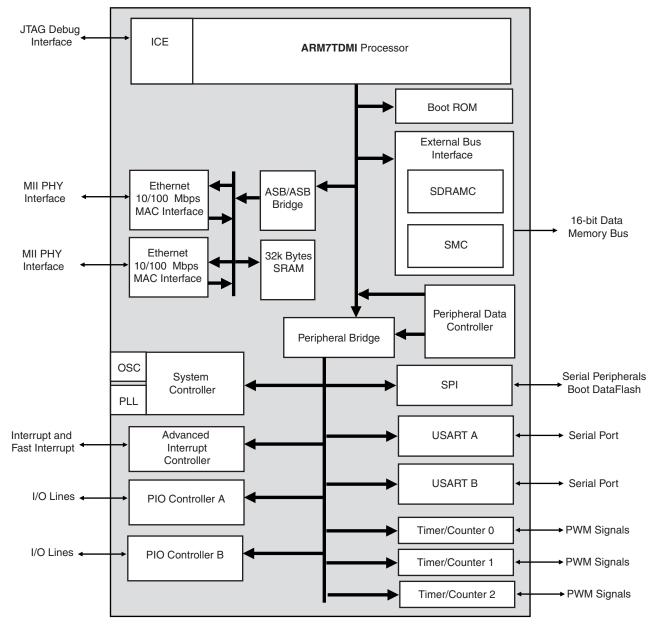

AT91C140

2

3. Pinout

 Table 3-1.
 Pinout for 208-lead PQFP Package

PinSignal NameNumberSignal Name1GND2GND3VDDIO4GND5NC ⁽¹⁾ 6GND7NTRST8MA_COL9MA_CRS10MA_TXER11MA_TXD012MA_TXD113MA_TXD114MA_TXD315MA_TXCLK18GND19MA_RXD120MA_RXD121MA_RXD122MA_RXD123MA_RXD124MA_RXD125GND26VDDCORE27MA_RXD428MA_RXD430MA_RXD430MA_RXD431MB_CCL32MB_CRS33GND34VDDCORE35VDDIO36MB_TXER																																																																																																																	
I GND 2 GND 3 VDDIO 4 GND 5 NC ⁽¹⁾ 6 GND 7 NTRST 8 MA_COL 9 MA_CRS 10 MA_TXER 11 MA_TXD1 12 MA_TXD1 13 MA_TXD2 14 MA_TXEN 15 MA_TXEN 16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD1 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXD4 24 MA_RXD4 25 GND 26 VDDCORE 27 MA_MDC 28 MA_MDC 30 MA_LINK 31 MB_COL 32 MB_CRS 33 GND <tr tbb<="" tr=""> 34<th></th><th></th></tr> <tr><th>2 GND 3 VDDIO 4 GND 5 NC⁽¹⁾ 6 GND 7 NTRST 8 MA_COL 9 MA_CRS 10 MA_TXER 11 MA_TXD1 12 MA_TXD2 14 MA_TXD3 15 MA_TXEN 16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD1 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXD3 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE</th><th>Number</th><th>Signal Name</th></tr> <tr><td>3 VDDIO 4 GND 5 NC⁽¹⁾ 6 GND 7 NTRST 8 MA_COL 9 MA_CRS 10 MA_TXER 11 MA_TXD0 12 MA_TXD1 13 MA_TXD3 14 MA_TXCLK 15 MA_RXD1 16 VDDIO 17 MA_RXD1 18 GND 19 MA_RXD1 20 MA_RXD1 21 MA_RXD3 23 MA_RXD3 24 MA_RXD3 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE 35 VDDIO</td><td>1</td><td>GND</td></tr> <tr><td>4 GND 5 NC⁽¹⁾ 6 GND 7 NTRST 8 MA_COL 9 MA_CRS 10 MA_TXER 11 MA_TXD1 12 MA_TXD2 14 MA_TXCLK 15 MA_TXCLK 16 VDDIO 17 MA_RXD1 18 GND 19 MA_RXD1 20 MA_RXD1 21 MA_RXD1 22 MA_RXD1 23 MA_RXD2 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE</td><td>2</td><td>GND</td></tr> <tr><td>5 NC⁽¹⁾ 6 GND 7 NTRST 8 MA_COL 9 MA_CRS 10 MA_TXER 11 MA_TXD0 12 MA_TXD1 13 MA_TXD3 14 MA_TXCLK 18 GND 19 MA_RXD0 14 MA_TXCLK 18 GND 19 MA_RXD1 20 MA_RXD1 21 MA_RXD1 22 MA_RXD1 23 MA_RXD3 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE</td><td>3</td><td>VDDIO</td></tr> <tr><td>NR 6 GND 7 NTRST 8 MA_COL 9 MA_CRS 10 MA_TXER 11 MA_TXD0 12 MA_TXD1 13 MA_TXD2 14 MA_TXCN 15 MA_TXCN 16 VDDIO 17 MA_RXD 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXCLK 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE 35 VDDIO</td><td>4</td><td>GND</td></tr> <tr><td>7 NTRST 8 MA_COL 9 MA_CRS 10 MA_TXER 11 MA_TXD0 12 MA_TXD1 13 MA_TXD2 14 MA_TXCN 15 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD1 22 MA_RXD1 23 MA_RXD2 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE 35 VDDIO</td><td>5</td><td>NC⁽¹⁾</td></tr> <tr><td>8 MA_COL 9 MA_CRS 10 MA_TXER 11 MA_TXD0 12 MA_TXD1 13 MA_TXD2 14 MA_TXD3 15 MA_TXCN 16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD1 20 MA_RXD1 21 MA_RXD2 22 MA_RXD1 23 MA_RXD3 24 MA_RXD4 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LLINK 31 MB_CRS 33 GND 34 VDDCORE</td><td>6</td><td>GND</td></tr> <tr><td>9 MA_CRS 10 MA_TXER 11 MA_TXD0 12 MA_TXD1 13 MA_TXD2 14 MA_TXD3 15 MA_TXEN 16 VDDIO 17 MA_TXCLK 18 GND 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXD3 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE</td><td>7</td><td>NTRST</td></tr> <tr><td>10 MA_TXER 11 MA_TXD0 12 MA_TXD1 13 MA_TXD2 14 MA_TXD3 15 MA_TXEN 16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD3 23 MA_RXD3 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE</td><td>8</td><td>MA_COL</td></tr> <tr><td>11 MA_TXD0 12 MA_TXD1 13 MA_TXD2 14 MA_TXD3 15 MA_TXEN 16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXCLK 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE</td><td>9</td><td>MA_CRS</td></tr> <tr><td>12 MA_TXD1 13 MA_TXD2 14 MA_TXD3 15 MA_TXEN 16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXCLK 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LLINK 31 MB_CRS 33 GND 34 VDDCORE</td><td>10</td><td>MA_TXER</td></tr> <tr><td>13 MA_TXD2 14 MA_TXD3 15 MA_TXEN 16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD3 23 MA_RXD3 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE</td><td>11</td><td>MA_TXD0</td></tr> <tr><td>14 MA_TXD3 15 MA_TXEN 16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD3 23 MA_RXCLK 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE</td><td>12</td><td>MA_TXD1</td></tr> <tr><td>15 MA_TXEN 16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXCLK 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE</td><td>13</td><td>MA_TXD2</td></tr> <tr><td>16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE</td><td>14</td><td>MA_TXD3</td></tr> <tr><td>17 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXCLK 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE</td><td>15</td><td>MA_TXEN</td></tr> <tr><td>18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXER 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE</td><td>16</td><td>VDDIO</td></tr> <tr><td>19 MA_RXD0 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXCA 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE</td><td>17</td><td>MA_TXCLK</td></tr> <tr><td>20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXER 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE</td><td>18</td><td>GND</td></tr> <tr><td>21 MA_RXD2 22 MA_RXD3 23 MA_RXER 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE</td><td>19</td><td>MA_RXD0</td></tr> <tr><td>22 MA_RXD3 23 MA_RXER 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE</td><td>20</td><td>MA_RXD1</td></tr> <tr><td>23 MA_RXER 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE</td><td>21</td><td>MA_RXD2</td></tr> <tr><td>24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CCL 32 MB_CRS 33 GND 34 VDDCORE</td><td>22</td><td>MA_RXD3</td></tr> <tr><td>25GND26VDDCORE27MA_RXDV28MA_MDC29MA_MDIO30MA_LINK31MB_COL32MB_CRS33GND34VDDCORE35VDDIO</td><td>23</td><td>MA_RXER</td></tr> <tr><td>26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_COL 32 MB_CRS 33 GND 34 VDDCORE 35 VDDIO</td><td>24</td><td>MA_RXCLK</td></tr> <tr><td>27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_COL 32 MB_CRS 33 GND 34 VDDCORE 35 VDDIO</td><td>25</td><td>GND</td></tr> <tr><td>28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_COL 32 MB_CRS 33 GND 34 VDDCORE 35 VDDIO</td><td>26</td><td>VDDCORE</td></tr> <tr><td>29 MA_MDIO 30 MA_LINK 31 MB_COL 32 MB_CRS 33 GND 34 VDDCORE 35 VDDIO</td><td>27</td><td>MA_RXDV</td></tr> <tr><td>30 MA_LINK 31 MB_COL 32 MB_CRS 33 GND 34 VDDCORE 35 VDDIO</td><td>28</td><td>MA_MDC</td></tr> <tr><td>31 MB_COL 32 MB_CRS 33 GND 34 VDDCORE 35 VDDIO</td><td>29</td><td>MA_MDIO</td></tr> <tr><td>32 MB_CRS 33 GND 34 VDDCORE 35 VDDIO</td><td>30</td><td>MA_LINK</td></tr> <tr><td>33 GND 34 VDDCORE 35 VDDIO</td><td>31</td><td>MB_COL</td></tr> <tr><td>34VDDCORE35VDDIO</td><td>32</td><td>MB_CRS</td></tr> <tr><td>35 VDDIO</td><td>33</td><td>GND</td></tr> <tr><td></td><td>34</td><td>VDDCORE</td></tr> <tr><td>36 MB_TXER</td><td>35</td><td>VDDIO</td></tr> <tr><td></td><td>36</td><td>MB_TXER</td></tr>			2 GND 3 VDDIO 4 GND 5 NC ⁽¹⁾ 6 GND 7 NTRST 8 MA_COL 9 MA_CRS 10 MA_TXER 11 MA_TXD1 12 MA_TXD2 14 MA_TXD3 15 MA_TXEN 16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD1 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXD3 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	Number	Signal Name	3 VDDIO 4 GND 5 NC ⁽¹⁾ 6 GND 7 NTRST 8 MA_COL 9 MA_CRS 10 MA_TXER 11 MA_TXD0 12 MA_TXD1 13 MA_TXD3 14 MA_TXCLK 15 MA_RXD1 16 VDDIO 17 MA_RXD1 18 GND 19 MA_RXD1 20 MA_RXD1 21 MA_RXD3 23 MA_RXD3 24 MA_RXD3 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE 35 VDDIO	1	GND	4 GND 5 NC ⁽¹⁾ 6 GND 7 NTRST 8 MA_COL 9 MA_CRS 10 MA_TXER 11 MA_TXD1 12 MA_TXD2 14 MA_TXCLK 15 MA_TXCLK 16 VDDIO 17 MA_RXD1 18 GND 19 MA_RXD1 20 MA_RXD1 21 MA_RXD1 22 MA_RXD1 23 MA_RXD2 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	2	GND	5 NC ⁽¹⁾ 6 GND 7 NTRST 8 MA_COL 9 MA_CRS 10 MA_TXER 11 MA_TXD0 12 MA_TXD1 13 MA_TXD3 14 MA_TXCLK 18 GND 19 MA_RXD0 14 MA_TXCLK 18 GND 19 MA_RXD1 20 MA_RXD1 21 MA_RXD1 22 MA_RXD1 23 MA_RXD3 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	3	VDDIO	NR 6 GND 7 NTRST 8 MA_COL 9 MA_CRS 10 MA_TXER 11 MA_TXD0 12 MA_TXD1 13 MA_TXD2 14 MA_TXCN 15 MA_TXCN 16 VDDIO 17 MA_RXD 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXCLK 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE 35 VDDIO	4	GND	7 NTRST 8 MA_COL 9 MA_CRS 10 MA_TXER 11 MA_TXD0 12 MA_TXD1 13 MA_TXD2 14 MA_TXCN 15 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD1 22 MA_RXD1 23 MA_RXD2 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE 35 VDDIO	5	NC ⁽¹⁾	8 MA_COL 9 MA_CRS 10 MA_TXER 11 MA_TXD0 12 MA_TXD1 13 MA_TXD2 14 MA_TXD3 15 MA_TXCN 16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD1 20 MA_RXD1 21 MA_RXD2 22 MA_RXD1 23 MA_RXD3 24 MA_RXD4 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LLINK 31 MB_CRS 33 GND 34 VDDCORE	6	GND	9 MA_CRS 10 MA_TXER 11 MA_TXD0 12 MA_TXD1 13 MA_TXD2 14 MA_TXD3 15 MA_TXEN 16 VDDIO 17 MA_TXCLK 18 GND 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXD3 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	7	NTRST	10 MA_TXER 11 MA_TXD0 12 MA_TXD1 13 MA_TXD2 14 MA_TXD3 15 MA_TXEN 16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD3 23 MA_RXD3 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	8	MA_COL	11 MA_TXD0 12 MA_TXD1 13 MA_TXD2 14 MA_TXD3 15 MA_TXEN 16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXCLK 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	9	MA_CRS	12 MA_TXD1 13 MA_TXD2 14 MA_TXD3 15 MA_TXEN 16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXCLK 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LLINK 31 MB_CRS 33 GND 34 VDDCORE	10	MA_TXER	13 MA_TXD2 14 MA_TXD3 15 MA_TXEN 16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD3 23 MA_RXD3 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	11	MA_TXD0	14 MA_TXD3 15 MA_TXEN 16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD3 23 MA_RXCLK 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	12	MA_TXD1	15 MA_TXEN 16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXCLK 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	13	MA_TXD2	16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	14	MA_TXD3	17 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXCLK 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	15	MA_TXEN	18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXER 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	16	VDDIO	19 MA_RXD0 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXCA 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	17	MA_TXCLK	20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXER 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	18	GND	21 MA_RXD2 22 MA_RXD3 23 MA_RXER 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	19	MA_RXD0	22 MA_RXD3 23 MA_RXER 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	20	MA_RXD1	23 MA_RXER 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	21	MA_RXD2	24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CCL 32 MB_CRS 33 GND 34 VDDCORE	22	MA_RXD3	25GND26VDDCORE27MA_RXDV28MA_MDC29MA_MDIO30MA_LINK31MB_COL32MB_CRS33GND34VDDCORE35VDDIO	23	MA_RXER	26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_COL 32 MB_CRS 33 GND 34 VDDCORE 35 VDDIO	24	MA_RXCLK	27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_COL 32 MB_CRS 33 GND 34 VDDCORE 35 VDDIO	25	GND	28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_COL 32 MB_CRS 33 GND 34 VDDCORE 35 VDDIO	26	VDDCORE	29 MA_MDIO 30 MA_LINK 31 MB_COL 32 MB_CRS 33 GND 34 VDDCORE 35 VDDIO	27	MA_RXDV	30 MA_LINK 31 MB_COL 32 MB_CRS 33 GND 34 VDDCORE 35 VDDIO	28	MA_MDC	31 MB_COL 32 MB_CRS 33 GND 34 VDDCORE 35 VDDIO	29	MA_MDIO	32 MB_CRS 33 GND 34 VDDCORE 35 VDDIO	30	MA_LINK	33 GND 34 VDDCORE 35 VDDIO	31	MB_COL	34VDDCORE35VDDIO	32	MB_CRS	35 VDDIO	33	GND		34	VDDCORE	36 MB_TXER	35	VDDIO		36	MB_TXER
2 GND 3 VDDIO 4 GND 5 NC ⁽¹⁾ 6 GND 7 NTRST 8 MA_COL 9 MA_CRS 10 MA_TXER 11 MA_TXD1 12 MA_TXD2 14 MA_TXD3 15 MA_TXEN 16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD1 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXD3 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	Number	Signal Name																																																																																																															
3 VDDIO 4 GND 5 NC ⁽¹⁾ 6 GND 7 NTRST 8 MA_COL 9 MA_CRS 10 MA_TXER 11 MA_TXD0 12 MA_TXD1 13 MA_TXD3 14 MA_TXCLK 15 MA_RXD1 16 VDDIO 17 MA_RXD1 18 GND 19 MA_RXD1 20 MA_RXD1 21 MA_RXD3 23 MA_RXD3 24 MA_RXD3 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE 35 VDDIO	1	GND																																																																																																															
4 GND 5 NC ⁽¹⁾ 6 GND 7 NTRST 8 MA_COL 9 MA_CRS 10 MA_TXER 11 MA_TXD1 12 MA_TXD2 14 MA_TXCLK 15 MA_TXCLK 16 VDDIO 17 MA_RXD1 18 GND 19 MA_RXD1 20 MA_RXD1 21 MA_RXD1 22 MA_RXD1 23 MA_RXD2 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	2	GND																																																																																																															
5 NC ⁽¹⁾ 6 GND 7 NTRST 8 MA_COL 9 MA_CRS 10 MA_TXER 11 MA_TXD0 12 MA_TXD1 13 MA_TXD3 14 MA_TXCLK 18 GND 19 MA_RXD0 14 MA_TXCLK 18 GND 19 MA_RXD1 20 MA_RXD1 21 MA_RXD1 22 MA_RXD1 23 MA_RXD3 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	3	VDDIO																																																																																																															
NR 6 GND 7 NTRST 8 MA_COL 9 MA_CRS 10 MA_TXER 11 MA_TXD0 12 MA_TXD1 13 MA_TXD2 14 MA_TXCN 15 MA_TXCN 16 VDDIO 17 MA_RXD 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXCLK 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE 35 VDDIO	4	GND																																																																																																															
7 NTRST 8 MA_COL 9 MA_CRS 10 MA_TXER 11 MA_TXD0 12 MA_TXD1 13 MA_TXD2 14 MA_TXCN 15 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD1 22 MA_RXD1 23 MA_RXD2 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE 35 VDDIO	5	NC ⁽¹⁾																																																																																																															
8 MA_COL 9 MA_CRS 10 MA_TXER 11 MA_TXD0 12 MA_TXD1 13 MA_TXD2 14 MA_TXD3 15 MA_TXCN 16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD1 20 MA_RXD1 21 MA_RXD2 22 MA_RXD1 23 MA_RXD3 24 MA_RXD4 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LLINK 31 MB_CRS 33 GND 34 VDDCORE	6	GND																																																																																																															
9 MA_CRS 10 MA_TXER 11 MA_TXD0 12 MA_TXD1 13 MA_TXD2 14 MA_TXD3 15 MA_TXEN 16 VDDIO 17 MA_TXCLK 18 GND 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXD3 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	7	NTRST																																																																																																															
10 MA_TXER 11 MA_TXD0 12 MA_TXD1 13 MA_TXD2 14 MA_TXD3 15 MA_TXEN 16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD3 23 MA_RXD3 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	8	MA_COL																																																																																																															
11 MA_TXD0 12 MA_TXD1 13 MA_TXD2 14 MA_TXD3 15 MA_TXEN 16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXCLK 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	9	MA_CRS																																																																																																															
12 MA_TXD1 13 MA_TXD2 14 MA_TXD3 15 MA_TXEN 16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXCLK 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LLINK 31 MB_CRS 33 GND 34 VDDCORE	10	MA_TXER																																																																																																															
13 MA_TXD2 14 MA_TXD3 15 MA_TXEN 16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD3 23 MA_RXD3 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	11	MA_TXD0																																																																																																															
14 MA_TXD3 15 MA_TXEN 16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD3 23 MA_RXCLK 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	12	MA_TXD1																																																																																																															
15 MA_TXEN 16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXCLK 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	13	MA_TXD2																																																																																																															
16 VDDIO 17 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	14	MA_TXD3																																																																																																															
17 MA_TXCLK 18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXCLK 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	15	MA_TXEN																																																																																																															
18 GND 19 MA_RXD0 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXER 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	16	VDDIO																																																																																																															
19 MA_RXD0 20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXCA 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	17	MA_TXCLK																																																																																																															
20 MA_RXD1 21 MA_RXD2 22 MA_RXD3 23 MA_RXER 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	18	GND																																																																																																															
21 MA_RXD2 22 MA_RXD3 23 MA_RXER 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	19	MA_RXD0																																																																																																															
22 MA_RXD3 23 MA_RXER 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	20	MA_RXD1																																																																																																															
23 MA_RXER 24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CRS 33 GND 34 VDDCORE	21	MA_RXD2																																																																																																															
24 MA_RXCLK 25 GND 26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_CCL 32 MB_CRS 33 GND 34 VDDCORE	22	MA_RXD3																																																																																																															
25GND26VDDCORE27MA_RXDV28MA_MDC29MA_MDIO30MA_LINK31MB_COL32MB_CRS33GND34VDDCORE35VDDIO	23	MA_RXER																																																																																																															
26 VDDCORE 27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_COL 32 MB_CRS 33 GND 34 VDDCORE 35 VDDIO	24	MA_RXCLK																																																																																																															
27 MA_RXDV 28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_COL 32 MB_CRS 33 GND 34 VDDCORE 35 VDDIO	25	GND																																																																																																															
28 MA_MDC 29 MA_MDIO 30 MA_LINK 31 MB_COL 32 MB_CRS 33 GND 34 VDDCORE 35 VDDIO	26	VDDCORE																																																																																																															
29 MA_MDIO 30 MA_LINK 31 MB_COL 32 MB_CRS 33 GND 34 VDDCORE 35 VDDIO	27	MA_RXDV																																																																																																															
30 MA_LINK 31 MB_COL 32 MB_CRS 33 GND 34 VDDCORE 35 VDDIO	28	MA_MDC																																																																																																															
31 MB_COL 32 MB_CRS 33 GND 34 VDDCORE 35 VDDIO	29	MA_MDIO																																																																																																															
32 MB_CRS 33 GND 34 VDDCORE 35 VDDIO	30	MA_LINK																																																																																																															
33 GND 34 VDDCORE 35 VDDIO	31	MB_COL																																																																																																															
34VDDCORE35VDDIO	32	MB_CRS																																																																																																															
35 VDDIO	33	GND																																																																																																															
	34	VDDCORE																																																																																																															
36 MB_TXER	35	VDDIO																																																																																																															
	36	MB_TXER																																																																																																															

FULL LA	ichaye
Pin	
Number	Signal Name
37	MB_TXD0
38	MB_TXD1
39	MB_TXD2
40	GND
41	MB_TXD3
42	MB_TXEN
43	MB_TXCLK
44	MB_RXD0
45	MB_RXD1
46	MB_RXD2
47	MB_RXD3
48	MB_RXER
49	MB_RXCLK
50	MB_RXDV
51	MB_MDC
52	VDDIO
53	GND
54	MB_MDIO
55	MB_LINK
56	A0
57	A1
58	A2
59	A3
60	A4
61	A5
62	A6
63	A7
64	A8
65	A9
66	A10
67	A11
68	A12
69	VDDIO
70	GND
71	A13
72	A14

	r.
Pin	
Number	Signal Name
73	A15
74	A16
75	A17
76	A18
77	A19B/A0
78	A20/BA1
79	A21
80	D0
81	D1
82	D2
83	D3
84	GND
85	D4
86	VDDIO
87	D5
88	D6
89	D7
90	D8
91	D9
92	D10
93	D11
94	D12
95	D13
96	D14
97	VDDCORE
98	GND
99	D15
100	VDDIO
101	GND
102	VDDIO
103	NC ⁽¹⁾
104	VDDIO
105	GND
106	SDCK
107	SDCS
108	SDA10
	1

Pin	
Number	Signal Name
109	RAS
110	CAS
111	NC ⁽¹⁾
112	WE
113	DQM0
114	DQM1
115	NC ⁽¹⁾
116	GND
117	NC ⁽¹⁾
118	VDDCORE
119	GND
120	VDDOSC
121	PLLRC
122	GND
123	GND
124	XTALOUT
125	XTALIN
126	VDDCORE
127	NCE0
128	NCE1
129	NCE2
130	VDDIO
131	NCE3
132	NWE0
133	NWE1
134	NC ⁽¹⁾
135	VDDIO
136	GND
137	NC ⁽¹⁾
138	NWR
139	NSOE
140	GND
141	VDDCORE
142	VDDIO
143	MISO
144	MOSI





Pin Number	Signal Name	Pin Number	Signal Name	Pin Number	Signal Name	Pin Number	Signal Name
145	SPCK	161	TMS	177	PA5	193	GND
146	PA22	162	тск	178	PA4	194	PB0
147	VDDIO	163	PA19	179	PA3	195	PB1
148	GND	164	VDDCORE	180	PA2	196	PB2
149	NRST	165	GND	181	PA1	197	PB3
150	FIQ	166	PA12	182	PA0	198	PB4
151	IRQ0	167	GND	183	GND	199	PB5
152	TST	168	VDDIO	184	RXDA	200	PB6
153	GND	169	PA11	185	TXDA	201	PB7
154	VDDCORE	170	PA10	186	NRSTA	202	PB8
155	NC ⁽¹⁾	171	PA9	187	NCTSA	203	PB9
156	VDDIO	172	PA8	188	NDTRA	204	VDDIO
157	GND	173	PA7	189	NDSRA	205	GND
158	VDDIO	174	PA6	190	NDCDA	206	GND
159	TDO	175	VDDIO	191	RXDB	207	GND
160	TDI	176	NC ⁽¹⁾	192	TXDB	208	VDDIO

Table 3-1. Pinout for 208-lead PQFP Package (Continued)


Note: 1. NC leads should be left unconnected.

3.1 Mechanical Overview of the 208-lead PQFP Package

Figure 3-1 below shows the orientation of the 208-lead PQFP package.

For a detailed mechanical description, see "Mechanical Characteristics and Packaging" on page 165.

Figure 3-1. 208-lead PQFP Package Orientation (Top View)

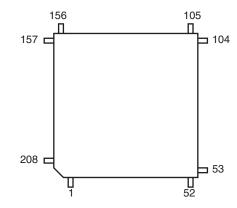

AT91C140

4

4. Peripheral Multiplexing on PIO Lines

The AT91C140 features two PIO Controllers, PIOA and PIOB, multiplexing I/O lines of the peripheral set.

The PIO Controller A manages 15 I/O lines, PA0 to PA12, PA19 and PA22.

The PIO Controller B manages only 10 I/O lines, PB0 to PB9.

Each I/O line of a PIO Controller can be multiplexed with a peripheral I/O. Multiplexing of the PIO Controller A is given in Table 4-1 on page 6. Multiplexing of the PIO Controller B is given in Table 4-2 on page 6.





4.1 PIO Controller A Multiplexing

Table 4-1.	Multiplexing on PIO Controller A
------------	----------------------------------

I/O Line	Peripheral		
Name	Signal Name	Description	Туре
PA0			
PA1			
PA2			
PA3			
PA4			
PA5			
PA6			
PA7			
PA8	TCLK0	Timer Counter Clock Input 0	Input
PA9	TIOA0	Timer Counter I/O LIne A 0	I/O
PA10	TIOB0	Timer Counter I/O LIne B 0	I/O
PA11	SCKA	UART A Serial Clock	I/O
PA12	NPCS1	Serial Peripehral Chip Select 1	Output
PA19	ACLKO	ARM System Clock	Output
PA22	NPCS0	Serial Peripheral Chip Select 0	I/O

4.2 PIO Controller B Multiplexing

Table 4-2.Multiplexing on PIO Controller B

I/O Line	Peripheral		
Name	Signal Name	Description	Туре
PB0	TCLK1	Timer Counter Clock Input 1	Input
PB1	TIOA1	Timer Counter I/O LIne A 1	I/O
PB2	TIOB1	Timer Counter I/O LIne B 1	I/O
PB3			
PB4			
PB5	NRIA	UART A Ring Indicator	Input
PB6			
PB7			
PB8			
PB9			

AT91C140

6

5. Signal Description

Table 5-1. Signal Description

Block	Signal Name	Function	Туре
	VDDIO	I/O Lines Power Supply	
Davies Oversläss	VDDCORE	Device Core Power Supply	
Power Supplies	VDDOSC	PLL and Oscillator Power Supply	
	GND	Ground	
Enternal Due later for a	A0-A23	Address Bus	Output
External Bus Interface	D0-D15	Data Bus	Input/Output
	SDCK	SDRAM Clock	Output
	DQM0-DQM1	SDRAM Byte Masks	Output
	SDCS	SDRAM Chip Select	Output
Synchronous Dynamic	SDA10	SDRAM Address Line 10	Output
Memory Controller	RAS	Row Address Strobes	Output
	CAS	Column Address Strobes	Output
	WE	Write Enable	Output
	BA0-BA1	Bank Address Line	Output
Static Memory Controller	NCE0-NCE3	Chip Selects	Output
	NWE0-NWE1	Byte Select/Write Enable	Output
	NSOE	Output Enable	Output
	NWR	Memory Block Write Enable	Output
PIO Controller A	PA0-PA12, PA19, PA22	PIO Controller A I/O Lines	Input/Output
PIO Controller B	PB0-PB9	PIO Controller B I/O Lines	Input/Output
	TCLK0-TCLK2	Timer Counter Clock 0 to 2	Input
Timer Counter	TIOA0-TIOA2	Timer Counter I/O Line A 0 to 2	Input/Output
	TIOB0-TIOA2	Timer Counter I/O Line B 0 to 2	Input/Output
	MISO	Master In/Slave Out	Input/Output
	MOSI	Master Out/Slave In	Input/Output
Serial Peripheral Interface	SPCK	Serial Clock	Input/Output
	NPCS0/NSS	Peripheral Chip Select 0/Slave Select	Input/Output
	NPCS1-NPCS3	Peripheral Chip Select 1 to 3	Output





Table 5-1. Signal Description (Continued)

Block	Signal Name	Function	Туре
	RXDA-RXDB	Receive Data	Input
	TXDA-TXDB	Transmit Data	Output
	NRTSA-NRSTB	Ready to Send	Output
	NCTSA-NCTSB	Clear to Send	Input
UART A and UART B	NDTRA-NDTRB	Data Terminal Ready	Output
	NDSRA-NDSRB	Data Set Ready	Input
	NDCDA-NDCDB	Data Carrier Detect	Input
	NRIA-NRIB	Ring Indicator	Input
	SCKA	UART Serial Clock	I/O
	MA_COL	MAC A Collision Detect	Input
	MA_CRS	MAC A Carrier Sense	Input
	MA_TXER	MAC A Transmit Error	Output
	MA_TXD0-MA_TXD3	MAC A Transmit Data Bus	Output
	MA_TXEN	MAC A Transmit Enable	Output
	MA_TXCLK	MAC A Transmit Clock	Input
MAC A Interface	MA_RXD0-MA_RXD3	MAC A Receive Data Bus	Input
	MA_RXER	MAC A Receive Error	Input
	MA_RXCLK	MAC A Receive Clock	Input
	MA_RXDV	MAC A Receive Data Valid	Output
	MA_MDC	MAC A Management Data Clock	Output
	MA_MDIO	MAC A Management Data Bus	Input/Output
	MA_LINK	MAC A Link Interrupt	Input
	MB_COL	MAC B Collision Detect	Input
	MB_CRS	MAC B Carrier Sense	Input
	MB_TXER	MAC B Transmit Error	Output
	MB_TXD0-MB_TXD3	MAC B Transmit Data Bus	Output
	MB_TXEN	MAC B Transmit Enable	Output
	MB_TXCLK	MAC B Transmit Clock	Input
MAC B Interface	MB_RXD0-MB_RXD3	MAC B Receive Data Bus	Input
	MB_RXER	MAC B Receive Error	Input
	MB_RXCLK	MAC B Receive Clock	Input
	MB_RXDV	MAC B Receive Data Valid	Output
	MB_MDC	MAC B Management Data Clock	Output
	MB_MDIO	MAC B Management Data Bus	Input/Output
	MB_LINK	MAC B Link Interrupt	Input

AT91C140

8

Table 5-1. Signal Description (Continued)

Block	Signal Name	Function	Туре
	NTRST	Test Reset	Input
	ТСК	Test Clock	Input
In-Circuit Emulator	TMS	Test Mode Select	Input
	TDI	Test Data Input	Input
	TDO	Test Data Output	Output
	NRST	Reset	Input
	FIQ	Fast Interrupt	Input
	IRQ0-IRQ1	Interrupt Lines	Input
Minnellenneuro	PLLRC	PLL RC Filter	Analog
Miscellaneous	XTALIN	Crystal Input	Analog
	XTALOUT	External Crystal	Analog
	TST	Test Mode	Input
	ACLKO	ARM Clock Output	Output





6. ARM7TDMI Core

The ARM7TDMI is a three-stage pipeline, 32-bit RISC processor. The processor architecture is Von Neumann load/store architecture, characterized by a single data and address bus for instructions and data. The CPU has two instruction sets: the ARM and the Thumb instruction set. The ARM instruction set has 32-bit wide instructions and provides maximum performance. Thumb instructions are 16-bit wide and give maximum code density.

Instructions operate on 8-bit, 16-bit and 32-bit data types.

The CPU has seven operating modes. Each operating mode has dedicated banked registers for fast exception handling. The processor has a total of 37 32-bit registers, including six status registers.

7. Power Supplies

The AT91C140 has three types of power supply pins:

- VDDCORE pins power the core, including the ARM7TDMI processor, the memories and the peripherals; voltage is between 1.65V and 1.95V, 1.8V nominal.
- VDDIO pins power the I/O lines, including those of the External Bus Interface and those of the peripherals; voltage is between 3V and 3.6V, 3.3V nominal.
- VDDOSC pins power the PLL and oscillator cells; voltage is between 1.65V and 1.95V, 1.8V nominal.

Ground pins are common to all power supplies.

10 AT91C140

8. System Controller

The AT91C140 features a System Controller that takes care of and controls:

- the Test Mode
- the Reset
- the System Clocks
- the Chip Identifier

The System Controller manages the reset of all the system and integrates a clock generator, made up of an oscillator and a PLL.

8.1 Test

The AT91C140 features a test pin (TST). This pin must be tied low for normal operations. Using the AT91C140 with the TST pin at a high level might lead to unpredictable results.

8.2 Reset Controller

8.2.1 NRST Pin

The AT91C140 is reset by asserting the NRST pin low. It should be asserted for a time adequate to ensure the startup of the oscillator on a power on, and at least 1 ACLK cycle for a warm reset. As the ACLK switches on the 31,25kHz (assuming the crystal is at 16 MHz) as soon as the reset is asserted, it must remain low for at least 32 μ s. The first instruction fetch happens 10 ACLK cycles after the reset releases.

8.2.2 System Reset

A reset initializes the user interface registers to their default states as defined in the peripheral sections of this datasheet and forces the ARM7TDMI to perform the next instruction fetch from address zero. Except for the program counter and the Current Program Status Register, the ARM processor registers do not have defined reset states. When NRST is active, the inputs of the AT91C140 must be held at valid logic levels to reduce the power consumption to a minimum.

8.2.3 Boot Memory and Remap Command

When NRST is released, the PA0 pin is sampled to determine if the ARM processor should boot from internal ROM or from external memory connected to NCE0. The details of the boot operations are described in "Memory Controller (MC)" on page 16. The Boot Program is described in "Boot Program" on page 24.

After a reset, the RM bit in the Mode Register reflects the state of the PA0 pin. Then, writing this bit at 1 removes the ROM from the address 0. Writing it at 0 remaps the ROM at address 0x0.

8.3 Clock Generator

The AT91C140 features a Clock Generator based on a 16 MHz oscillator and a PLL. It provides all the clocks of the system, including a clock signal named ACLK, to the ARM processor, to the memory controller and to the External Bus Interface and to all the embedded peripherals


The ACLK signal is also provided on the ACLKO pin, through PIO Controller A.

Figure 8-1 below shows the architecture of the Clock Generator.





Figure 8-1. Clock Generator

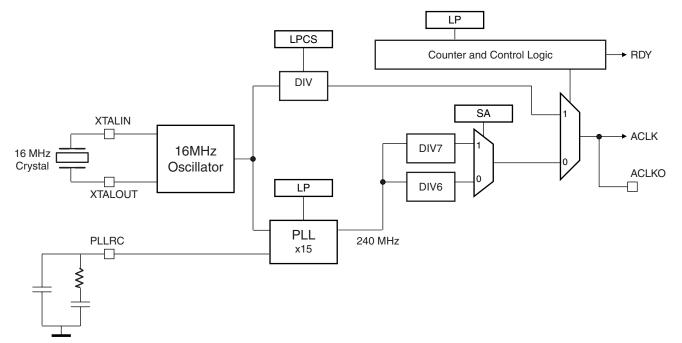

After the reset, the ACLK clock is running at 31.25 kHz. The user can program the LPCS field to speed the boot sequence.

The ACLKST (ARM Clock Status) bit reflects the clock being used for the ARM. When read at 0, ACLK is 40 MHz if SA is 0 and 34.3 MHz if SA is 1. When read at 1, ACLK is at a frequency according to the value programmed in the LPCS field in the System Mode Register (SYS_MR).

8.4 Chip ID

The System Controller features a Chip ID Register that reads a value of 0x00010221

12 **AT91C140**

8.5 System Controller User Interface

Base Address: 0xFF00 0000.

Table 0-1. System Controller negister Mapping	Table 8-1.	System Controller Register Mapping
---	------------	------------------------------------

Offset	Register Name	Register Description	Access	Reset Value
0x0	SYS_MD	System Mode Register	Read/Write	0x0000 034x
0x4	SYS_ID	System ID Register	Read-only	0x0001 0221
0x8	Reserved			
0xC	SYS_CLKF	System Clock Status Register	Read-only	0x0000001





8.5.1 System Mode Register

Register Name: Access:	SYS_MI Read/W						
31	31 30		28	27	26	25	24
-	_	-	-	-	-	_	-
23	22	21	20	19	18	17	16
-	-	-	-	-	-	-	-
15	14	13	12	11	10	9	8
-	0	_	0	-	-	LF	PCS
7	6	5	4	3	2	1	0
SA	LP	-	-	0	-	0	RM

• RM: Remap

0 =The ROM is mapped only at its normal address.

1 =The ROM is mapped at its address and at address 0x0.

• LP: Low Power Mode

0 =The PLL is enabled and ACLK is the output of the PLL divided by 6 or 7.

1 =The PLL is disabled and ACLK is defined by LPCS.

• SA: Slow ARM

0 = The ARM divider is 6.

1 =The ARM divider is 7.

• LPCS: Low Power Clock Select

LP	CS	Divisor	ACLK				
0	0	2	8 MHz				
0	1 16		1 MHz				
1	0	64	250 kHz				
1	1	512	31,25 kHz				

8.5.2 System ID Register

Register Name: Access:	SYS_ID Read-on	ly						
31	30	29	28	27	26	25	24	
0	0	0	0	0	0	0	0	
23	22	21	20	19	18	17	16	
0	0	0	0	0	0	0	1	
15	14	13	12	11	10	9	8	
0	0	0	0	0	0	1	0	
7	6	5	4	3	2	1	0	
			0	0	0	0	1	

8.5.3 System Clock Status Register

Register Name:SYS_CLKFAccess:Read-only

31	30	29	28	27	26	25	24		
-	-	-	-	-	-	-	-		
23	22	21	20	19	18	17	16		
-	-	-	-	-	-	-	-		
15	14	13	12	11	10	9	8		
-	-	-	-	-	-	-	-		
7	6	5	4	3	2	1	0		
-	-	_	-	-	-	-	ACLKST		

• ACLKST: ARM Clock Status

0 = ARM Clock currently using the 240 MHz source (PLL).

1 = ARM Clock currently using the 16 MHz source (oscillator).





9. Memory Controller (MC)

9.1 Architecture

The AT91C140 architecture is made up of two Advanced System Buses, the ARM ASB and the MAC ASB. Both handle a single memory space.


The ARM ASB handles the access requests of the ARM7TDMI and the PDC. It also handles the access requests coming from the MAC ASB. It connects with the External Bus Interface, the Peripheral Bridge and the Internal Memories. It also connects with the MAC ASB.

The MAC ASB handles the access requests of the DMAs of both Ethernet MACs. It also handles the access requests coming from the the ARM ASB. It connects essentially with the Frame Buffer, but also connects with the ARM ASB.

The major advantage of this double-ASB architecture is that the Ethernet traffic does not occupy the main ASB bandwidth, ensuring that the ARM7TDMI can perform at its maximum speed while the Ethernet traffic goes through the Frame Buffer.

The AT91C140 architecture is shown in Figure 9-1.



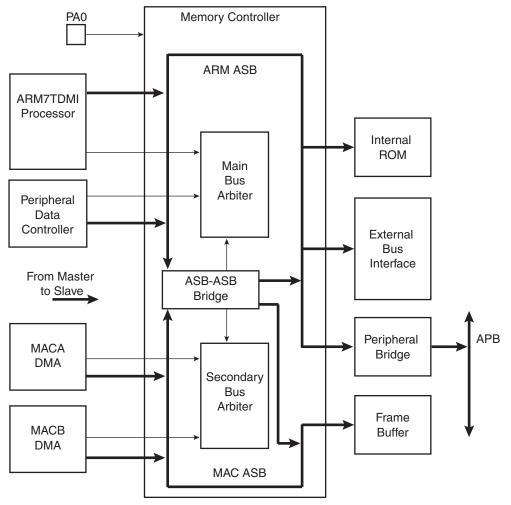

AT91C140

16

9.2 Memory Map

The AT91C140 memory map is divided into regions of 256 megabytes. The top memory region (0xF000_0000) is reserved and subdivided for the internal memories and shared memory and the embedded peripherals.

The device can define up to five other active external memory regions by means of the static memory controller and SDRAM memory controller.

The memory map is divided between both ASBs, as shown in Figure 9-1. All regions except the 16 megabytes between 0xFC00 0000 and 0xFCFF FFFF are located on the Main ASB. Accesses to locations between 0xFC00 0000 and 0xFCFF FFFF are routed to the MAC ASB.

The memory map assumes default values on reset. External memory regions can be reprogrammed to other base addresses in the Static Memory Controller or in the SDRAM Controller. Note that the internal memory regions have fixed locations that cannot be reprogrammed.

There are no hardware locks to prevent incorrect programming of the regions. Programming two or more regions to have the same base address or overlapping two memory regions results in undefined behavior.

The ARM processor reset vector at address 0x00000000 is mapped into the internal ROM or external memory connected on NCE0. This selection depends on the PA0 signal pin. After booting, the ROM region can be disabled and any external memory can be mapped to the bottom of the memory map by programming SMC_CSRx or SDRAMC_ADDR.

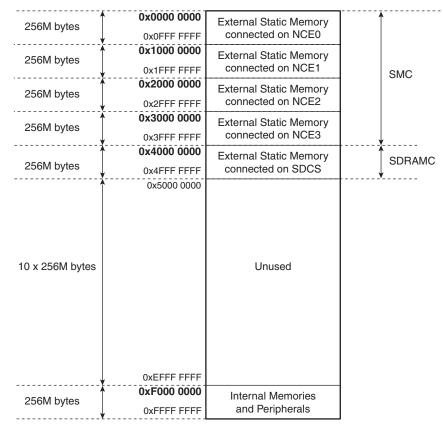


Figure 9-2. AT91C140 Memory Map





Figure 9-3 below shows the mapping of the internal memories and the address space reserved for the Peripheral Bridge.



			Actual Size
144M bytes	0xFF00 0000	Reserved	
144IVI Dytes	0xF8FF FFFF	neserveu	
1CM butoo	0xF900 0000	ROM	1K buto
16M bytes	0xF9FF FFFF	nOlvi	1K byte
	0xFA00 0000	Deserved	
16M bytes	0xFAFF FFFF	Reserved	512 bytes
	0xFB00 0000	Description	
16M bytes	0xFBFF FFFF	Reserved	
	0xFC00 0000		
16M bytes	0xFCFF FFFF	Frame Buffer	16K bytes
· · · · · · · · · · · · · · · · · · ·	0xFD00 0000	Description	O dlC hadaa
16M bytes	0xFDFF FFFF	Reserved	64K bytes
	0xFD00 0000		
16M bytes	0xEFFF FFFF	Unused	
	0xFF00 0000	Deviate evelo	
16M bytes	0xFFFF FFFF	Peripherals	
16M bytes	0xFD00 0000 0xEFFF FFFF 0xFF00 0000	Unused	Unit bytes

9.3 ARM ASB Arbitration

The ARM ASB is arbitrated with the following priorities:

- The PDC has the highest priority.
- The Bridge from the MAC ASB has the middle priority.
- The ARM processor has the lowest priority.

9.4 MAC ASB Arbitration

The MAC ASB is arbitrated with the following priorities:

• The Bridge from the ARM ASB has the highest priority.

www.BDTIC.com/ATMEL

- The MAC A has the middle priority.
- The MAC B has the lowest priority.

9.5 ASB-ASB Bridge Arbitration

The MAC ASB has two priority levels; the two MACs share low priority access and the ASB-ASB Bridge has high priority. The MACs do not burst more than four words per access and release the bus request between accesses so the MACs share a priority level with a simple round-robin arbitration scheme.

The ARM is likely to be the only master accessing the MAC bus via the bridge and should not perform more than a couple of cycles before releasing the MAC bus. Care should be taken to prevent other masters on the ARM bus holding the MAC bus for more than a few cycles. Otherwise, the MACs drop frames due to FIFO overflow or underflow.

When a master on one bus accesses a slave on the other bus, the following operations occur:

18 AT91C140

- The local bus arbiter arbitrates the master's request for the local ASB bus if it does not already have access to the bus.
- When the local bus arbiter grants the local bus to the master, the master initiates a cycle with an address corresponding to a slave on the remote bus.
- The bridge is selected as the slave on the local bus and responds by inserting wait cycles. The bridge also requests the remote bus from the remote bus arbiter.
- When the bridge is granted the remote bus, the two ASB buses are coupled and the transfer completes.

The ASB performs pipelined arbitration. The ASB-ASB Bridge can only request the bus when the address of the slave is available. For this reason, the ASB-ASB Bridge inserts a wait cycle during the arbitration cycle on the remote bus because it cannot request the bus early.

9.6 Boot Mode

The AT91C140 has an integrated 1-Kbyte ROM to support the boot software. When the device is released from reset, the pin PA0 is sampled by the Memory Controller. If sampled low, the internal ROM becomes accessible from the address 0x0, so that the ARM processor starts execution of the Boot Program. Note that the ROM remains accessible at its normal address. If the pin PA0 is sampled high at reset, the mapping does not change and the external memory connected on NCE0 should contain a valid boot sequence.

The level of the pin PA0 at resets is indicated by the RM flag in the System Mode Register (SYS_MD). Then, the RM bit can be written at any value to map to or remove the ROM from address 0x0.

If PA0 is asserted on reset, the Boot Program in ROM is executed. The Boot Program is described in "Boot Program" on page 24.

Figure 9-4 below shows the mapping of the ROM depending on the Boot Mode.

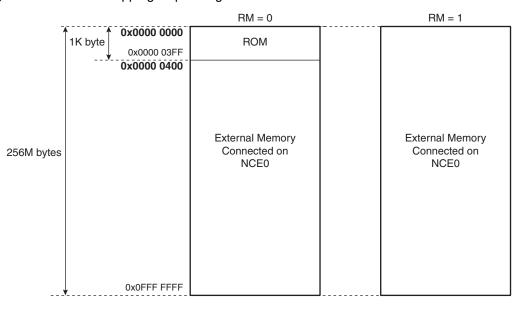


Figure 9-4. ROM Mapping Depending on the Boot Mode





9.7 Endianness

The AT91C140 Memory Controller operates in little-endian mode only. The user has to make sure that the data structures used by the ARM7TDMI, the Ethernet DMAs and the PDC are compliant with this mode of byte arrangement.

20 AT91C140

10. Peripherals

The Peripheral Bridge allows access to the embedded peripheral user interfaces. It is optimized for low power consumption, as it is built without usage of any clock. However, any access on the peripheral is performed in two cycles.

The AT91C140 peripherals are designed to be programmed with a minimum number of instructions. Each peripheral has 16K bytes of address space allocated in the upper part of the address space.

10.1 Peripheral Registers

All of the peripheral registers are 32-bits wide and support only aligned accesses. When a misaligned access is performed within the peripheral address space, the access is automatically performed at the lower aligned address.

All undefined or unused register bits (marked "-") read 0. It is recommended to write them at 0 for software upward compatibility.





10.2 Peripheral Memory Map

Figure 10-1 below gives the mapping of the peripherals integrated in the AT91C140.

Figure 10-1. Peripheral Memory Map

		Peripheral Name	Size
0xFF00 0000	SYSC	System Controller	16K bytes
0xFF00 3FFF 0xFF00 4000	SMC	Static Memory Controller	16K bytes
0xFF00 7FFF 0xFF00 8000	SDRAMC	SDRAM Controller	16K bytes
0xFF00 BFFF 0xFF00 C000	PIOA	Parallel I/O Controller A	16K bytes
0xFF00 FFFF 0xFF01 0000	PIOB	Parallel I/O Controller B	16K bytes
0xFF01 3FFF 0xFF01 4000	TC0, TC1, TC2	Timer Counter Channel 0, 1 and 2	16K bytes
0xFF01 7FFF 0xFF01 8000	UART A	Universal Asynchronous Receiver Transmitter A	16K bytes
0xFF01 BFFF 0xFF01 C000	UART B	Universal Asynchronous Receiver Transmitter B	16K bytes
0xFF01 FFFF 0xFF02 0000	SPI	Serial Peripheral Interface	16K bytes
0xFF02 3FFF 0xFF02 4000	Reserved		
0xFF02 FFFF		Í	
0xFF03 0000	AIC	Advanced Interrupt Controller	16K bytes
0xFF03 3FFF 0xFF03 4000 0xFF03 7FFF	MACA	Ethernet MAC A	16K bytes
0xFF03 8000 0xFF03 BFFF	МАСВ	Ethernet MAC B	16K bytes AIC is mapped at both
0xFF03 C000	Reserved	- 	addresses
OXFFFF EFFF OxFFFF F000	AIC	Advanced Interrupt Controller	16K bytes —
0xFFFF FFFF		1	

22 AT91C140

11. Peripheral Data Controller (PDC)

11.1 PDC Overview

The AT91C140 features a six-channel Peripheral Data Controller (PDC) dedicated to the two on-chip UARTs and the SPI. One PDC channel is connected to the receiving channel and one to the transmitting channel of each UART and of the SPI.

Each PDC channel operates as DMA (Direct Memory Access).

The User Interface of a PDC channel is integrated in the memory space of each peripheral. It contains a 32-bit address pointer register and a 16-bit count register. When the programmed number of bytes is transferred, an end-of-transfer signal is sent to the peripheral and is visible in the peripheral status register. This status bit might trigger an interrupt.

11.2 PDC Channel Priority

The transfer requests from the peripherals are treated in the order they happen.

When several transfer requests happen in the same cycle, the following priority order is applied:

- the UART A receiver
- the UART A transmitter
- the UART B receiver
- the UART B transmitter
- the SPI receiver
- the SPI transmitter





12. Boot Program

The AT91C140 can boot in several ways as explained below. When the ARM7TDMI processor is released from reset it basically attempts a fetch from address 0x00000000. Depending on an hardware configuration, the memory mapping can be altered and thus modify how the system boots.

12.1 Boot Mode

When the master reset is released, the pin PA0 is latched. Its state defines how the system boots. When PA0 is latched at 1, the AT91C140 is said to be configured in external boot mode. The initial state of the EBI maps the 1-Mbyte address range starting from 0x00000000 in the external device selected by NCE0. In this boot mode, NCE0 is assumed to be connected to an external memory device containing the suitable boot code.

When PA0 is latched at 0, the AT91C140 is said to be configured in internal boot mode. The internal boot ROM normally located at base address 0xf9000000 is aliased at address 0x000000000. In this boot mode, the ARM Processor executes the first instructions out of the internal boot ROM.

The boot mode is reflected by the RM bit in register SYS_MD. Reading RM at 0 indicates that the boot ROM is aliased at base address 0x00000000, eventually overlapping the memory layout defined by the SMC and the SDRAMC registers. Reading RM at 1 indicates that the boot ROM can be accessed only from base address 0xf9000000. Writing RM allows to select the mapping of the boot ROM under software control.

12.2 Hardware Connection of the DataFlash

The internal boot software provides the AT91C140 with the capability of booting from an external serial DataFlash connected on the on-chip SPI interface as described above.

When the internal boot software is used in conjunction with DataFlash, the latter must be connected to the AT91C140 as shown below in Figure 12-1.

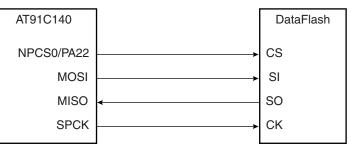


Figure 12-1. DataFlash Connection

12.3 Internal Boot Software

The internal boot code goes through the following steps in sequence:

- The processor enters the supervisor mode and all the interrupts are masked.
- A branch is executed into the ROM alias based from 0xf9000000.
- The ROM alias based at 0x00000000 is removed by writing the RM bit at 1.
- The clock is programmed at the highest frequency achievable without using the on-chip PLL (i.e. the frequency of the crystal divided by 2).
- ²⁴ AT91C140

- The on-chip SPI interface is setup to prepare for communications with DataFlash.
- A bunch of data is downloaded from the DataFlash. This data is expected to contain a formatted header describing the contents of the DataFlash.
- This header is analyzed to verify whether a DataFlash is actually present and contains valid executable code.
- If the DataFlash is there and contains valid executable code, this code is downloaded into a location specified by the header, and an absolute branch to this code is performed.
- If the DataFlash is missing, or if the header is not valid, an absolute branch to address 0x00000000 is performed. A suitable memory device should be mapped at this address and contain the expected code.

12.4 DataFlash Header Details

To ensure correct operation of the boot out of DataFlash, the DataFlash must contain a valid header. This header contains several fields which define how the application software residing further must be handled. The structure of the DataFlash header is illustrated below in Table 12-1.

Field Address	Field Name	Field Length
0x00 ⁽¹⁾	MAGIC	4 bytes
0x04	DSRC	4 bytes
0x08	DDST	4 bytes
0x0c	DSIZE	4 bytes
0x10	ENTRY	4 bytes

Table 12-1. Header Structure

Note: 1. The field address is respective to the DataFlash space. 0x00 corresponds to the first location of the DataFlash.

The MAGIC field contains a predefined magic number which allows identification of the suitability of the DataFlash. The value of this field must be 0x0075C221 to allow the boot routine to proceed. If another value is read, the boot code gives up the download and branches to 0x0000 0000 where the real application code is expected.

The DSRC field contains the address where the code to be downloaded resides in DataFlash. This address is respective to the DataFlash address space (**not** the ARM Processor address space) and follows the non-linear addressing scheme defined in the documentation of the DataFlash. Note that all bits are not necessarily significant, depending on the specific DataFlash device.

The DDST field contains the destination address where the downloaded code will be copied. This address is respective to the ARM Processor address space. Typically, this address should point into some internal RAM.

The DSIZE field contains the number of bytes to be downloaded. This value is exclusive of the header. It must be even.

The ENTRY field contains the address where the boot routine must branch when the download is complete. It is the entry point of the newly downloaded software. Although this is not required, the ENTRY field equals the DDST field in most cases.





12.5 Reserved Resources

The internal boot code needs some resources to operate correctly, especially as it programs some on-chip peripherals. These must not be assumed to be in their reset state when the control is given to the application code. The concerned peripherals are:

- the clock management system
- the SPI interface
- the PIO pin PA22
- the RM bit

The internal boot code also uses some internal RAM locations to store temporary data. These reside in the first 64 bytes of RAM, i.e. from 0xFD00 FFC0 to 0xFD00 FFFF. The DDST, DSIZE fields of the DataFlash header must not define a memory area overlapping the locations used by the internal boot routine. The ENTRY field must not point into this area.

13. External Bus Interface (EBI)

The External Bus Interface (EBI) generates the signals that control access to external memories or peripheral devices. It contains two controllers, the SDRAM Controller and the Static Memory Controller and manages the sharing of data and address busses between both of these controllers.

13.1 Signal Multiplexing

Table 13-1.	Signal Description and	Multiplexing
-------------	------------------------	--------------

Name	Description	Controlled by SMC	Controlled by SDRAMC
[D15:0]	Data Bus	[D15:0]	[D15:0]
[A9:0]	Address Lines 0 to 9	[A9:0]	[A9:0]
A10	Address Line 10	A10	
SDA10	SDRAM Controller Address Line 10		A10
[A12:11]	Address Lines 11 to 12	[A12:11]	[A12:11]
[A18:13]	Address Lines 13 to 18	[A18:13]	
A19/BA0	Address Line 19 or Bank Address 0	A19	BA0
A20/BA1	Address Line 20 or Bank Address 1	A20	BA1
[A23:21]	Address Lines 21 to 23	[A23:21]	
SDCK	SDRAM Clock		SDCK
SDCS	SDRAM Controller Chip Select		SDCS
RAS	SDRAM Row Signal		RAS
CAS	SDRAM Column Signal		CAS
WE	SDRAM Write Enable		WE
DQM0-DQM1	SDRAM Data Mask Enable Signals		DQM0-DQM1
NCE0-NCE3	Active low chip enable	NCE0-NCE3	
NWE0-NWE1	Active low byte select/write strobe signals	NWE0-NWE1	
NWR	Active low write strobe signals	NWR	
NSOE	Active low read enable signal	NSOE	





14. SDRAM Controller (SDRAMC)

14.1 Description

The SDRAM Controller (SDRAMC) extends the memory capabilities of a chip by providing the interface to an external 16-bit SDRAM device. The page size supports ranges from 2048 to 8192 and the number of columns from 256 to 2048. It supports byte (8-bit), half-word (16-bit) and word (32-bit) accesses. The maximum addressable SDRAM size is 256M bytes.

The SDRAM Controller supports a read or write burst length of one location. It keeps track of the active row in each bank, thus maximizing SDRAM performance, e.g., the application may be placed in one bank and data in the other banks. So as to optimize performance, it is advisable to avoid accessing different rows in the same bank.

14.2 Block Diagram

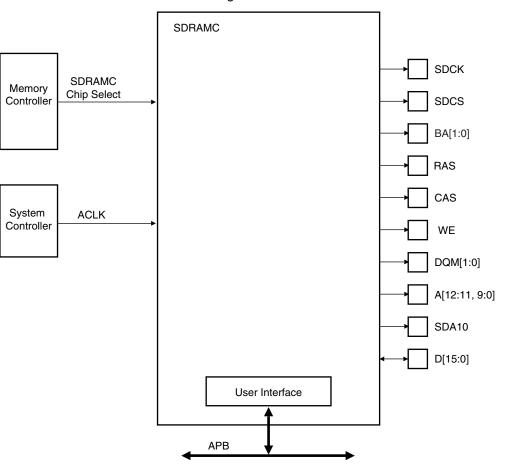


Figure 14-1. SDRAM Controller Block Diagram

28 AT91C140

14.3 I/O Lines Description


Table 14-1.I/O Line Description


Name	Description	Туре	Active Level
SDCK	SDRAM Clock	Output	
SDCS	SDRAM Controller Chip Select	Output	Low
BA[1:0]	Bank Select Signals	Output	High
RAS	Row Signal	Output	Low
CAS	Column Signal	Output	Low
WE	SDRAM Write Enable	Output	Low
DQM[1:0]	Data Mask Enable Signals	Output	Low
A [12:11] SDA10 A[9:0]	Address Bus	Output	
D[15:0]	Data Bus	I/O	

14.4 Application Example

14.4.1 Hardware Interface

Figure 14-2 shows an example of an SDRAM device connection by using a 16-bit data bus width.

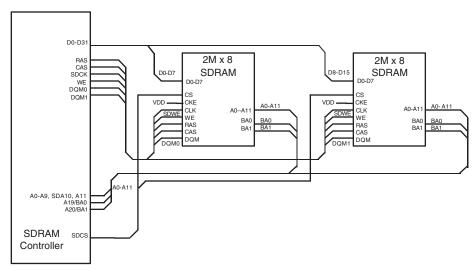



14.4.2 Software Interface

The SDRAM Controller's function is to make the SDRAM device access protocol transparent to the user. Table 14-2 to Table 14-4 illustrate the SDRAM device memory mapping therefore seen by the user in correlation with the device structure. Various configurations are illustrated.





16-bit Memory Data Bus Width

Table 14-2. SDRAM Configuration Mapping: 2K Rows, 256/512/1024/2048 Columns

	CPU Address Line																										
27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
						Bk[1:0]		Row[10:0]								Column[7:0]						M0				
					Bk[1:0]			Row[10:0]							Column[8:0]								M0			
				Bk[1:0]				Row[10:0]											Colun	nn[9:0]					M0	

Table 14-3. SDRAM Configuration Mapping: 4K Rows, 256/512/1024/2048 Columns

	CPU Address Line																										
27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
					Bk[1:0]		Row[11:0]							Column[7:0]							M0					
				Bk[Bk[1:0] Row[11:0]								Column[8:0]									M0					

Table 14-4. SDRAM Configuration Mapping: 8K Rows, 256/512/1024/2048 Columns

	CPU Address Line																										
27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
				Bk[1:0]	Row[12:0] Column[7:0]									M0												

14.5 SDRAM Device Initialization


The initialization sequence is generated by software. The SDRAM devices are initialized by the following sequence:

- 1. A minimum pause of 200 µs is provided to precede any signal toggle.
- 2. An All Banks Precharge command is issued to the SDRAM devices.
- 3. Eight auto-refresh (CBR) cycles are provided.
- 4. A mode register set (MRS) cycle is issued to program the parameters of the SDRAM devices, in particular CAS latency and burst length.
- 5. A Normal Mode command is provided, 3 clocks after t_{MRD} is met.
- 6. Perform a dummy access in the SDRAM Memory Space to initialize the state machine.
- 7. Write refresh rate into the count field in the SDRAMC Refresh Timer register. (Refresh rate = delay between refresh cycles).

After these six steps, the SDRAM devices are fully functional.

The commands (NOP, MRS, CBR, normal mode) are generated by programming the command field in the SDRAMC Mode register.



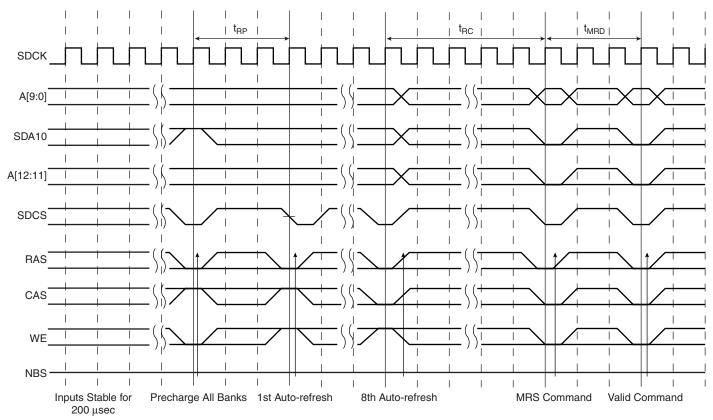





14.6 SDRAM Controller Write Cycle

The SDRAM Controller allows burst access or single access. To initiate a burst access, the SDRAM Controller uses the transfer type signal provided by the master requesting the access. If the next access is a sequential write access, writing to the SDRAM device is carried out. If the next access is a write-sequential access, but the current access is to a boundary page, or if the next access is in another row, then the SDRAM Controller generates a precharge command, activates the new row and initiates a write command. To comply with SDRAM timing parameters, additional clock cycles are inserted between precharge/active (t_{RP}) commands and active/write (t_{RCD}) commands. For a definition of these timing parameters, refer to the "SDRAMC Configuration Register" on page 39. This is described in Figure 14-4 below.

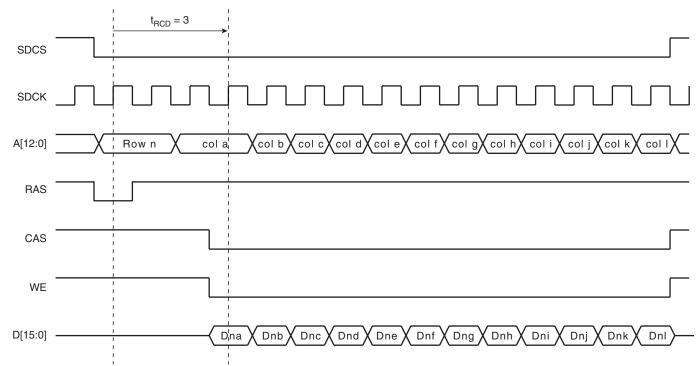


Figure 14-4. Write Burst, 16-bit SDRAM Access

32 AT91C140

14.7 SDRAM Controller Read Cycle

The SDRAM Controller allows burst access or single access. To initiate a burst access, the SDRAM Controller uses the transfer type signal provided by the master requesting the access. If the next access is a sequential read access, reading to the SDRAM device is carried out. If the next access is a sequential read access, but the current access is to a boundary page, or if the next access is in another row, then the SDRAM Controller generates a precharge command, activates the new row and initiates a read command. To comply with SDRAM timing parameters, an additional clock cycle is inserted between the precharge/active (t_{RP}) command and the active/read (t_{RCD}) command, After a read command, additional wait states are generated to comply with cas latency. The SDRAM Controller supports a cas latency of two. For definition of these timing parameters, refer to "SDRAMC Configuration Register" on page 39. This is described in Figure 14-5 below.

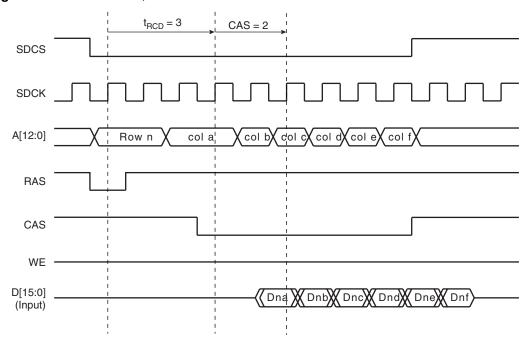



Figure 14-5. Read Burst, 16-bit SDRAM access






14.8 Border Management

When the memory row boundary has been reached, an automatic page break is inserted. In this case, the SDRAM controller generates a precharge command, activates the new row and initiates a read or write command. To comply with SDRAM timing parameters, an additional clock cycle is inserted between the precharge/active ($t_{\rm RP}$) command and the active/read ($t_{\rm RCD}$) command. This is described in Figure 14-6 below.



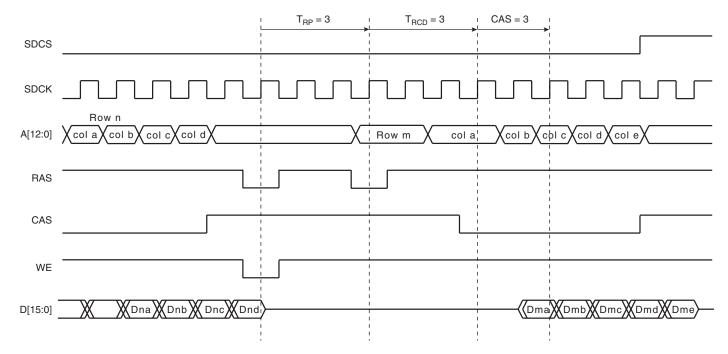

34 **AT91C140**

14.9 SDRAM Controller Refresh Cycles

An auto-refresh command is used to refresh the SDRAM device. Refresh addresses are generated internally by the SDRAM device and incremented after each auto-refresh automatically. The SDRAM Controller generates these auto-refresh commands periodically. A timer is loaded with the value in the register SDRAMC_TR that indicates the number of clock cycles between refresh cycles.

When the SDRAM Controller initiates a refresh of the SDRAM device, internal memory accesses are not delayed. However, if the ARM tries to access the SDRAM, it is held until the refresh cycle has completed. See Figure 14-7 below.

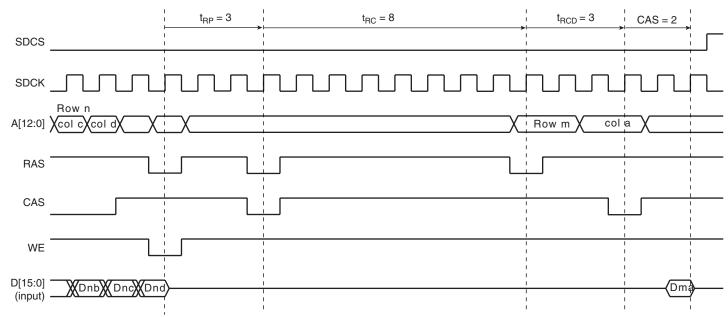


Figure 14-7. Refresh Cycle Followed by a Read Access





14.10 SDRAM User Interface

Base Address: 0xFF00 8000

Table 14-5. S	DRAM Controller Register Mapping
---------------	----------------------------------

Offset	Register Name	Register Description	Access	Reset State
0x00	SDRAMC_MR	SDRAMC Mode Register	Read/Write	0x0000000
0x04	SDRAMC_TR	SDRAMC Refresh Timer Register	Read/Write	0x0000800
0x08	SDRAMC_CR	SDRAMC Configuration Register	Read/Write	0x0299C140
0x0C	SDRAM_16BIT	SDRAM 16-bit configuration	Read/Write	0x0000001
0x10	SDRAMC_ADDR	Base address for SDCS	Read/Write	0x0000040

36

AT91C140

14.10.1 SDRAMC Mode Register

Register Name Access Type: Reset Value:	: SDRAM Read/W 0x00000	C_MR rite					
31	30	29	28	27	26	25	24
-	_	-	-	-	-	-	-
23	22	21	20	19	18	17	16
-	—	—	—	-	-	—	-
15	14	13	12	11	10	9	8
-	-	-	-	-	—	-	MODE
7	6	5	4	3	2	1	0
MOL	DE	_	_	_	_	_	-

• MODE: SDRAMC Command Mode

This field defines the command issued by the SDRAM Controller when the SDRAM device is accessed.

MODE Description			Description
0	0	0	Normal mode. Any access to the SDRAM is decoded normally.
0	0	1	The SDRAM Controller issues a NOP command when the SDRAM device is accessed regardless of the cycle.
0	1	0	The SDRAM Controller issues an "All Banks Precharge" command when the SDRAM device is accessed regardless of the cycle.
0	1	1	The SDRAM Controller issues a "Load Mode Register" command when the SDRAM device is accessed regardless of the cycle. The address offset with respect to the SDRAM device base address is used to program the Mode Register. For instance, when this mode is activated, an access to the "SDRAM_Base + offset" address generates a "Load Mode Register" command with the value "offset" written to the SDRAM device Mode Register.
1	0	0	The SDRAM Controller issues a "Refresh" Command when the SDRAM device is accessed regardless of the cycle. Prior to this, an "All Banks Precharge" command must be issued.
	Others	•	Reserved



Register Name Access Type: Reset Value:	: SDRAM Read/W 0x00000	rite					
31	30	29	28	27	26	25	24
-	_	-	-	-	-	-	-
23	22	21	20	19	18	17	16
-	_	—	-	-	—	_	-
15	14	13	12	11	10	9	8
-	_	-	-	COUNT			
7	6	5	4	3	2	1	0
	COUNT						

14.10.2 SDRAMC Refresh Timer Register

COUNT: SDRAMC Refresh Timer Count

This 12-bit field is loaded into a timer that generates the refresh pulse. Each time the refresh pulse is generated, a refresh burst is initiated. The value to be loaded depends on the SDRAMC clock frequency (MCK: Master Clock), the refresh rate of the SDRAM device and the refresh burst length where 15.6 µs per row is a typical value for a burst of one length.

To refresh the SDRAM device even if the reset value is not equal to 0, this 12-bit field must be written. If this condition is not satisfied, no refresh command is issued and no refresh of the SDRAM device is carried out.

AT91C140

38

14.10.3 SDRAMC Configuration Register

Register Name Access Type: Reset Value:	: SDRAM Read/W 0x0299C	/rite					
31	30	29	28	27	26	25	24
-	—	-	-	-		TRAS	
23	22	21	20	19	18	17	16
TRAS		TF	RCD		TRP		
15	14	13	12	11	10	9	8
TRP		Т	RC			TWR	
7	6	5	4	3	2	1	0
TWR	1	0	NB	N	R	N	С

• NC: Number of Column Bits

Reset value is 8 column bits.

Ν	Column Bits	
0	0	8
0	1	9
1	0	10
1	1	11

• NR: Number of Row Bits

Reset value is 11 row bits.

Ν	R	Row Bits
0	0	11
0	1	12
1	0	13
1	1	Reserved

• NB: Number of Banks

Reset value is two banks.

NB	Number of Banks
0	2
1	4

• TWR: Write Recovery Delay

Reset value is two cycles.

This field defines the Write Recovery Time in number of cycles. Number of cycles is between 2 and 15.

If TWR is less than or equal to 2, two clock periods are inserted by default.





• TRC: Row Cycle Delay

Reset value is eight cycles.

This field defines the delay between a Refresh and an Activate Command in number of cycles. Number of cycles is between 2 and 15.

If TRC is less than or equal to 2, two clock periods are inserted by default.

• TRP: Row Precharge Delay

Reset value is three cycles.

This field defines the delay between a Precharge Command and another Command in number of cycles. Number of cycles is between 2 and 15.

If TRP is less than or equal to 2, two clock periods are inserted by default.

• TRCD: Row to Column Delay

Reset value is three cycles.

This field defines the delay between an Activate Command and a Read/Write Command in number of cycles. Number of cycles is between 2 and 15.

If TRCD is less than or equal to 2, two clock periods are inserted by default.

• TRAS: Active to Precharge Delay

Reset value is five cycles.

This field defines the delay between an Activate Command and a Precharge Command in number of cycles. Number of cycles is between 2 and 15.

If TRAS is less than or equal to 2, two clock periods are inserted by default.

AT91C140

14.10.4 SDRAMC Address Register

Register Name: Access Type:	SDRAM Read/W	IC_ADDR /rite					
31	30	29	28	27	26	25	24
-	-	-	-	-	-	-	-
23	22	21	20	19	18	17	16
-	-	-	-	-	-	-	-
15	14	13	12	11	10	9	8
-	-	-	-	-	-	-	-
7	6	5	4	3	2	1	0
	SDCS_ADDR						

SDCS_ADDR

This field defines the eight most significant bits of the base address of the SDRAMC.





15. Static Memory Controller (SMC)

The AT91C140 features a Static Memory Controller (SMC), that enables interfacing with a wide range of external static memory on peripheral devices, including Flash, ROM, static RAM, and parallel peripherals.

The SMC provides a glueless memory interface to external memory using common address, data bus and dedicated control signals. The SMC is highly programmable and has up to 24 bits of address bus, a 16-bit data bus and up to four chip select lines. The SMC supports different access protocols allowing single clock-cycle accesses. The SMC is programmed as an internal peripheral that has a standard APB bus interface and a set of memory-mapped registers. It shares the external address and data buses with the SDRAMC and any external bus master.

15.1 External Memory Mapping

The memory map associates the internal 32-bit address space with the external 24-bit address bus. The memory map is defined by programming the base address and page size of the external memories. Only address bits A1 to A23 are significant for 16-bit memories.

If the physical memory-mapped device is smaller than the programmed page size, it wraps around and appears to be repeated within the page. The SMC correctly handles any valid access to the memory device within the page.

In the event of an access request to an address outside any programmed page, an abort signal is generated by the internal decoder. Two types of abort are possible: instruction prefetch abort and data abort. The corresponding exception vector addresses are 0x0000000C and 0x00000010. It is up to the system programmer to program the exception handling routine used in case of an abort.

15.2 Pin Description

Table 15-1 below lists the pins used by the SMC to control external memories.

FPDRAM	Description	Туре				
[A23:0]	Address bus	Output				
[D15:0]	Data bus	I/O				
NCE0-NCE3	Active low chip enable	Output				
NWE0-NWE1	Active low byte select/write strobe signals	Output				
NWR	Active low write strobe signals	Output				
NSOE	Active low read enable signal	Output				

 Table 15-1.
 SMC Pin Description

15.3 Byte Write or Byte Select Mode

Each chip select can be individually programmed to operate in Byte Write or Byte Select Mode.

- The Byte Write Mode supports byte write signals and a single read signal.
- The Byte Select Mode selects the appropriate byte using two byte-select lines and separate read and write signals.



This option is controlled by the BAT bit in the Chip Select Register (SMC_CSR0 to SMC_CSR3).

The Byte Write Mode is used to connect two 8-bit devices on a 16-bit bus.

- The NWE0 signal is used as the write enable signal for byte 0.
- The NWE1 signal is used as the write enable signal for byte 1.
- The NSOE signal enables memory reads to all memory blocks.

The Byte Select Mode is used to connect one 16-bit device on a 16-bit data bus.

- The NWE0 signal is used to select byte 0 for read and write operations.
- The NWE1 signal is used to select byte 1 for read and write operations.
- The NWR signal is used as the write enable signal for the memory block.
- The NSOE signal enables memory reads to the memory block.

15.4 Read Protocols

The SMC provides two alternative protocols for external memory read access; standard and early read. The difference between the two protocols lies in the timing of the NSOE (read cycle) waveform.

The protocol is selected by the DRP field in the Memory Control Register (SMC_MCR) and is valid for all memory devices. Standard read protocol is the default protocol after reset.

15.4.1 Standard Read Protocol

Standard read protocol implements a read cycle in which NSOE and the write strobes are similar. Both are active during the second half of the clock cycle. The first half of the clock cycle allows time to ensure completion of the previous access, as well as the output of address and NCE before the read cycle begins.

During a standard read protocol external memory access, the chip enable signal NCE0 to NCE3 are set low and the address lines are valid at the beginning of the access, whereas NSOE goes low only in the second half of the master clock cycle to avoid bus conflict. The write strobes are the same in both protocols. The write strobes always go low in the second half of the master clock cycle.

15.4.2 Early Read Protocol

Early read protocol provides more time for a read access from the memory by asserting NSOE at the beginning of the clock cycle. In the case of successive read cycles in the same memory, NSOE remains active continuously. Since a read cycle normally limits the speed of operation of the external memory system, early read protocol allows a faster clock frequency to be used. However, an extra wait state is required in some cases to avoid contention on the external bus.

In early read protocol, an early read wait state is automatically inserted when an external write cycle is followed by a read cycle to allow time for the write cycle to end before the subsequent read cycle begins. This wait state is generated in addition to any other programmed wait states (i.e., data float wait). No wait state is added when a read cycle is followed by a write cycle, between consecutive accesses of the same type or between external and internal memory accesses.





15.5 Write Protocol

During a write cycle, the data becomes valid after the falling edge of the write strobe signal and remains valid after the rising edge of the write strobe. The external write strobe waveform on the appropriate write strobe pin is used to control the output data timing to guarantee this operation.

Thus, it is necessary to avoid excessive loading of the write strobe pins, which could delay the write signal too long and cause a contention with a subsequent read cycle in standard protocol. In early read protocol, the data can remain valid longer than in standard read protocol due to the additional wait cycle that follows a write access.

15.6 Wait States

The SMC can automatically insert wait states. The different types of wait states are:

- Standard wait states
- Data float wait states
- · Chip select change wait states
- Early read wait states, as described in "Early Read Protocol" above.

15.6.1 Standard Wait States

Each chip select can be programmed to insert one or more wait states during an access on the corresponding device. This is done by setting the WSE field in the corresponding SMC_CSR. The number of cycles to insert is programmed in the NWS field in the same register.

When no wait state is programmed (WSE = 0), the NWE signal lasts only one-half cycle. If at least one wait state is programmed, the NWE signal lasts an integer number of cycles, accordingly to the number of wait states programmed.

15.6.2 Data Float Wait States

Some memory devices are slow to release the external bus. For such devices it is necessary to add wait states (data float waits) after a read access before starting a write access or a read access to a different external memory.

The Data Float Output Time (TDF) for each external memory device is programmed in the TDF field of the SMC_CSR register for the corresponding chip select. The value (0 - 7 clock cycles) indicates the number of data float waits to be inserted and represents the time allowed for the data output to go to high impedance after the memory is disabled.

The SMC keeps track of the programmed external data float time even when it makes internal accesses to ensure that the external memory system is not accessed while it is still busy.

Internal memory accesses and consecutive accesses to the same external memory do not insert added data float wait states.

When data float wait states are being used, the SMC prevents the SDRAM Controller from accessing the external data bus.

15.6.3 Chip Select Change Wait States

A chip select wait state is automatically inserted when consecutive accesses are made to two different external memories (if no wait states have already been inserted). If any wait states have already been inserted (e.g., data float wait), then none are added.

44 AT91C140

15.7 SMC User Interface

The memory control register (SMC_MCR) is used to program the number of active chip selects and data read protocol. Four chip select registers (SMC_CSR0 to SMC_CSR3) are used to program the parameters for the individual external memories. Each SMC_CSR must be programmed with a different base address, even for unused chip selects.

During the boot sequence, the Chip Select Registers must be programmed as required depending on the devices connected on the external bus. The chip select addresses that are programmed take effect immediately. Wait states also take effect immediately when they are programmed to optimize boot program execution.

Offset	Register Name	Register Description	Access	Reset Value
0x00	SMC_CSR0	Chip Select Register	Read/Write	0x0000203D
0x04	SMC_CSR1	Chip Select Register	Read/Write	0x1000000
0x08	SMC_CSR2	Chip Select Register	Read/Write	0x20000000
0x0C	SMC_CSR3	Chip Select Register	Read/Write	0x3000000
0x10	_	Reserved	_	_
0x14	_	Reserved	_	_
0x18	_	Reserved	_	-
0x1C	_	Reserved	_	-
0x20	_	Reserved –		-
0x24	SMC_MCR	Memory Control Register	Read/ Write	0x0

 Table 15-2.
 SMC Register Mapping





15.7.1 SMC Chip Select Register

Register Name Access:	: SMC_C Read/W	SR0SMC_CS /rite	R3				
31	30	29	28	27	26	25	24
			E	ЗА			
23	22	21	20	19	18	17	16
		ЗА		-	-	-	-
15	14	13	12	11	10	9	8
-	-	CSEN	BAT		TDF		PAGES
7	6	5	4	3	2	1	0
PAGES	MWS	WSE		NWS		C	DBW

• DBW: Data Bus Width

DBW		Data Bus Width
0	0	Reserved
0	1	16-bit external bus
1	0	Reserved
1	1	Reserved

- NWS: Number of Wait States
- WSE: Wait State Enable
- MWS: Multiply Wait States

NWS			WSE	Wait States Number		
				MWS = 0	MWS = 1	
Х	х	х	0	0	0	
0	0	0	1	1	8	
0	0	1	1	2	16	
0	1	0	1	3	24	
0	1	1	1	4	32	
1	0	0	1	5	40	
1	0	1	1	6	48	
1	1	0	1	7	56	
1	1	1	1	8	64	

46 AT91C140

• PAGES: Page Size

PAGES		Page Size	Base Address
0	0	1M byte	BA20-BA31
0	1	4M bytes	BA22-BA31
1	0	16M bytes	BA24-BA31
1	1	Reserved	-

• TDF: Data Float Output Time

	TDF		Cycles after Transfer
0	0	0	0
0	0	1	1
0	1	0	2
0	1	1	3
1	0	0	4
1	0	1	5
1	1	0	6
1	1	1	7

• BAT: Byte Access Mode

- 0 = Byte Write Mode
- 1= Byte Select Mode

• CSEN: Chip Select Enable

- 0 = Chip Select is disabled
- 1 = Chip Select is enabled

• BA: Base Address

This field contains the high-order bits of the base address. If the page size is larger than 1M byte, then the unused bits of the base address are ignored by the SMC decoder.





15.7.2 SMC Memory Control Register

Register Name Access Type:	e: SMC_N Read/V						
31	30	29	28	27	26	25	24
-	-	-	-	-	-	_	-
23	22	21	20	19	18	17	16
-	-	-	-	-	-	_	-
15	14	13	12	11	10	9	8
-	-	-	-	-	-	_	-
7	6	5	4	3	2	1	0
_	-	_	DRP	-	-	_	-

• DRP: Data Read Protocol

0 =Standard Read Mode

1 = Early Read Mode



16. Ethernet MAC (EMAC)

The AT91C140 features two identical Ethernet MACs, both of which feature the following:

- Compatible with IEEE Standard 802.3
- 10 and 100 Mbits per Second Data Throughput Capability
- Full- and Half-duplex Operation
- Media Independent Interface to the Physical Layer
- Register Interface to Address, Status and Control Registers
- DMA Interface
- Interrupt Generation to Signal Receive and Transmit Completion
- 28-byte Transmit and 28-byte Receive FIFOs
- Automatic Pad and CRC Generation on Transmitted Frames
- Address Checking Logic to Recognize Four 48-bit Addresses
- Supports Promiscuous Mode Where All Valid Frames are Copied to Memory
- Supports Physical Layer Management through MDIO Interface

The Ethernet MAC is the hardware implementation of the MAC sub-layer OSI reference model between the physical layer (PHY) and the logical link layer (LLC). It controls the data exchange between a host and a PHY layer according to Ethernet IEEE 802.3 data frame format. The Ethernet MAC contains the required logic and transmit and receive FIFOs for DMA management. In addition, it is interfaced through MDIO/MDC pins for PHY layer management.

The Ethernet MAC transfers data in media-independent interface (MII).

16.1 Block Diagram

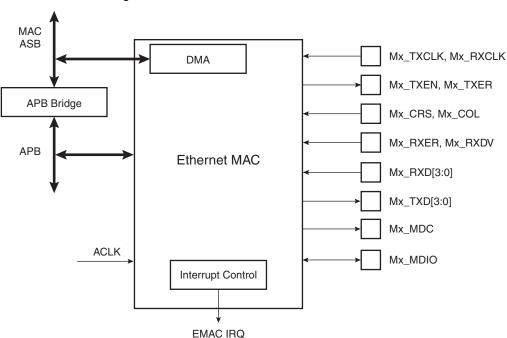


Figure 16-1. Block Diagram



16.2 Media Independent Interface

Table 16-1.	Pin Configuration
-------------	-------------------

MII Signal	Signal Name	Pin Name EMAC A	Pin Name EMAC B
Transmit Clock	ETXCK	MA_TXCLK	MB_TXCLK
Carrier Sense	ECRS	MA_CRS	MB_CRS
Collision Detect	ECOL	MA_COL	MB_COL
Receive Data Valid	ERXDV	MA_RXDV	MB_RXDV
4-bit Receive Data	ERX0-ERX3	MA_RXD[0:3]	MB_RXD[0:3]
Receive Error	ERXER	MA_RXER	MB_RXER
Receive Clock	ERXCK	MA_RXCLK	MB_RXCLK
Transmit Enable	ETXEN	MA_TXEN	MB_TXEN
4-bit Transmit Data	ETX0-ETX3	MA_TXD[0:3]	MB_TXD[0:3]
Transmit Error	ETXER	MA_TXER	MB_TXER

16.3 Transmit/Receive Operation

A standard IEEE 802.3 packet consists of the following fields: preamble, start of frame delimiter (SFD), destination address (DA), source address (SA), length, data (Logical Link Control Data) and frame check sequence CRC32 (FCS).

Table 16-2. Packet Format

Preamble		Frame ⁽¹⁾					
Alternating 1s/0s	SFD	DA	SA	Length/type	LLC Data	PAD	FCS
Up to 7 bytes	1 byte	6 bytes	6 bytes	2 bytes			4 bytes

Note: 1. Frame Length between 64 bytes and 1518 bytes.

The packets are Manchester-encoded and -decoded and transferred serially using NRZ data with a clock. All fields are of fixed length except for the data field. The MAC generates and appends the preamble, SFD and CRC fields during transmission.

The preamble and SFD fields are stripped during reception.

16.3.1 Preamble and Start of Frame Delimiter (SFD)

The preamble field is used to acquire bit synchronization with an incoming packet. When transmitted, each packet contains 62 bits of alternating 1,0 preamble. Some of this preamble is lost as the packet travels through the network. Byte alignment is performed with the Start of Frame Delimiter (SFD) pattern that consists of two consecutive 1's.

16.3.2 Destination Address (DA)

The destination address (DA) indicates the destination of the packet on the network and is used to filter unwanted packets. There are three types of address formats: physical, multicast and broadcast. The physical address is a unique address that corresponds only to a single node. All physical addresses have an MSB of 0.

Multicast addresses begin with an MSB of 1. The MAC filters multicast addresses using a standard hashing algorithm that maps all multicast addresses into a 6-bit value. This 6-bit

50 AT91C140

value indexes a 64-bit array that filters the value. If the address consists of all ones, it is a broadcast address, indicating that the packet is intended for all nodes.

16.3.3 Source Address (SA)

The source address (SA) is the physical address of the node that sent the packet. Source addresses cannot be multicast or broadcast addresses. This field is passed to buffer memory.

16.3.4 Length/Type

If the value of this field is less than or equal to 1500, then the Length/Type field indicates the number of bytes in the subsequent LLC Data field. If the value of this field is greater than or equal to 1536, then the Length/Type field indicates the nature of the MAC client protocol (protocol type).

16.3.5 LLC Data

The data field consists of anywhere from 46 to 1500 bytes. Messages longer than 1500 bytes need to be broken into multiple packets. Messages shorter than 46 bytes require appending a pad to bring the data field to the minimum length of 46 bytes. If the data field is padded, the number of valid data bytes is indicated in the length field.

16.3.6 Frame Check Sequence Field (FCS)

The Frame Check Sequence (FCS) is a 32-bit CRC field, calculated and appended to a packet during transmission to allow detection of errors when a packet is received. During reception, error free packets result in a specific pattern in the CRC generator. Packets with improper CRC will be rejected.

16.3.7 Frame Format Extensions

The original Ethernet standards define the minimum frame size as 64 bytes and the maximum as 1518 bytes. These numbers include all bytes from the Destination MAC Address field through the Frame Check Sequence field. The Preamble and Start Frame Delimiter fields are not included when quoting the size of a frame. The IEEE 802.3ac standard extended the maximum allowable frame size to 1522 bytes to allow a VLAN tag to be inserted into the Ethernet frame format. The BIG bit defined in the ETH_CFG register processes packets with a VLAN tag.

The VLAN protocol permits insertion of an identifier, or tag, into the Ethernet frame format to identify the VLAN to which the frame belongs. It allows frames from stations to be assigned to logical groups. This provides various benefits, such as easing network administration, allowing formation of work groups, enhancing network security, and providing a means of limiting broadcast domains (refer to IEEE standard 802.1Q for definition of the VLAN protocol). The 802.3ac standard defines only the implementation details of the VLAN protocol that are specific to Ethernet.

If present, the 4-byte VLAN tag is inserted into the Ethernet frame between the Source MAC Address field and the Length field. The first 2 bytes of the VLAN tag consist of the "802.1Q Tag Type" and are always set to a value of 0x8100. The 0x8100 value is a reserved Length/Type field assignment that indicates the presence of the VLAN tag, and signals that the traditional Length/Type field can be found at an offset of four bytes further into the frame. The last two bytes of the VLAN tag contain the following information.

• The first three bits are a User Priority Field that may be used to assign a priority level to the Ethernet frame.





- The following one bit is a Canonical Format Indicator (CFI) used in Ethernet frames to indicate the presence of a Routing Information Field (RIF).
- The last twelve bits are the VLAN Identifier (VID) that uniquely identifies the VLAN to which the Ethernet frame belongs.

With the addition of VLAN tagging, the 802.3ac standard permits the maximum length of an Ethernet frame to be extended from 1518 bytes to 1522 bytes. Table 16-3 on page 52 illustrates the format of an Ethernet frame that has been "tagged" with a VLAN identifier according to the IEEE 802.3ac standard.

Table 10-5. Ethemet Frame with VEAN rayging	
Preamble	7 bytes
Start Frame Delimiter	1 byte
Dest. MAC Address	6 bytes
Source MAC Address	6 bytes
Length/Type = 802.1Q Tag Type	2 byte
Tag Control Information	2 bytes
Length / Type	2 bytes

Table 16-3. Ethernet Frame with VLAN Tagging

MAC Client Data

Frame Check Sequence

Pad

16.4 DMA Operations

Frame data is transferred to and from the Ethernet MAC via the DMA interface. All transfers are 32-bit words and may be single accesses or bursts of two, three or four words. Burst accesses do not cross 16-byte boundaries.

The DMA controller performs four types of operations on the ASB bus. In order of priority, these operations are receive buffer manager read, receive buffer manager write, transmit data DMA read and receive data DMA write.

16.4.1 Transmitter Mode

Transmit frame data needs to be stored in contiguous memory locations. It does not need to be word-aligned.

The transmit address register is written with the address of the first byte to be transmitted.

Transmit is initiated by writing the number of bytes to transfer (length) to the transmit control register.

The transmit channel then reads data from memory 32 bits at a time and places them in the transmit FIFO.

The transmit block starts frame transmission when three words have been loaded into the FIFO.

The transmit address register must be written before the transmit control register. While a frame is being transmitted, it is possible to set up one other frame for transmission by writing new values to the transmit address and control registers. Reading the transmit address register returns the address of the buffer currently being accessed by the transmit FIFO.

52 AT91C140

0 - n bytes

0 - p bytes

4 bytes

Reading the transmit control register returns the total number of bytes to be transmitted. The BNQ bit in the Transmit Status Register indicates whether another buffer can be safely queued. An interrupt is generated whenever this bit is set.

Frame assembly starts by adding preamble and the start frame delimiter. Data is taken from the transmit FIFO word-by-word. If necessary, padding is added to make the frame length 60 bytes. The CRC is calculated as a 32-bit polynomial. This is inverted and appended to the end of the frame, making the frame length a minimum of 64 bytes. The CRC is not appended if the NCRC bit is set in the transmit control register.

In full-duplex mode, frames are transmitted immediately. Back-to-back frames are transmitted at least 96 bit times apart to guarantee the inter-frame gap.

In half-duplex mode, the transmitter checks carrier sense. If asserted, it waits for it to de-assert and then starts transmission after the inter-frame gap of 96 bit-times.

If the collision signal is asserted during transmission, the transmitter transmits a jam sequence of 32 bits taken from the data register and then retries transmission after the backoff time has elapsed. An error is indicated and any further attempts aborted if 16 attempts cause collisions.

If transmit DMA underruns, bad CRC is automatically appended using the same mechanism as jam insertion. Underrun also causes TXER to be asserted.

16.4.2 Receiver Mode

When a packet is received, it is checked for valid preamble, CRC, alignment, length and address. If all these criteria are met, the packet is stored successfully in a receive buffer. If at the end of reception the CRC is bad, then the received buffer is recovered. Each received frame including CRC is written to a single receive buffer.

Receive buffers are word-aligned and are capable of containing 1518 or 1522 bytes (BIG = 1 in ETH_CFG) of data (the maximum length of an Ethernet frame).

The start location for each received frame is stored in memory in a list of receive buffer descriptors at a location pointed to by the receive buffer queue pointer register. Each entry in the list consists of two words. The first word is the address of the received buffer; the second is the receive status. Table 16-4 defines an entry in the received buffer descriptor list.

To receive frames, the buffer queue must be initialized by writing an appropriate address to bits [31:2] in the first word of each list entry. Bit zero of word zero must be written with zero.

After a frame is received, bit zero becomes set and the second word indicates what caused the frame to be copied to memory. The start location of the received buffer descriptor list should be written to the received buffer queue pointer register before receive is enabled (by setting the receive enable bit in the network control register). As soon as the received block starts writing received frame data to the receive FIFO, the received buffer manager reads the first receive buffer location pointed to by the received buffer queue pointer register. If the filter block is active, the frame should be copied to memory; the receive data DMA operation starts writing data into the receive buffer. If an error occurs, the buffer pointer is rewritten to memory with its low-order bit set to indicate successful frame reception and a used buffer. The next word is written with the length of the frame and how the destination address was recognized. The next receive buffer location is then read from the following word or, if the current buffer pointer had its wrap bit set, the beginning of the table. The maximum number of buffer pointers before a wrap bit is seen is 1024. If a wrap bit is not seen by then, a wrap bit is assumed in that





entry. The received buffer queue pointer register must be written with zero in its lower-order bit positions to enable the wrap function to work correctly.

If bit zero is set when the receive buffer manager reads the location of the receive buffer, then the buffer has already been used and cannot be used again until software has processed the frame and cleared bit zero. In this case, the DMA block sets the buffer unavailable bit in the received status register and triggers an interrupt. The frame is discarded and the queue entry is reread on reception of the next frame to see if the buffer is now available. Each discarded frame increments a statistics register that is cleared on being read. When there is network congestion, it is possible for the MAC to be programmed to apply back pressure.

This is when half-duplex mode collisions are forced on all received frames by transmitting 64 bits of data (a default pattern).

Reading the received buffer queue register returns the location of the queue entry currently being accessed. The queue wraps around to the start after either 1024 entries (i.e., 2048 words) or when the wrap bit is found to be set in bit 1 of the first word of an entry.

Bit	Function
Word 0	
31:2	Base address of receive buffer
1	Wrap bit. If this bit is set, the counter that is ORed with the received buffer queue pointer register to give the pointer to entries in this table is cleared after the buffer is used.
0	Ownership bit. 1 indicates software owns the pointer, 0 indicates that the DMA owns the buffer. If this bit is not zero when the entry is read by the receiver, the buffer unavailable bit is set in the received status register and the receiver goes inactive.
Word 1	
31	Global all ones broadcast address detected
30	Multicast hash match
29	Unicast hash match
28	External address
27	Unknown source address (reserved for future use)
26	Local address match (Specific address 1 match)
25	Local address match (Specific address 2 match)
24	Local address match (Specific address 3 match)
23	Local address match (Specific address 4 match)
22:11	Reserved; written to 0
10:0	Length of frame including FCS

Table 16-4. Received Buffer Descriptor List

AT91C140

54

16.5 Address Checking

Whether or not a frame is stored depends on what is enabled in the network configuration register, the contents of the specific address and hash registers and the frame destination address. In this implementation of the MAC the frame source address is not checked.

A frame is not copied to memory if the MAC is transmitting in half-duplex mode at the time a destination address is received.

The hash register is 64 bits long and takes up two locations in the memory map.

There are four 48-bit specific address registers, each taking up two memory locations. The first location contains the first four bytes of the address; the second location contains the last two bytes of the address stored in its least significant byte positions. The addresses stored can be specific, group, local or universal.

Ethernet frames are transmitted a byte at a time, LSB first. The first bit (i.e., the LSB of the first byte) of the destination address is the group/individual bit and is set one for multicast addresses and zero for unicast. This bit corresponds to bit 24 of the first word of the specific address register. The MSB of the first byte of the destination address corresponds to bit 31 of the specific address register.

The specific address registers are compared to the destination address of received frames once they have been activated. Addresses are deactivated at reset or when the first byte [47:40] is written and activated or when the last byte [7:0] is written. If a receive frame address matches an active address, the local match signal is set and the store frame pulse signal is sent to the DMA block via the ACLK synchronization block.

A frame can also be copied if a unicast or multicast hash match occurs, it has the broadcast address of all ones, or the copy all frames bit in the network configuration register is set.

The broadcast address of 0xFFFFFFF is recognized if the no broadcast bit in the network configuration register is zero. This sets the broadcast match signal and triggers the store frame signal.

The unicast hash enable and the multicast hash enable bits in the network configuration register enable the reception of hash matched frames. So all multicast frames can be received by setting all bits in the hash register.

The CRC algorithm reduces the destination address to a 6-bit index into a 64-bit hash register. If the equivalent bit in the register is set, the frame is matched depending on whether the frame is multicast or unicast and the appropriate match signals are sent to the DMA block. If the copy all frames bit is set in the network configuration register, the store frame pulse is always sent to the DMA block as soon as any destination address is received.





16.6 EMAC User Interface

MACA Memory Address: 0xFF034000 MACB Memory Address: 0xFF038000

Table 16-5.	Ethernet MAC Register Mapping
-------------	-------------------------------

Offset	Register Name	Register Description	Read/Write	Reset
0x00	ETH_CTL	Network Control Register	Read/Write	0x0
0x04	ETH_CFG	Network Configuration Register	Read/Write	0x800
0x08	ETH_SR	Network Status Register	Read-only	0x6
0x0C	ETH_TAR	Transmit Address Register	Read/Write	0x0
0x10	ETH_TCR	Transmit Control Register	Read/Write	0x0
0x14	ETH_TSR	Transmit Status Register	Read/Write	0x18
0x18	ETH_RBQP	Receive Buffer Queue Pointer	Read/Write	0x0
0x1C	-	Reserved	Read-only	0x0
0x20	ETH_RSR	Receive Status Register	Read/Write	0x0
0x24	ETH_ISR	Interrupt Status Register	Read/Write	0x0
0x28	ETH_IER	Interrupt Enable Register	Write-only	_
0x2C	ETH_IDR	Interrupt Disable Register	Write-only	_
0x30	ETH_IMR	Interrupt Mask Register	Read-only	0xFFF
0x34	ETH_MAN	PHY Maintenance Register	Read/Write	0x0
		Statistics Registers ⁽¹⁾		
0x40	ETH_FRA	Frames Transmitted OK Register	Read/Write	0x0
0x44	ETH_SCOL	Single Collision Frame Register	Read/Write	0x0
0x48	ETH_MCOL	Multiple Collision Frame Register	Read/Write	0x0
0x4C	ETH_OK	Frames Received OK Register	Read/Write	0x0
0x50	ETH_SEQE	Frame Check Sequence Error Register	Read/Write	0x0
0x54	ETH_ALE	Alignment Error Register	Read/Write	0x0
0x58	ETH_DTE	Deferred Transmission Frame Register	Read/Write	0x0
0x5C	ETH_LCOL	Late Collision Register	Read/Write	0x0
0x60	ETH_ECOL	Excessive Collision Register	Read/Write	0x0
0x64	ETH_CSE	Carrier Sense Error Register	Read/Write	0x0
0x68	ETH_TUE	Transmit Underrun Error Register	Read/Write	0x0
0x6C	ETH_CDE	Code Error Register	Read/Write	0x0
0x70	ETH_ELR	Excessive Length Error Register	Read/Write	0x0
0x74	ETH_RJB	Receive Jabber Register	Read/Write	0x0
0x78	ETH_USF	Undersize Frame Register	Read/Write	0x0
0x7C	ETH_SQEE	SQE Test Error Register	Read/Write	0x0
0x80	ETH_DRFC	Discarded RX Frame Register	Read/Write	0x0

56 AT91C140

Offset	Register Name	Register Description	Read/Write	Reset
0x90	ETH_HSH	Hash Address High [63:32]	Read/Write	0x0
0x94	ETH_HSL	Hash Address Low [31:0]	Read/Write	0x0
0x98	ETH_SA1L	Specific Address 1 Low, First 4 Bytes	Read/Write	0x0
0x9C	ETH_SA1H	Specific Address 1 High, Last 2 Bytes	Read/Write	0x0
0xA0	ETH_SA2L	Specific Address 2 Low, First 4 Bytes	Read/Write	0x0
0xA4	ETH_SA2H	Specific Address 2 High, Last 2 Bytes	Read/Write	0x0
0xA8	ETH_SA3L	Specific Address 3 Low, First 4 Bytes	Read/Write	0x0
0xAC	ETH_SA3H	Specific Address 3 High, Last 2 Bytes	Read/Write	0x0
0xB0	ETH_SA4L	Specific Address 4 Low, First 4 Bytes	Read/Write	0x0
0xB4	ETH_SA4H	Specific Address 4 High, Last 2 Bytes	Read/Write	0x0

Table 16-5. Ethernet MAC Register Mapping (Continued)

Note: 1. For further details on the statistics registers, see Table 16-6, "Statistics Register Block," on page 71.





16.6.1 **EMAC Control Register** ----

Register Name: Access Type:	ETH_C Read/W						
31	30	29	28	27	26	25	24
-	_	_	_	-	_	_	_
23	22	21	20	19	18	17	16
-	_	_	_	_	_	_	_
15	14	13	12	. 11	10	9	8
-	_	-	-	-	-	-	BP
7	6	5	4	3	2	1	0
WES	ISR	CSR	MPE	TE	RE	LBL	LB

LB: Loopback

. .

. When set, loopback signal is at high level.

• LBL: Loopback Local

When set, connects ETX[3:0] to ERX[3:0], ETXEN to ERXDV, forces full duplex and drives ERXCK and ETXCK_REFCK with ACK divided by 4.

RE: Receive Enable

When set, enables the Ethernet MAC to receive data.

• TE: Transmit Enable

When set, enables the Ethernet transmitter to send data.

• MPE: Management Port Enable

Set to one to enable the management port. When zero, forces MDIO to high impedance state.

CSR: Clear Statistics Registers

This bit is write-only. Writing a one clears the statistics registers.

• ISR: Increment Statistics Registers

This bit is write-only. Writing a one increments all the statistics registers by one for test purposes.

• WES: Write Enable for Statistics Registers

Setting this bit to one makes the statistics registers writable for functional test purposes.

BP: Back Pressure

If this field is set, then in half-duplex mode collisions are forced on all received frames by transmitting 64 bits of data (default pattern).

AT91C140

58

16.6.2 EMAC Mode Register

Name: Access Type:	ETH_CF Read/W						
31	30	29	28	27	26	25	24
_	_	_	_	_	_	_	_
23	22	21	20	19	18	17	16
_	_	_	_	_	_	_	_
15	14	13	12	11	10	9	8
_	—	—	RTY	CI	_K	EAE	BIG
7	6	5	4	3	2	1	0
UNI	MTI	NBC	CAF	_	BR	FD	SPD

• SPD: Speed

Set to 1 to indicate 100 Mbit/sec, 0 for 10 Mbit/sec. Has no other functional effect.

• FD: Full Duplex

If set to 1, the transmit block ignores the state of collision and carrier sense and allows receive while transmitting.

BR: Bit Rate

• CAF: Copy All Frames

When set to 1, all valid frames are received.

• NBC: No Broadcast

When set to 1, frames addressed to the broadcast address of all ones are not received.

• MTI: Multicast Hash Enable

When set multicast frames are received when six bits of the CRC of the destination address point to a bit that is set in the hash register.

• UNI: Unicast Hash Enable

When set, unicast frames are received when six bits of the CRC of the destination address point to a bit that is set in the hash register.

• BIG: Receive 1522 Bytes

When set, the MAC receives up to 1522 bytes. Normally the MAC receives frames up to 1518 bytes in length.

This bit allows to receive extended Ethernet frame with "VLAN tag" (IEEE 802.3ac)

• EAE: External Address Match Enable

• CLK

The ARM clock is divided down to generate MDC (the clock for the MDIO). To conform with IEEE standard 802.3 MDC must not exceed 2.5 MHz. At reset this field is set to 10 so that ACK is divided by 32.

CLK	MDC
00	ACK divided by 8
01	ACK divided by 16
10	ACK divided by 32
11	ACK divided by 64

• RTY: Retry Test

When set, the time between frames is always one time slot. For test purposes only. Must be cleared for normal operation.





16.6.3 EMAC Status Register

ETH SR

Access Type:	Read-or						
31	30	29	28	27	26	25	24
-	-	_	_	-	_	_	_
23	22	21	20	19	18	17	16
_	_	_	_	_	_	_	_
15	14	13	12	. 11	10	9	8
_	_	_	-	_	_	_	_
7	6	5	4	3	2	1	0
_	-	_	-	-	IDLE	MDIO	LINK

• LINK

Name:

0 = LINK is at 0.

1 = LINK is at 1.

• MDIO

0 = MDIO pin not set.

1 = MDIO pin set.

• IDLE

0 = PHY logic is idle.

1 = PHY logic is running.

AT91C140

60

16.6.4 EMAC Name: Access Type:	Transmit Ad ETH_TA Read/W		r				
31	30	29	28	27	26	25	24
			ADDI	RESS			
23	22	21	20	19	18	17	16
			ADDI	RESS			
15	14	13	12	11	10	9	8
			ADDI	RESS			
7	6	5	4	3	2	1	0
			ADDI	RESS			

ADDRESS: Transmit Address Register

Written with the address of the frame to be transmitted, read as the base address of the buffer being accessed by the transmit FIFO. Note that if the two least significant bits are not zero, transmit starts at the byte indicated.

16.6.5 EMAG	C Transmit Co	ontrol Register							
Name: ETH_TCR Access Type: Read/Write									
31	30	29	28	27	26	25	24		
_	_	_	-	-	_	_	_		
23	22	21	20	19	18	17	16		
_	_	_	-	-	-	_	-		
15	14	13	12	11	10	9	8		
NCRC	_	_	-	_		LEN			
7	6	5	4	3	2	1	0		
			LI	ΞN					

• LEN: Transmit Frame Length

This register is written to the number of bytes to be transmitted excluding the four CRC bytes unless the no CRC bit is asserted. Writing these bits to any non-zero value initiates a transmission. If the value is greater than 1514 (1518 if no CRC is being generated), an oversize frame is transmitted. This field is buffered so that a new frame can be queued while the previous frame is still being transmitted. Must always be written in address-then-length order. Reads as the total number of bytes to be transmitted (i.e., this value does not change as the frame is transmitted.) Frame transmission does not start until two 32-bit words have been loaded into the transmit FIFO. The length must be great enough to ensure two words are loaded.

NCRC: No CRC

If this bit is set, it is assumed that the CRC is included in the length being written in the low-order bits and the MAC does not append CRC to the transmitted frame. If the buffer is not at least 64 bytes long, a short frame is sent. This field is buffered so that a new frame can be queued while the previous frame is still being transmitted. Reads as the value of the frame currently being transmitted.





16.6.6 **EMAC Transmit Status Register**

Name: Access Type:	ETH_TS Read/W						
31	30	29	28	27	26	25	24
_	-	-	-	-	-	-	-
23	22	21	20	19	18	17	16
_	_	_	_	_	_	_	_
15	14	13	12	11	10	9	8
_	_	_	_	_	_	_	_
7	6	5	4	3	2	1	0
_	UND	COMP	BNQ	IDLE	RLE	COL	OVR

OVR: Ethernet Transmit Buffer Overrun

Software has written to the Transmit Address Register (ETH_TAR) or Transmit Control Register (ETH_TCR) when bit BNQ was not set. Cleared by writing a one to this bit.

COL: Collision Occurred

Set by the assertion of a collision. Cleared by writing a one to this bit.

RLE: Retry Limit Exceeded

Cleared by writing a one to this bit.

IDLE: Transmitter Idle

Asserted when the transmitter has no frame to transmit. Cleared when a length is written to transmit frame length portion of the Transmit Control register. This bit is read-only.

BNQ: Ethernet Transmit Buffer not Queued

Software may write a new buffer address and length to the transmit DMA controller when set. Cleared by having one frame ready to transmit and another in the process of being transmitted. This bit is read-only.

COMP: Transmit Complete

Set when a frame has been transmitted. Cleared by writing a one to this bit.

UND: Transmit Underrun

Set when transmit DMA was not able to read data from memory in time. If this happens, the transmitter forces bad CRC. Cleared by writing a one to this bit.

AT91C140

62

IU.U.I LIMAC	neceive Dui		iter negister				
Name: Access Type:	ETH_RE Read/W						
31	30	29	28	27	26	25	24
			ADDI	RESS			
23	22	21	20	19	18	17	16
			ADDI	RESS			
15	14	13	12	11	10	9	8
			ADDI	RESS			
7	6	5	4	3	2	1	0
			ADDI	RESS			

1667 **EMAC Receive Buffer Queue Pointer Register**

ADDRESS: Receive Buffer Queue Pointer

Written with the address of the start of the receive queue, reads as a pointer to the current buffer being used. The receive buffer is forced to word alignment.

16.6.8 **EMAC Receive Status Register**

Name:	ETH_F
Access Type:	Read/\

RSR Read/Write

31	30	29	28	27	26	25	24
_	-	-	_	-	-	-	-
23	22	21	20	19	18	17	16
_	-	Ι	-		Ι	Ι	-
15	14	13	12	11	10	9	8
_	-	Ι	_		Ι	Ι	-
7	6	5	4	3	2	1	0
_	_	-	_	_	OVR	REC	BNA

BNA: Buffer Not Available

An attempt was made to get a new buffer and the pointer indicated that it was owned by the processor. The DMA rereads the pointer each time a new frame starts until a valid pointer is found. This bit is set at each attempt that fails even if it has not had a successful pointer read since it has been cleared. Cleared by writing a one to this bit.

REC: Frame Received

One or more frames have been received and placed in memory. Cleared by writing a one to this bit.

• OVR: RX Overrun

The DMA block was unable to store the receive frame to memory, either because the MAC ASB bus was not granted in time or because an abort occurred. The buffer is recovered if this happens. Cleared by writing a one to this bit.





16.6.9 **EMAC Interrupt Status Register**

Name: Access Type:	ETH_IS Read/W						
31	30	29	28	27	26	25	24
_	_	_	-	-	_	_	-
23	22	21	20	19	18	17	16
_	_	_	_	-	-	-	-
15	14	13	12	. 11	10	9	8
_	_	_	_	ABT	ROVR	LINK	TIDLE
7	6	5	4	3	2	1	0
TCOM	TBRE	RTRY	TUND	TOVR	RBNA	RCOM	DONE

DONE: Management Done

The PHY maintenance register has completed its operation. Cleared on read.

RCOM: Receive Complete

- A frame has been stored in memory. Cleared on read.
- RBNA: Receive Buffer Not Available

Cleared on read.

TOVR: Transmit Buffer Overrun

Software has written to the Transmit Address Register (ETH_TAR) or Transmit Control Register (ETH_TCR) when BNQ of the Transmit Status Register (ETH_TSR) was not set. Cleared on read.

TUND: Transmit Buffer Underrun

Ethernet transmit buffer underrun. The transmit DMA did not complete fetch frame data in time for it to be transmitted. Cleared on read.

RTRY: Retry Limit

Retry limit exceeded. Cleared on read.

TBRE: Transmit Buffer Register Empty

Software may write a new buffer address and length to the transmit DMA controller. Cleared by having one frame ready to transmit and another in the process of being transmitted. Cleared on read.

• TCOM: Transmit Complete

Set when a frame has been transmitted. Cleared on read.

TIDLE: Transmit Idle

Set when all frames have been transmitted. Cleared on read.

LINK

64

Set when LINK pin changes value.

ROVR: RX Overrun

Set when the RX overrun status bit is set. Cleared on read.

• ABT: Abort

Set when the DMA generates an Abort. Cleared on read.

AT91C140

16.6.10 EMAC Interrupt Enable Register

Name: Access Type:	ETH_IE Write-or						
31	30	29	28	27	26	25	24
-	_	-	-	-	-	-	-
23	22	21	20	19	18	17	16
_	_	_	-	-	_	_	_
15	14	13	12	. 11	10	9	8
—	_	-	_	ABT	ROVR	LINK	TIDLE
7	6	5	4	3	2	1	0
TCOM	TBRE	RTRY	TUND	TOVR	RBNA	RCOM	DONE

- DONE: Management Done Interrupt Enable
- RCOM: Receive Complete Interrupt Enable
- RBNA: Receive Buffer Not Available Interrupt Enable
- TOVR: Transmit Buffer Overrun Interrupt Enable
- TUND: Transmit Buffer Underrun Interrupt Enable
- RTRY: Retry Limit Interrupt Enable
- TBRE: Transmit Buffer Register Empty Interrupt Enable
- TCOM: Transmit Complete Interrupt Enable
- TIDLE: Transmit Idle Interrupt Enable
- LINK: LINK Interrupt Enable
- ROVR: RX Overrun Interrupt Enable
- ABT: Abort Interrupt Enable

0 =No effect.

1 = Enables the corresponding interrupt.





Name: Access Type:	ETH_ID Write-or						
31	30	29	28	27	26	25	24
-	_	-	-	-	-	-	-
23	22	21	20	19	18	17	16
-	_	_	_	_	_	_	-
15	14	13	12	11	10	9	8
-	-	-	-	ABT	ROVR	LINK	TIDLE
7	6	5	4	3	2	1	0
TCOM	TBRE	RTRY	TUND	TOVR	RBNA	RCOM	DONE

16.6.11 EMAC Interrupt Disable Register

- DONE: Management Done Interrupt Disable
- RCOM: Receive Complete Interrupt Disable
- RBNA: Receive Buffer Not Available Interrupt Disable
- TOVR: Transmit Buffer Overrun Interrupt Disable
- TUND: Transmit Buffer Underrun Interrupt Disable
- RTRY: Retry Limit Interrupt Disable
- TBRE: Transmit Buffer Register Empty Interrupt Disable
- TCOM: Transmit Complete Interrupt Disable
- TIDLE: Transmit Idle Interrupt Disable
- LINK: LINK Interrupt Disable
- ROVR: RX Overrun Interrupt Disable
- ABT: Abort Interrupt Disable

0 =No effect.

1 =Disables the corresponding interrupt.

AT91C140 🕳

66

16.6.12 EMAC Interrupt Mask Register

Name: Access Type:	ETH_IM Read-or						
31	30	29	28	27	26	25	24
_	_	—	_	_	_	_	_
23	22	21	20	19	18	17	16
_	_	_	_	_	_	_	_
15	14	13	12	11	10	9	8
-	-	-	—	ABT	ROVR	LINK	TIDLE
7	6	5	4	3	2	1	0
TCOM	TBRE	RTRY	TUND	TOVR	RBNA	RCOM	DONE

- DONE: Management Done Interrupt Mask
- RCOM: Receive Complete Interrupt Mask
- RBNA: Receive Buffer Not Available Interrupt Mask
- TOVR: Transmit Buffer Overrun Interrupt Mask
- TUND: Transmit Buffer Underrun Interrupt Mask
- RTRY: Retry Limit Interrupt Mask
- TBRE: Transmit Buffer Register Empty Interrupt Mask
- TCOM: Transmit Complete Interrupt Mask
- TIDLE: Transmit Idle Interrupt Mask
- LINK: LINK Interrupt Mask
- ROVR: RX Overrun Interrupt Mask
- ABT: Abort Interrupt Mask
- 0 =The corresponding interrupt is enabled.
- 1 =The corresponding interrupt is not enabled.

Important Note: The interrupt is disabled when the corresponding bit is set. This is non-standard with other peripherals of the product, as generally a mask bit set enables the interrupt.





16.6.13 EMAC PHY Maintenance Register

Name: Access Type:	ETH_M/ Read/W						
31	30	29	28	27	26	25	24
LOW	HIGH	F	RW		РНҮА		
23	22	21	20	19	18	17	16
PHYA		REGA			CODE		
15	14	13	12	11	10	9	8
	DATA						
7	6	5	4	3	2	1	0
	DATA						

Writing to this register starts the shift register that controls the serial connection to the PHY. On each shift cycle the MDIO pin becomes equal to the MSB of the shift register and LSB of the shift register becomes equal to the value of the MDIO pin. When the shifting is complete an interrupt is generated and the IDLE field is set in the Network Status register.

When read, gives current shifted value.

• DATA

For a write operation this is written with the data to be written to the PHY. After a read operation this contains the data read from the PHY.

• CODE

Must be written to 10 in accordance with IEEE standard 802.3. Reads as written.

REGA

Register address. Specifies the register in the PHY to access.

• PHYA

PHY address. Normally is 0.

• RW

Read/Write Operation. 10 is read. 01 is write. Any other value is an invalid PHY management frame.

• HIGH

Must be written with 1 to make a valid PHY management frame. Conforms with IEEE standard 802.3.

• LOW

68

Must be written with 0 to make a valid PHY management frame. Conforms with IEEE standard 802.3.

AT91C140

16.6.14 EMAC Hash Address High Register

	Read/Write						
31 30	0	29	28	27	26	25	24
			ADDR				
23 22	2	21	20	19	18	17	16
			ADDR				
15 14	4	13	12	11	10	9	8
			ADDR				
7 6	6	5	4	3	2	1	0
			ADDR				

• ADDR

Hash address bits 63 to 32.

16.6.15 EMAC Hash Address Low Register

Register Name: Access Type:	ETH_HSL Read/Write							
31	30	29	28	27	26	25	24	
	ADDR							
23	22	21	20	19	18	17	16	
	ADDR							
15	14	13	12	11	10	9	8	
	ADDR							
7	6	5	4	3	2	1	0	
			ADI	DR				

• ADDR

Hash address bits 31 to 0.





16.6.16 EMAC Specific Address (1, 2, 3 and 4) High Register

Register Name Access Type:		ETH_SA1H,ETH_SA4H Read/Write					
31	30	29	28	27	26	25	24
_	_	-	_	_	_	_	-
23	22	21	20	19	18	17	16
_	_	-	_	_	_	_	-
15	14	13	12	11	10	9	8
	ADDR						
7	6	5	4	3	2	1	0
	ADDR						

• ADDR

Unicast addresses (1, 2, 3 and 4), Bits 47:32.

16.6.17 EMAC Specific Address (1, 2, 3 and 4) Low Register

Register Name:	ETH_SA1L,ETH_SA4L
Access Type:	Read/Write

31	30	29	28	27	26	25	24	
	ADDR							
23	22	21	20	19	18	17	16	
			AD	DR				
15	14	13	12	11	10	9	8	
	ADDR							
7	6	5	4	3	2	1	0	
	ADDR							

ADDR

Unicast addresses (1, 2, 3 and 4), Bits 31:0.

70 AT91C140

16.7 EMAC Statistics Register Block Registers

These registers reset to zero on a read and remain at all ones when they count to their maximum value. They should be read frequently enough to prevent loss of data.

The statistics register block contains the registers found in Table 16-5, "Ethernet MAC Register Mapping," on page 56.

Table 16-6.	Statistics Register Block
-------------	---------------------------

Register	Register Name	Description
Frames Transmitted OK Register	ETH_FRA	A 24-bit register counting the number of frames successfully transmitted.
Single Collision Frame Register	ETH_SCOL	A 16-bit register counting the number of frames experiencing a single collision before being transmitted and experiencing no carrier loss nor underrun.
Multiple Collision Frame Register	ETH_MCOL	A 16-bit register counting the number of frames experiencing between two and fifteen collisions prior to being transmitted (62 - 1518 bytes, no carrier loss, no underrun).
Frames Received OK Register	ETH_OK	A 24-bit register counting the number of good frames received, i.e., address recognized. A good frame is of length 64 to 1518 bytes and has no FCS, alignment or code errors.
Frame Check Sequence Error Register	ETH_SEQE	An 8-bit register counting address-recognized frames that are an integral number of bytes long, that have bad CRC and that are 64 to 1518 bytes long.
Alignment Error Register	ETH_ALE	An 8-bit register counting frames that: - are address-recognized, - are not an integral number of bytes long, - have bad CRC when their length is truncated to an integral number of bytes, - are between 64 and 1518 bytes long.
Deferred Transmission Frame Register	ETH_DTE	A 16-bit register counting the number of frames experiencing deferral due to carrier sense active on their first attempt at transmission (no underrun or collision).
Late Collision Register	ETH_LCOL	An 8-bit register counting the number of frames that experience a collision after the slot time (512 bits) has expired. No carrier loss or underrun. A late collision is counted twice, i.e., both as a collision and a late collision.
Excessive Collision Register	ETH_ECOL	An 8-bit register counting the number of frames that failed to be transmitted because they experienced 16 collisions (64 - 1518 bytes, no carrier loss or underrun).
Carrier Sense Error Register	ETH_CSE	An 8-bit register counting the number of frames for which carrier sense was not detected and that were maintained in half-duplex mode one slot time (512 bits) after the start of transmission (no excessive collision).
Transmit Underrun Error Register	ETH_TUE	An 8-bit register counting the number of frames not transmitted due to a transmit DMA underrun. If this register is incremented, then no other register is incremented.
Code Error Register	ETH_CDE	An 8-bit register counting the number of frames that are address-recognized, had RXER asserted during reception. If this counter is incremented, then no other counters are incremented.
Excessive Length Error Register	ETH_ELR	An 8-bit register counting the number of frames received exceeding 1518 bytes in length but that do not have either a CRC error, an alignment error or a code error.
Receive Jabber Register	ETH_RJB	An 8-bit register counting the number of frames received exceeding 1518 bytes in length and having either a CRC error, an alignment error or a code error.



Table 16-6. Statistics Register Block (Continued)

Register	Register Name	Description
Undersize Frame Register	ETH_USF	An 8-bit register counting the number of frames received that are less than 64 bytes in length but that do not have either a CRC error, an alignment error or a code error.
SQE Test Error Register	ETH_SQEE	An 8-bit register counting the number of frames where pin ECOL was not asserted within a slot time of pin ETXEN being deasserted.
Discarded RX Frame Register	ETH_DRFC	This 16-bit counter is incremented every time an address-recognized frame is received but cannot be copied to memory because the receive buffer is available.

72 AT91C140

17. Advanced Interrupt Controller (AIC)

The AT91C140 integrates the Atmel advanced interrupt controller (AIC).

The interrupt controller is connected to the fast interrupt request (nFIQ) and the standard interrupt request (NIRQ) inputs of the ARM7TDMI processor. The processor's nFIQ line can only be asserted by the external fast interrupt request input (FIQ). The nIRQ line can be asserted by the interrupts generated by the on-chip peripherals and the two external interrupt request lines, IRQ0 to IRQ1.

An 8-level priority encoder allows the user to define the priority between the different interrupt sources. Internal sources are programmed to be level-sensitive or edge-triggered. External sources can be programmed to be positive- or negative-edge triggered or high- or low-level sensitive.



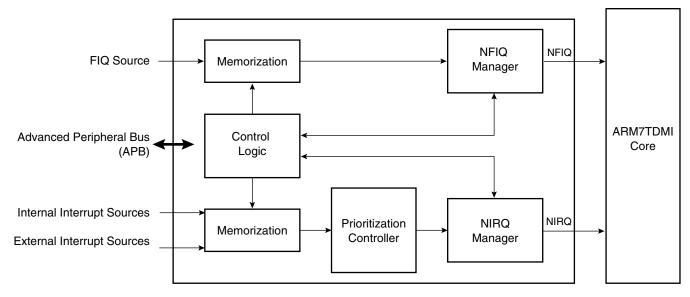


Table 17-1. Interrupt Sources

Interrupt Source	Interrupt Name	Interrupt Description
0	FIQ	Fast Interrupt (LOWP)
1		
2	SWI	Software Interrupt
3	UARTA	UART A Interrupt
4	TC0	Timer Channel 0 Interrupt
5	TC1	Timer Channel 1 Interrupt
6	TC2	Timer Channel 2 Interrupt
7	PIOA	PIO A Interrupt
8	MACA	MAC A Interrupt
9	SPI	Serial Peripheral Interface
10	IRQ0	External Interrupt





Interrupt Source	Interrupt Name	Interrupt Description
11	IRQ1	External Interrupt
12	Reserved	
13	MACB	MAC B Interrupt
14	UARTB	UART B Interrupt
15	PIOB	PIO B Interrupt
16 - 31	Reserved	

Table 17-1. Interrupt Sources (Continued)

17.1 Priority Controller

The nIRQ line is controlled by an 8-level priority encoder. Each source has a programmable priority level of 7 to 0. Level 7 is the highest priority and level 0 the lowest.

When the AIC receives more than one unmasked interrupt at a time, the interrupt with the highest priority is serviced first. If both interrupts have equal priority, the interrupt with the lowest interrupt source number is serviced first.

The current priority level is defined as the priority level of the current interrupt at the time the register AIC_IVR is read (the interrupt which will be serviced). In the case when a higher priority unmasked interrupt occurs while an interrupt already exists, there are two possible outcomes depending on whether the AIC_IVR has been read.

- 1. If the nIRQ line has been asserted but the AIC_IVR has not been read, then the processor will read the new higher priority interrupt handler number in the AIC_IVR register and the current interrupt level is updated.
- 2. If the processor has already read the AIC_IVR, then the nIRQ line is reasserted. When the processor has authorized nested interrupts to occur and reads the AIC_IVR again, it reads the new, higher priority interrupt handler address. At the same time the current priority value is pushed onto a first-in last-out stack and the current priority is updated to the higher priority.

When the End of Interrupt Command Register (AIC_EOICR) is written, the current interrupt level is updated with the current interrupt level from the stack (if any). Hence, at the end of a higher priority interrupt, the AIC returns to the previous state corresponding to the preceding lower priority interrupt which had been interrupted.

17.2 Interrupt Handling

The interrupt handler must read the AIC_IVR as soon as possible. This deasserts the nIRQ request to the processor and clears the interrupt in case it is programmed to be edge-triggered. This permits the AIC to assert the nIRQ line again when a higher priority unmasked interrupt occurs.

At the end of the interrupt service routine, the End of Interrupt Command Register (AIC_EOICR) must be written. This allows pending interrupts to be serviced.

17.2.1 Interrupt Masking

Each interrupt source, including FIQ, can be enabled or disabled using the command registers AIC_IECR and AIC_IDCR. The interrupt mask can be read in the read only register AIC_IMR. A disabled interrupt does not affect the servicing of other interrupts.

74 AT91C140

17.2.2 Interrupt Clearing and Setting

All interrupt sources which are programmed to be edge-triggered (including FIQ) can be individually set or cleared by respectively writing to the registers AIC_ISCR and AIC_ICCR. This function of the interrupt controller is available for auto-test or software debug purposes.

17.3 Standard Interrupt Sequence

It is assumed that:

• The advanced interrupt controller has been programmed, AIC_SVR registers are loaded with corresponding interrupt service routine addresses and interrupts are enabled.

When nIRQ is asserted and if the I bit of CPSR is 0, the sequence is as follows:

- The CPSR is stored in SPSR_irq, the current value of the Program Counter is loaded in the IRQ link register (R14_IRQ) and the Program Counter (R15) is loaded with 0x18. In the following cycle during fetch at address 0x1C, the ARM core adjusts R14_IRQ, decrementing it by 4.
- 2. The ARM core enters IRQ mode if it is not already.
- 3. When the instruction at 0x18 is executed, the Program Counter is loaded with the value read in the AIC_IVR. Reading the AIC_IVR has the following effects:

Sets the current interrupt to be the pending one with the highest priority. The current level is the priority level of the current interrupt.

De-asserts the nIRQ line on the processor (even if vectoring is not used, AIC_IVR must be read in order to de-assert nIRQ).

Automatically clears the interrupt if it has been programmed to be edge-triggered.

Pushes the current level on to the stack.

Returns the AIC_SVR corresponding to the current interrupt.

- 4. The previous step establishes a connection to the corresponding ISR. This begins by saving the link register (R14_IRQ) and the SPSR (SPSR_IRQ). Note that the link register must be decremented by 4 when it is saved if it is to be restored directly into the Program Counter at the end of the interrupt.
- 5. Further interrupts can then be unmasked by clearing the I bit in the CPSR, allowing re-assertion of the nIRQ to be taken into account by the core. This can occur if an interrupt with a higher priority than the current one occurs.
- 6. The interrupt handler then proceeds as required, saving the registers which are used and restoring them at the end. During this phase, an interrupt of priority higher than the current level will restart the sequence from step 1. Note that if the interrupt is programmed to be level-sensitive, the source of the interrupt must be cleared during this phase.
- 7. The I bit in the CPSR must be set in order to mask interrupts before exiting to ensure that the interrupt is completed in an orderly manner.
- 8. The service routine should then connect to the common exit routine.
- 9. The End Of Interrupt Command Register (AIC_EOICR) must be written in order to indicate to the AIC that the current interrupt is finished. This causes the current level to be popped from the stack, restoring the previous current level if one exists. If another interrupt with lower or equal priority than the old current level is pending, the nIRQ line is re-asserted but the interrupt sequence does not immediately start because the I bit is set in the core.





- 10. The SPSR (SPSR_IRQ) is restored. Finally, the saved value of the Link Register is restored directly into the PC. This has the effect of returning from the interrupt to the step previously executed, of loading the CPSR with the stored SPSR and of masking or unmasking the interrupts depending on the state saved in the SPSR (the previous state of the ARM core).
- Note: The I bit in the SPSR is significant. If it is set, it indicates that the ARM core was just about to mask IRQ interrupts when the mask instruction was interrupted. Hence, when the SPSR is restored, the mask instruction is completed (IRQ is masked).

17.4 Fast Interrupt

The external FIQ line is the only source which can raise a fast interrupt request to the processor. Therefore it has no priority controller. It can be programmed to be positive- or negativeedge triggered or high- or low-level sensitive in the AIC_SMR0 register.

The fast interrupt handler address can be stored in the AIC_SVR0 register. The value written into this register is available by reading the AIC_FVR register when an FIQ interrupt is raised. By storing the following instruction at address 0x0000001C, the processor will load the program counter with the interrupt handler address stored in the AIC_FVR register.

LDR PC, [PC, #-&F20]

Alternatively, the interrupt handler can be stored starting from address 0x0000001C as described in the ARM7TDMI datasheet.

17.4.1 Fast Interrupt Sequence

It is assumed that:

- The advanced interrupt controller has been programmed, AIC_SVR[0] is loaded with the fast interrupt service routine address and the fast interrupt is enabled.
- Nested fast interrupts are not needed by the user.

When nFIQ is asserted, if the F bit of CPSR is 0, the sequence is:

- The CPSR is stored in SPSR_fiq, the current value of the Program Counter is loaded in the FIQ link register (R14_FIQ) and the Program Counter (R15) is loaded with 0x1C. In the following cycle, during fetch at address 0x20, the ARM core adjusts R14_FIQ, decrementing it by 4.
- 2. The ARM core enters FIQ mode.
- 3. When the instruction loaded at address 0x1C is executed, the Program Counter is loaded with the value read in AIC_FVR. Reading the AIC_FVR has the effect of clearing the fast interrupt (source 0 connected to the FIQ line) if it has been programmed to be edge-triggered. In this case only, it de-asserts the nFIQ line on the processor.
- The previous step establishes a connection to the corresponding interrupt service routine. It is not necessary to save the Link Register (R14_FIQ) and the SPSR (SPSR_FIQ) if nested fast interrupts are not needed.
- 5. The interrupt handler can then proceed as required. It is not necessary to save registers R8 to R13 because FIQ mode has its own dedicated registers and the user R8 to R13 are banked. The other registers, R0 to R7, must be saved before being used and restored at the end (before the next step). Note that if the fast interrupt is programmed to be level- sensitive, the source of the interrupt must be cleared during this phase in order to de-assert the nFIQ line.
- 6. Finally, the Link Register (R14_FIQ) is restored into the PC after decrementing it by 4 (e.g., with instruction SUB PC, LR, #4). This has the effect of returning from the inter-

rupt to the step previously executed, of loading the CPSR with the SPSR and of masking or unmasking the fast interrupt depending on the state saved in the SPSR.

Note: The F bit in the SPSR is significant. If it is set, it indicates that the ARM core was just about to mask FIQ interrupts when the mask instruction was interrupted. Hence, when the SPSR is restored, the interrupted instruction is completed (FIQ is masked).

17.5 Software Interrupt

Any interrupt source of the AIC can be a software interrupt. It must be programmed to be edge-triggered in order to set or clear it by writing to the AIC_ISCR and AIC_ICCR. This is totally independent of the SWI instruction of the ARM7TDMI processor.

17.6 Spurious Interrupt

A spurious interrupt is a signal of very short duration on one of the interrupt input lines. A spurious interrupt also arises when an interrupt is triggered and masked in the same cycle.

17.6.1 Spurious Interrupt Sequence

A spurious interrupt is handled by the following sequence of actions.

- 1. When an interrupt is active, the AIC asserts the nIRQ (or nFIQ) line and the ARM7TDMI enters IRQ (or FIQ) mode. At this moment, if the interrupt source disappears, the nIRQ (or nFIQ) line is de-asserted but the ARM7TDMI continues with the interrupt handler.
- 2. If the IRQ Vector Register (AIC_IVR) is read when the nIRQ is not asserted, the AIC_IVR is read with the contents of the Spurious Interrupt Vector Register.
- 3. If the FIQ Vector Register (AIC_FVR) is read when the nFIQ is not asserted, the AIC_FVR is read with the contents of the Spurious Interrupt Vector Register.
- 4. The Spurious ISR must write an End of Interrupt command as a minimum, however, it is sufficient to write to the End of Interrupt Command Register (AIC_EOICR). Until the AIC_EOICR write is received by the interrupt controller, the nIRQ (or nFIQ) line is not re-asserted.
- 5. This causes the ARM7TDMI to jump into the Spurious Interrupt Routine.
- 6. During a spurious ISR, the AIC_ISR reads 0.





17.7 AIC User Interface

Base Address: 0xFF030000 with double mapping at address 0xFFFF F000

Table 17-2.	AIC Register Mapping
-------------	----------------------

Offset	Register	Register Name	Access	Reset State
0x000	Source Mode Register 0	AIC_SMR0	Read/Write	0
0x004	Source Mode Register 1	AIC_SMR1	Read/Write	0
-	_	-	_	_
0x07C	Source Mode Register 31	AIC_SMR31	Read/Write	0
0x080	Source Vector Register 0	AIC_SVR0	Read/Write	0
0x084	Source Vector Register 1	AIC_SVR1	Read/Write	0
-	_	-	_	_
0xFC0	Source Vector Register 31	AIC_SVR31	Read/Write	0
0x100	IRQ Vector Register	AIC_IVR	Read-only	0
0x104	FIQ Vector Register	AIC_FVR	Read-only	0
0x108	Interrupt Status Register	AIC_ISR	Read-only	0
0x10C	Interrupt Pending Register	AIC_IPR	Read-only	(1)
0x110	Interrupt Mask Register	AIC_IMR	Read-only	0
0x114	Core Interrupt Status Register	AIC_CISR	Read-only	0
0x118	Reserved	-	_	_
0x11C	Reserved	-	-	_
0x120	Interrupt Enable Command Register	AIC_IECR	Write-only	_
0x124	Interrupt Disable Command Register	AIC_IDCR	Write-only	_
0x128	Interrupt Clear Command Register	AIC_ICCR	Write-only	_
0x12C	Interrupt Set Command Register	AIC_ISCR	Write-only	-
0x130	End-of-interrupt Command Register	AIC_EOICR	Write-only	_
0x134	Spurious Interrupt Vector Register	AIC_SPU	Read/Write	0

Note: 1. The reset value of this register depends on the level of the external IRQ lines. All other sources are cleared at reset.

78 AT91C140

17.7.1 AIC Source Mode Register

Register Name Access Type:		AIC_SMR0AIC_SMR31 Read/Write								
31	30	29	28	27	26	25	24			
-	_	-	-	-	-	-	-			
23	22	21	20	19	18	17	16			
-	-	-	-	-	-	-	-			
15	14	13	12	11	10	9	8			
-	_	-	-	-	-	-	-			
7	6	5	4	3	2	1	0			
_	SRC	SRCTYPE – – PRIOR								

• PRIOR: Priority Level

Programs the priority level for all sources except source 0 (FIQ).

The priority level can be between 0 (lowest) and 7 (highest).

The priority level is not used for the FIQ in the SMR0.

• SRCTYPE: Interrupt Source Type

Programs the input to be positive- or negative-edge triggered or positive- or negative-level sensitive.

The active level or edge is not programmable for the internal sources.

SRC	ТҮРЕ	Internal Sources	External Sources
0	0	Level-sensitive	Low-level sensitive
0	1	Edge-triggered	Negative-edge triggered
1	0	Level-sensitive	High-level sensitive
1	1	Edge-triggered	Positive-edge triggered





17.7.2 AIC Source Vector Registers

Register Name: Access Type:	AIC_SV Read/W	/R0AIC_SVR3 /rite	1				
31	30	29	28	27	26	25	24
			Veo	ctor			
23	22	21	20	19	18	17	16
			Veo	ctor			
15	14	13	12	11	10	9	8
			Veo	ctor			
7	6	5	4	3	2	1	0
			Veo	ctor			

• Vector

In these registers, the user may store the addresses of the corresponding handler for each interrupt source.

17.7.3 AIC Inte	rrupt Vector R	egisters					
Register Name: Access Type: Reset Value:	AIC_IVR Read-only 0						
31	30	29	28	27	26	25	24
			IR	QV			
23	22	21	20	19	18	17	16
			IR	νΩ			
15	14	13	12	11	10	9	8
			IR	QV			
7	6	5	4	3	2	1	0
			IR	νΩ			

IRQV

80

The IRQ Vector Register contains the vector programmed by the user in the Source Vector Register corresponding to the current interrupt. The SVR Register (1 to 31) is indexed by the current interrupt number when the IVR register is read. When there is no interrupt, the IRQ register reads 0.

AT91C140

17.7.4 AIC FIQ	Vector Regist	er							
Register Name:	AIC_FVR								
Access Type:	Read-only								
Reset Value:	0								
31	30	29	28	27	26	25	24		
FIQV									
23	22	21	20	19	18	17	16		
			FIC	QV					
15	14	13	12	11	10	9	8		
			FIC	νΩ					
7	6	5	4	3	2	1	0		
			FIC	QV					

• FIQ

The vector register contains the vector programmed by the user in SVR Register 0 which corresponds to FIQ.





17.7.5 AIC Interrupt Status Register

Register Name Access Type:	AIC_ISF Read-or						
31	30	29	28	27	26	25	24
-	_	_	-	-	-	_	-
23	22	21	20	19	18	17	16
-	-	-	-	-	-	-	-
15	14	13	12	11	10	9	8
-	-	-	-	-	-	-	-
7	6	5	4	3	2	1	0
-	-	-			IRQID		

• IRQID

The interrupt status register returns the current interrupt source register.

17.7.6 AIC Interrupt Pending Register

Register Name:AIC_IPR Access Type:Read-only

31	30	29	28	27	26	25	24
0	0	0	0	0	0	0	0
23	22	21	20	19	18	17	16
0	0	0	0	0	0	0	0
15	14	13	12	11	10	9	8
PIOB	UARTB	MACB	0	IRQ1	IRQ0	SPI	MACA
7	6	5	4	3	2	1	0
PIOA	TC2	TC1	TC0	UARTA	SWI	0	FIQ

• Interrupt Pending

0 = Corresponding interrupt is not pending.

1 = Corresponding interrupt is pending.

AT91C140

82

17.7.7 AIC Interrupt Mask Register

31 30	29	28	07			
			27	26	25	24
0 0	0	0	0	0	0	0
23 22	21	20	19	18	17	16
0 0	0	0	0	0	0	0
15 14	13	12	11	10	9	8
PIOB UARTB	MACB	0	IRQ1 ⁽¹⁾	IRQ0	SPI	MACA
7 6	5	4	3	2	1	0
PIOA TC2	TC1	TC0	UARTA	SWI	0	FIQ

• Interrupt Mask

0 = Corresponding interrupt is disabled.

1 = Corresponding interrupt is enabled.

17.7.8 AIC Core Interrupt Status Register

Register Name:	AIC_CISR
Access Type:	Read-only

31	30	29	28	27	26	25	24
-	-	-	-	-	-	-	-
23	22	21	20	19	18	17	16
-	-	-	-	-	-	-	-
15	14	13	12	11	10	9	8
-	-	-	-	-	-	-	-
7	6	5	4	3	2	1	0
-	-	-	-	-	-	NIRQ	nFIQ

• nFIQ: nFIQ Status

0 = nFIQ line inactive.

1 = nFIQ line active.

• NIRQ: nIRQ Status

0 = nIRQ line inactive.

1 = nIRQ line active.

6069C-ATARM-15-Sep-05



17.7.9 AIC Interrupt Enable Command Register

Register Name: Access Type:	AIC_IECI Write-onl						
31	30	29	28	27	26	25	24
0	0	0	0	0	0	0	0
23	22	21	20	19	18	17	16
0	0	0	0	0	0	0	0
15	14	13	12	11	10	9	8
PIOB	UARTB	MACB	0	IRQ1	IRQ0	SPI	MACA
7	6	5	4	3	2	1	0
PIOA	TC2	TC1	TC0	UARTA	SWI	0	FIQ

• Interrupt Enable

0 = No effect.

1 = Enables the corresponding interrupt.

17.7.10 AIC Interrupt Disable Command Register

Register Name:	AIC_IDCR
Access Type:	Write-only

31	30	29	28	27	26	25	24
0	0	0	0	0	0	0	0
23	22	21	20	19	18	17	16
0	0	0	0	0	0	0	0
15	14	13	12	11	10	9	8
PIOB	UARTB	MACB	0	IRQ1	IRQ0	SPI	MACA
7	6	5	4	3	2	1	0
PIOA	TC2	TC1	TC0	UARTA	SWI	0	FIQ

• Interrupt Disable

0 = No effect.

1 = Disables the corresponding interrupt.

84 AT91C140

17.7.11 AIC Interrupt Clear Command Register

Register Name: Access Type:	AIC_ICCI Write-only						
31	30	29	28	27	26	25	24
0	0	0	0	0	0	0	0
23	22	21	20	19	18	17	16
0	0	0	0	0	0	0	0
15	14	13	12	11	10	9	8
PIOB	UARTB	MACB	0	IRQ1	IRQ0	SPI	MACA
7	6	5	4	3	2	1	0
PIOA	TC2	TC1	TC0	UARTA	SWI	0	FIQ

• Interrupt Clear

0 = No effect.

1 = Clears the corresponding interrupt.

17.7.12 AIC Interrupt Set Command Register

Register Name:	AIC_ISCR
Access Type:	Write-only

31	30	29	28	27	26	25	24
0	0	0	0	0	0	0	0
23	22	21	20	19	18	17	16
0	0	0	0	0	0	0	0
15	14	13	12	11	10	9	8
PIOB	UARTB	MACB	0	IRQ1	IRQ0	SPI	MACA
7	6	5	4	3	2	1	0
PIOA	TC2	TC1	TC0	UARTA	SWI	0	FIQ

• Interrupt Set

0 = No effect.

1 = Sets the corresponding interrupt.



17.7.13 AIC End of Interrupt Command Register

Register Name Access Type:	: AIC_EC Write-or						
31	30	29	28	27	26	25	24
-	-	-	-	_	-	_	_
23	22	21	20	19	18	17	16
-	_	-	-	-	-	-	_
15	14	13	12	11	10	9	8
-	_	-	-	-	-	-	-
7	6	5	4	3	2	1	0
-	_	_	-	_	_	_	_

The End of Interrupt Command Register is used by the interrupt routine to indicate that the interrupt treatment is complete. Any value can be written as it is only necessary to make a write to this register location to signal the end of interrupt treatment.

17.7.14 AIC Spurious Interrupt Vector Register

Register Name: Access Type:	AIC_SPU Read/Write						
31	30	29	28	27	26	25	24
			SIC	2V			
23	22	21	20	19	18	17	16
			SIC	2V			
15	14	13	12	11	10	9	8
			SIC	2V			
7	6	5	4	3	2	1	0
			SIC	2V			

SIQV

86

This register contains the 32-bit address of an interrupt routine which is used to treat cases of spurious interrupts.

The programmed address is read in the AIC_IVR if it is read when the nIRQ line is not asserted.

The programmed address is read in the AIC_FVR if it is read when the nFIQ line is not asserted.

AT91C140

18. Parallel I/O Controller (PIO)

The AT91C140 integrates two PIO controllers, PIOA and PIOB. PIOA controls 15 I/O lines and PIOB controls 10 I/O lines. Each I/O line can be programmed as an input or an output and can generate an interrupt on level change.

These pins are used for several functions:

- External I/O for Internal Peripherals
- Keypad Controller Function
- General Purpose I/O

18.1 Output Selection

The user can enable each individual I/O signal as an output with the PIO_OER and PIO_ODR registers. The output status of the I/O signals can be read in the PIO_OSR register. The direction defined has an effect only if the pin is configured to be controlled by the PIO controller.

18.2 I/O Levels

Each pin can be configured to be driven high or low. The level is defined in four different ways, according to the following conditions:

- If a pin is controlled by the PIO controller and is defined as an output, the level is programmed using the PIO_SODR and PIO_CODR registers. In this case, the programmed value can be read in the PIO_ODSR register.
- If a pin is controlled by the PIO controller and is not defined as an output, the level is determined by the external circuit.
- If a pin is not controlled by the PIO controller, the state of the pin is defined by the peripheral.

In all cases, the level on the pin can be read in the register PIO_PDSR.

18.3 Interrupts

Each parallel I/O can be programmed to generate an interrupt when a level change occurs. This is controlled by the PIO_IER and PIO_IDR registers which enable/disable the I/O interrupt by setting/clearing the corresponding bit in PIO_IMR. When a change in level occurs, the corresponding bit in PIO_ISR is set depending on whether the pin is used as a PIO or a peripheral, and whether it is defined as input or output. If the corresponding interrupt in PIO_IMR is enabled, the PIO interrupt is asserted.


When PIO_ISR is read, the register is automatically cleared.





18.4 I/O Line Control



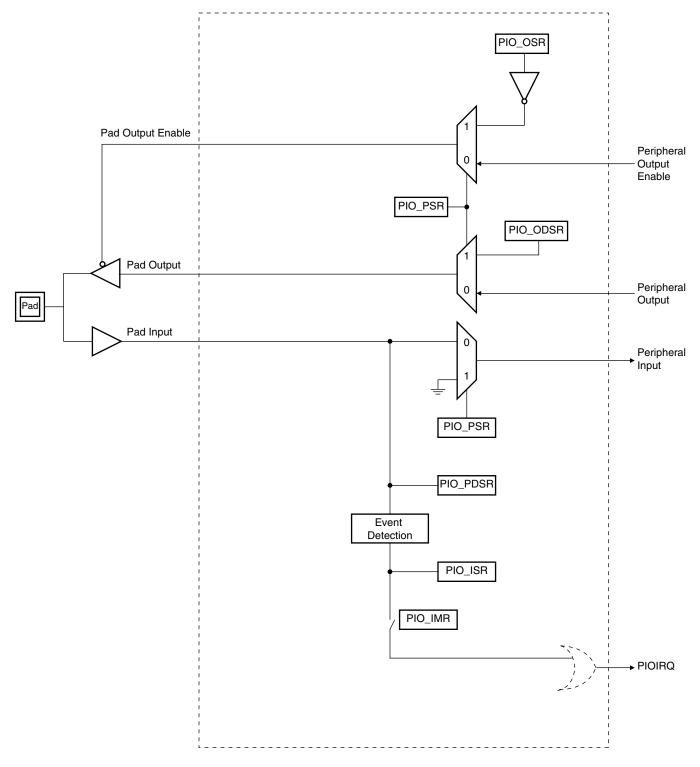

88 **AT91C140**

18.5 Parallel I/O Controller (PIO) User Interface

Each individual I/O is associated with a bit position in the parallel I/O user interface registers. Each of these registers is 32 bits wide. If a parallel I/O line is not defined, writing to the corresponding bits has no effect. Undefined bits read as zero.

Offset	Register Name	Description	Access	Reset Value
0x00	PIO_PER	PIO Enable Register	Write-only	-
0x04	PIO_PDR	PIO Disable Register	Write-only	_
0x08	PIO_PSR	PIO Status Register	Read-only	-
0x0C	_	Reserved	_	-
0x10	PIO_OER	Output Enable Register	Write-only	-
0x14	PIO_ODR	Output Disable Register	Write-only	-
0x18	PIO_OSR	Output Status Register	Read-only	0x0
0x1C	_	Reserved	_	_
0x20	_	Reserved	_	-
0x24	-	Reserved	_	-
0x28	-	Reserved	_	0x0
0x2C	_	Reserved	_	-
0x30	PIO_SODR	Set Output Data Register	Write-only	-
0x34	PIO_CODR	Clear Output Data Register	Write-only	_
0x38	PIO_ODSR	Output Data Status Register	Read-only	0x0
0x3C	PIO_PDSR ⁽¹⁾	Pin Data Status Register	Read-only	See Note 1
0x40	PIO_IER	Interrupt Enable Register	Write-only	-
0x44	PIO_IDR	Interrupt Disable Register	Write-only	-
0x48	PIO_IMR	Interrupt Mask Register	Read-only	-
0x4C	PIO_ISR ⁽²⁾	Interrupt Status Register	Read-only	See Note 2

 Table 18-1.
 PIO Controller Memory Map

Notes: 1. The reset value of this register depends on the level of the external pins at reset.

2. This register is cleared at reset. However, the first read of the register can give a value not equal to zero if any changes have occurred on any pins between the reset and the read.



18.5.1PIO Enable RegisterRegister Name:PIO_PER

Access Type:	Write-	only					
31	30	29	28	27	26	25	24
P31	P30	P29	P28	P27	P26	P25	P24
23	22	21	20	19	18	17	16
P23	P22	P21	P20	P19	P18	P17	P16
15	14	13	12	11	10	9	8
P15	P14	P13	P12	P11	P10	P9	P8
7	6	5	4	3	2	1	0
P7	P6	P5	P4	P3	P2	P1	P0

This register is used to enable individual pins to be controlled by the PIO controller instead of the associated peripheral. When the PIO is enabled, the associated peripheral (if any) is held at logic zero.

1 = Enables the PIO to control the corresponding pin (disables peripheral control of the pin).

0 = No effect.

18.5.2PIO Disable RegisterRegister Name:PIO_PDR

Access Type: Write-only

31	30	29	28	27	26	25	24
P31	P30	P29	P28	P27	P26	P25	P24
23	22	21	20	19	18	17	16
P23	P22	P21	P20	P19	P18	P17	P16
15	14	13	12	11	10	9	8
P15	P14	P13	P12	P11	P10	P9	P8
7	6	5	4	3	2	1	0
P7	P6	P5	P4	P3	P2	P1	P0

This register is used to disable PIO control of individual pins. When the PIO control is disabled, the normal peripheral function is enabled on the corresponding pin.

1 = Disables PIO control (enables peripheral control) on the corresponding pin.

0 = No effect.

AT91C140

90

18.5.3 PIO Status Register

Register Name: Access Type:	PIO_F Read-						
31	30	29	28	27	26	25	24
P31	P30	P29	P28	P27	P26	P25	P24
23	22	21	20	19	18	17	16
P23	P22	P21	P20	P19	P18	P17	P16
15	14	13	12	11	10	9	8
P15	P14	P13	P12	P11	P10	P9	P8
7	6	5	4	3	2	1	0
P7	P6	P5	P4	P3	P2	P1	P0

This register indicates which pins are enabled for PIO control. This register is updated when PIO lines are enabled or disabled.

1 = PIO is active on the corresponding line (peripheral is inactive).

0 = PIO is inactive on the corresponding line (peripheral is active).

18.5.4	ΡΙΟ Οι	tput Enable Register
Register	Name:	PIO OER

Access Type:	Write-						
31	30	29	28	27	26	25	24
P31	P30	P29	P28	P27	P26	P25	P24
23	22	21	20	19	18	17	16
P23	P22	P21	P20	P19	P18	P17	P16
15	14	13	12	11	10	9	8
P15	P14	P13	P12	P11	P10	P9	P8
7	6	5	4	3	2	1	0
P7	P6	P5	P4	P3	P2	P1	P0

This register is used to enable PIO output drivers. If the pin is driven by a peripheral, there is no effect on the pin but the information is stored. The register is programmed as follows:

1 = Enables the PIO output on the corresponding pin.

0 = No effect.





18.5.5 PIO Output Disable Register

Access Type:	Write-						
31	30	29	28	27	26	25	24
P31	P30	P29	P28	P27	P26	P25	P24
23	22	21	20	19	18	17	16
P23	P22	P21	P20	P19	P18	P17	P16
15	14	13	12	11	10	9	8
P15	P14	P13	P12	P11	P10	P9	P8
7	6	5	4	3	2	1	0
P7	P6	P5	P4	P3	P2	P1	P0

This register is used to disable PIO output drivers. If the pin is driven by the peripheral, there is no effect on the pin, but the information is stored. The register is programmed as follows:

1 = Disables the PIO output on the corresponding pin.

PIO OSR

0 = No effect.

Register Name:

18.5.6 PIO Output Status Register

Access Type:	Read-	only					
31	30	29	28	27	26	25	24
P31	P30	P29	P28	P27	P26	P25	P24
23	22	21	20	19	18	17	16
P23	P22	P21	P20	P19	P18	P17	P16
15	14	13	12	11	10	9	8
P15	P14	P13	P12	P11	P10	P9	P8
7	6	5	4	3	2	1	0
P7	P6	P5	P4	P3	P2	P1	P0

This register shows the PIO pin control (output enable) status which is programmed in PIO_OER and PIO ODR. The defined value is effective only if the pin is controlled by the PIO. The register reads as follows:

1 = The corresponding PIO is output on this line.

0 = The corresponding PIO is input on this line.

AT91C140

92

18.5.7 PIO Set Output Data Register

Register Name Access Type:	: PIO_S Write-	SODR only					
31	30	29	28	27	26	25	24
P31	P30	P29	P28	P27	P26	P25	P24
23	22	21	20	19	18	17	16
P23	P22	P21	P20	P19	P18	P17	P16
15	14	13	12	11	10	9	8
P15	P14	P13	P12	P11	P10	P9	P8
7	6	5	4	3	2	1	0
P7	P6	P5	P4	P3	P2	P1	P0

This register is used to set PIO output data. It affects the pin only if the corresponding PIO output line is enabled and if the pin is controlled by the PIO. Otherwise, the information is stored.

1 = PIO output data on the corresponding pin is set.

0 = No effect.

18.5.8 PIO Clear Output Data Register

Register Name: Access Type:	PIO_C Write-						
31	30	29	28	27	26	25	24
P31	P30	P29	P28	P27	P26	P25	P24
23	22	21	20	19	18	17	16
P23	P22	P21	P20	P19	P18	P17	P16
15	14	13	12	11	10	9	8
P15	P14	P13	P12	P11	P10	P9	P8
7	6	5	4	3	2	1	0
P7	P6	P5	P4	P3	P2	P1	P0

This register is used to clear PIO output data. It affects the pin only if the corresponding PIO output line is enabled and if the pin is controlled by the PIO. Otherwise, the information is stored.

1 = PIO output data on the corresponding pin is cleared.

0 = No effect.





18.5.9 PIO Output Data Status Register

Register Name: Access Type:	: PIO_0 Read-						
31	30	29	28	27	26	25	24
P31	P30	P29	P28	P27	P26	P25	P24
23	22	21	20	19	18	17	16
P23	P22	P21	P20	P19	P18	P17	P16
15	14	13	12	11	10	9	8
P15	P14	P13	P12	P11	P10	P9	P8
7	6	5	4	3	2	1	0
P7	P6	P5	P4	P3	P2	P1	P0

This register shows the output data status which is programmed in PIO_SODR or PIO_CODR. The defined value is effective only if the pin is controlled by the PIO Controller and only if the pin is defined as an output.

1 = The output data for the corresponding line is programmed to 1.

0 = The output data for the corresponding line is programmed to 0.

18.5.10 PIO Pin Data Status Register

Register Name: Access Type:	PIO_P Read-o	DSR					
31	30	29	28	27	26	25	24
P31	P30	P29	P28	P27	P26	P25	P24
23	22	21	20	19	18	17	16
P23	P22	P21	P20	P19	P18	P17	P16
15	14	13	12	11	10	9	8
P15	P14	P13	P12	P11	P10	P9	P8
7	6	5	4	3	2	1	0
P7	P6	P5	P4	P3	P2	P1	P0

This register shows the state of the physical pin of the chip. The pin values are always valid, regardless of whether the pins are enabled as PIO, peripheral, input or output. The register reads as follows:

1 = The corresponding pin is at logic 1.

0 = The corresponding pin is at logic 0.

AT91C140 🚃

94

18.5.11 PIO Interrupt Enable Register

Register Name: Access Type:	PIO_IE Write-c						
31	30	29	28	27	26	25	24
P31	P30	P29	P28	P27	P26	P25	P24
23	22	21	20	19	18	17	16
P23	P22	P21	P20	P19	P18	P17	P16
15	14	13	12	11	10	9	8
P15	P14	P13	P12	P11	P10	P9	P8
7	6	5	4	3	2	1	0
P7	P6	P5	P4	P3	P2	P1	P0

This register is used to enable PIO interrupts on the corresponding pin. It has an effect whether PIO is enabled or not.

1 = Enables an interrupt when a change of logic level is detected on the corresponding pin.

0 = No effect.

18.5.12 PIO Interrupt Disable Register

Register Name: Access Type:	PIO_ID Write-c						
31	30	29	28	27	26	25	24
P31	P30	P29	P28	P27	P26	P25	P24
23	22	21	20	19	18	17	16
P23	P22	P21	P20	P19	P18	P17	P16
15	14	13	12	11	10	9	8
P15	P14	P13	P12	P11	P10	P9	P8
7	6	5	4	3	2	1	0
P7	P6	P5	P4	P3	P2	P1	P0

This register is used to disable PIO interrupts on the corresponding pin. It has an effect whether the PIO is enabled or not.

1 = Disables the interrupt on the corresponding pin. Logic level changes are still detected.

0 = No effect.





18.5.13 PIO Interrupt Mask Register

Access Type:	Read-						
31	30	29	28	27	26	25	24
P31	P30	P29	P28	P27	P26	P25	P24
23	22	21	20	19	18	17	16
P23	P22	P21	P20	P19	P18	P17	P16
15	14	13	12	11	10	9	8
P15	P14	P13	P12	P11	P10	P9	P8
7	6	5	4	3	2	1	0
P7	P6	P5	P4	P3	P2	P1	P0

This register shows which pins have interrupts enabled. It is updated when interrupts are enabled or disabled by writing to PIO_IER or PIO_IDR.

1 = Interrupt is enabled on the corresponding pin.

0 = Interrupt is not enabled on the corresponding pin.

18.5.14 PIO Interrupt Status Register

Register Name: Access Type:	PIO_IS Read-o						
31	30	29	28	27	26	25	24
P31	P30	P29	P28	P27	P26	P25	P24
23	22	21	20	19	18	17	16
P23	P22	P21	P20	P19	P18	P17	P16
15	14	13	12	11	10	9	8
P15	P14	P13	P12	P11	P10	P9	P8
7	6	5	4	3	2	1	0
P7	P6	P5	P4	P3	P2	P1	P0

This register indicates for each pin when a logic value change has been detected (rising or falling edge). This is valid whether the PIO is selected for the pin or not and whether the pin is an input or an output.

The register is reset to zero following a read and at reset.

1 = At least one input change has been detected on the corresponding pin since the register was last read.

0 = No input change has been detected on the corresponding pin since the register was last read.

AT91C140

96

19. Universal Asynchronous Receiver Transmitter (UART)


The AT91C140 provides two identical full-duplex Universal Asynchronous Receiver Transmitters, UART A and UART B. These peripherals sit on the APB bus but are also connected to the ASB bus (and hence external memory) via a dedicated PDC.

The main features are:

- Programmable Baud Rate Generator
- Parity, Framing and Overrun Error Detection
- Line Break Generation and Detection
- Automatic Echo, Local Loopback and Remote Loopback Channel Modes
- Interrupt Generation
- Two Dedicated Peripheral Data Controller Channels
- 6-, 7- and 8-bit Character Length
- Modem Control Signals

19.1 Block Diagram



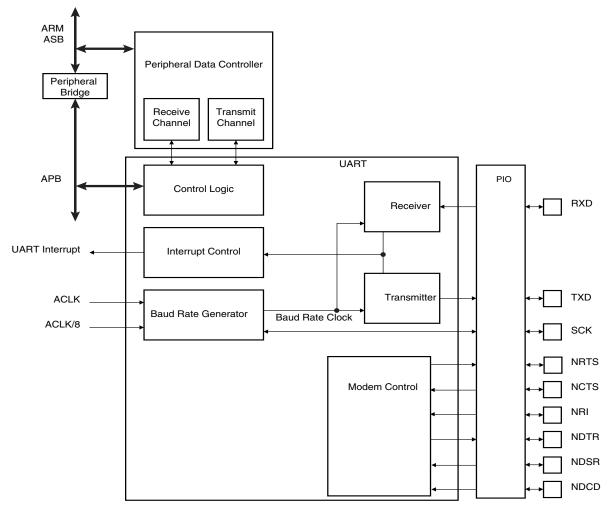



19.2 Pin Description

Each UART channel has external signals as defined in Table 19-1.

Table 19-1. UART Pins

Signal Name	Description	Туре
SCK	UART Serial Clock. Can be configured as input or output. See US_MR	I/O
TXD	Transmit Serial Data	Output
RXD	Receive Serial Data	Input
NRTS	Request to Send	Output
NCTS	Clear to Send	Input
NDTR	Data Terminal Ready	Output
NDSR	Data Set Ready	Input
NDCD	Data Carrier Detect	Input
NRI	Ring Indicator	Input

19.3 Baud Rate Generator

The baud rate generator provides the bit period clock (the baud rate clock) to both the receiver and the transmitter.

The baud rate generator can select between external and internal clock sources. The external clock source is SCK. The internal clock sources can be either the ARM Clock (ACLK) or the ARM Clock divided by 8 (ACLK/8).

Note: In all cases, if an external clock is used, the duration of each of its levels must be longer than the system clock (ACLK) period. The external clock frequency must be at least 2.5 times lower than the system clock.

The selected clock is divided by 16 times the value (CD) written in US_BRGR (Baud Rate Generator Register). If US_BRGR is set to 0, the baud rate clock is disabled.

Baud Rate = Selected Clock 16 x CD


Table 19-2. Clock Generator Table with Crystal Frequency of 16 MHz


Required Baud Rate					
(bps)	CD	Actual CD	Actual Baud Rate (bps)	Error (bps)	% Error
9600	260.42	260	9615.385	15,38	0.16
19200	130.21	130	19230.77	30.77	0.16
38400	65.10	65	38461.54	61.54	0.16
57600	43.41	43	58139.53	539.53	0.94
115200	21.70	22	113636.40	-1163.64	-1.36

www.BDTIC.com/ATMEL

AT91C140

98



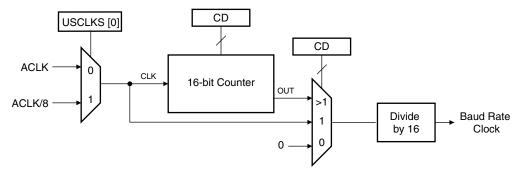

19.4 Receiver Operations

The UART detects the start of a received character by sampling the RXD signal until it detects a valid start bit. A low level (space) on RXD is interpreted as a valid start bit if it is detected for more than seven cycles of the sampling clock, which is 16 times the baud rate. Hence, a space which is longer than 7/16 of the bit period is detected as a valid start bit. A space which is 7/16 of a bit period or shorter is ignored and the receiver continues to wait for a valid start bit.

When a valid start bit has been detected, the receiver samples the RXD at the theoretical midpoint of each bit. It is assumed that each bit lasts 16 cycles of the sampling clock (1-bit period) so the sampling point is eight cycles (0.5-bit periods) after the start of the bit. The first sampling point is therefore 24 cycles (1.5-bit periods) after the falling edge of the start bit was detected. Each subsequent bit is sampled 16 cycles (1-bit period) after the previous one.

Figure 19-3. Start Bit Detection


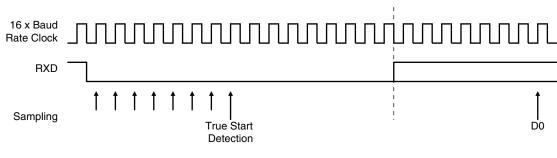


Figure 19-4. Character Reception









19.4.1 Receiver Ready

When a complete character is received, it is transferred to the US_RHR and the RXRDY status bit in US_CSR is set. If US_RHR has not been read since the last transfer, the OVRE status bit in US_CSR is set.

19.4.2 Parity Error

Each time a character is received, the receiver calculates the parity of the received data bits in accordance with the field PAR in US_MR. It then compares the result with the received parity bit. If different, the parity error bit PARE in US_CSR is set.

19.4.3 Framing Error

If a character is received with a stop bit at low level and with at least one data bit at high level, a framing error is generated. This sets FRAME in US_CSR.

19.4.4 Time-out

This function allows an idle condition on the RXD line to be detected. The maximum delay for which the UART should wait for a new character to arrive while the RXD line is inactive (high level) is programmed in US_RTOR. When this register is set to 0, no time-out is detected. Otherwise, the receiver waits for a first character and then initializes a counter which is decremented at each bit period and reloaded at each byte reception. When the counter reaches 0, the TIMEOUT bit in US_CSR is set. The user can restart the wait for a first character with the STTTO (Start Time-out) bit in US_CR.

Calculation of time-out duration:

Duration = Value \times 4 \times Bit Period

19.5 Transmitter

Start bit, data bits, parity bit and stop bits are serially shifted, lowest significant bit first, on the falling edge of the serial clock.

The number of data bits is selected in the CHRL field in US_MR.


The parity bit is set according to the PAR field in US_MR.

The number of stop bits is selected in the NBSTOP field in US_MR.

When a character is written to US_THR, it is transferred to the Shift Register as soon as it is empty. When the transfer occurs, the TXRDY bit in US_CSR is set until a new character is written to US_THR. If the Transmit Shift Register and US_THR are both empty, the TXEMPTY bit in US_CSR is set.

Figure 19-5. Character Transmission

Example: 8-bit, parity enabled 1 stop

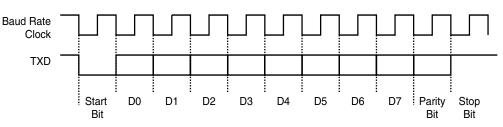

100 **AT91C140**

6069C-ATARM-15-Sep-05

19.5.1 Time-guard

The time-guard function allows the transmitter to insert an idle state on the TXD line between two characters. The duration of the idle state is programmed in US_TTGR. When this register is set to zero, no time-guard is generated. Otherwise, the transmitter holds a high level on TXD after each transmitted byte during the number of bit periods programmed in US_TTGR.

Idle state duration = Time-guard x Bit between two characters = value x period

19.6 Channel Modes


The UART can be programmed to operate in three different test modes using the field CHMODE in US_MR.

Automatic echo mode allows bit-by-bit re-transmission. When a bit is received on the RXD line, it is sent to the TXD line. Programming the transmitter has no effect.


Local loopback mode allows the transmitted characters to be received. TXD and RXD pins are not used and the output of the transmitter is internally connected to the input of the receiver. The RXD pin level has no effect and the TXD pin is held high, as in idle state.


Remote loopback mode directly connects the RXD pin to the TXD pin. The transmitter and the receiver are disabled and have no effect. This mode allows bit-by-bit re-transmission.

Figure 19-6. Channel Modes

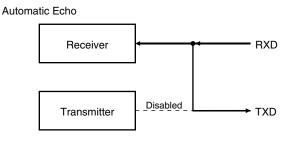





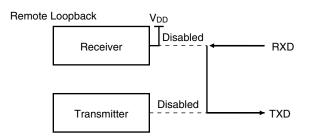



<u>AIMEL</u>

19.7 Peripheral Data Controller

Each UART channel is closely connected to a corresponding peripheral data controller channel. One is dedicated to the receiver, the other is dedicated to the transmitter.

The PDC channel is programmed using US_TPR and US_TCR for the transmitter and US_RPR and US_RCR for the receiver. The status of the PDC is given in US_CSR by the ENDTX bit for the transmitter and by the ENDRX bit for the receiver.

The pointer registers US_TPR and US_RPR are used to store the address of the transmit or receive buffers. The counter registers US_TCR and US_RCR are used to store the size of these buffers.

The receiver data transfer is triggered by the RXRDY bit and the transmitter data transfer is triggered by TXRDY. When a transfer is performed, the counter is decremented and the pointer is incremented. When the counter reaches 0, the status bit is set (ENDRX for the receiver, ENDTX for the transmitter in US_CSR) and can be programmed to generate an interrupt. Transfers are then disabled until a new non-zero counter value is programmed.

19.8 Modem Control and Status Signals

19.8.1 NCTS: Clear to Send

When low, this indicates that the modem or data set is ready to exchange data. The NCTS signal is a modem status input; its conditions can be tested by the CPU reading bit 4 (CTS) of the Modem Status Register. Bit 4 is the complement of the NCTS signal. Bit 0 (DCTS) of the Modem Status Register indicates whether the NCTS input has changed state since the previous read of the Modem Status Register. NCTS has no effect on the transmitter.

19.8.2 NDCD: Data Carrier Detect

When low, this indicates that the data carrier has been detected by the modem or data set. The NDCD signal is a modem status input; its condition can be tested by the CPU reading bit 7 (DCD) of the Modem Status Register. Bit 7 is the complement of the NDCD signal. Bit 3 (DDCD) of the Modem Status Register indicates whether the NDCD input pin has changed since the previous reading of the Modem Status Register. NDCD has no effect on the receiver.

19.8.3 NDSR: Data Set Ready

When low, this informs the modem or data set that the UART is ready to communicate. The NDSR signal is a modem status input; its condition can be tested by the CPU reading bit 5 (DSR) of the Modem Status Register. Bit 5 is the complement of the NDSR signal. Bit 1 (DDSR of the Modem Status Register) indicates whether the NDSR input has changed state since the previous read of the Modem Status Register.

19.8.4 NDTR: Data Terminal Ready

When low, this informs the modem or data set that the UART is ready to communicate. The NDTR output signal can be set to active low by programming bit 0 (DTR) of the Modem Control Register to a high level. A master reset operation sets this signal to its inactive (high) state. Loop mode operation holds this signal in its inactive state.

19.8.5 NRI: Ring Indicator

When low, this indicates that a telephone ringing signal has been received by the modem or data set. The NRI signal is a modem status input; its condition can be tested by the CPU reading bit 6 (RI) of the Modem Status Register. Bit 6 is the complement of the NRI signal. Bit 2

102 AT91C140

(TERI) of the Modem Status Register indicates whether the NRI input signal has changed from a low to a high state since the previous read of the Modem Status Register.

19.8.6 NRTS: Request to Send

When low, this informs the modem or data set that the UART is ready to exchange data. The NRTS output signal can be set to an active low by programming bit 1 (RTS) of the Modem Control Register. A master reset operation sets this signal to its inactive (high) state.





19.9 Universal Asynchronous Receiver/Transmitter (UART) User Interface

Offset	Register Name	Description	Access	Reset Value
0x00	US_CR	Control Register	Write-only	-
0x04	US_MR	Mode Register	Read/Write	0
0x08	US_IER	Interrupt Enable Register	Write-only	-
0x0C	US_IDR	Interrupt Disable Register	Write-only	-
0x10	US_IMR	Interrupt Mask Register	Read-only	0
0x14	US_CSR	Channel Status Register	Read-only	0x18
0x18	US_RHR	Receiver Holding Register	Read-only	0
0x1C	US_THR	Transmitter Holding Register	Write-only	_
0x20	US_BRGR	Baud Rate Generator Register	Read/Write	0
0x24	US_RTOR	Receiver Time-out Register	Read/Write	0
0x28	US_TTGR	Transmitter Time-guard Register	Read/Write	0
0x2C	_	Reserved	_	_
0x30	US_RPR	Receive Pointer Register	Read/Write	0
0x34	US_RCR	Receive Counter Register	Read/Write	0
0x38	US_TPR	Transmit Pointer Register	Read/Write	0
0x3C	US_TCR	Transmit Counter Register	Read/Write	0
0x40	US_MC	Modem Control Register Write-only		_
0x44	US_MS	Modem Status Register	Read-only	

Table 19-3.UART Memory Map

104 AT91C140

19.9.1 UART Control Register

Name: Access Type:	US_C Write-						
31	30	29	28	27	26	25	24
-	-	-	-	-	-	-	-
23	22	21	20	19	18	17	16
-	-	-	-	-	-	-	-
15	14	13	12	11	10	9	8
_	-	-	-	-	-	-	RSTSTA
7	6	5	4	3	2	1	0
TXDIS	TXEN	RXDIS	RXEN	RSTTX	RSTRX	_	_

• RSTRX: Reset Receiver

- 0 = No effect.
- 1 = The receiver logic is reset.
- RSTTX: Reset Transmitter
- 0 = No effect.
- 1 = The transmitter logic is reset.

• RXEN: Receiver Enable

- 0 = No effect.
- 1 = The receiver is enabled if RXDIS is 0.

• RXDIS: Receiver Disable

- 0 = No effect.
- 1 = The receiver is disabled.

• TXEN: Transmitter Enable

- 0 = No effect.
- 1 = The transmitter is enabled if TXDIS is 0.

• TXDIS: Transmitter Disable

- 0 = No effect.
- 1 = The transmitter is disabled.

• RSTSTA: Reset Status Bits

- 0 = No effect.
- 1 = Resets the status bits PARE, FRAME, OVRE and RXBRK in the US_CSR.



19.9.2 UART Mode Register

Name: Access Type:	US_M Read/\						
31	30	29	28	27	26	25	24
-	-	-	-	-	-	-	-
23	22	21	20	19	18	17	16
-	-	-	-	-	-	-	-
15	14	13	12	11	10	9	8
CHM	CHMODE NBSTOP		PAR			-	
7	6	5	4	3	2	1	0
CH	IRL	US	CLKS	_	-	_	-

• USCLKS: Clock Selection

USCLKS		Selected Clock
0	0	ACLK
0	1	ACLK/8
1	Х	External (SCK)

• CHRL: Character Length

CHRL		Character Length
0	0	Five bits
0	1	Six bits
1	0	Seven bits
1	1	Eight bits

• PAR: Parity Type

PAR			Parity Type
0	0	0	Even parity
0	0	1	Odd parity
0	1	0	Parity forced to 0 (space)
0	1	1	Parity forced to 1 (mark)
1	0	х	No parity

• NBSTOP: Number of Stop Bits

NBS	ТОР	
0	0	1 stop bit
0	1	1.5 stop bits
1	0	2 stop bits
1	1	Reserved



• CHMODE: Channel Mode

CHM	IODE	Mode Description
0	0	Normal Mode The UART channel operates as an Rx/Tx UART.
0	1	Automatic Echo Receiver data input is connected to TXD pin.
1	0	Local Loopback Transmitter output signal is connected to receiver input signal.
1	1	Remote Loopback RXD pin is internally connected to TXD pin.





19.9.3 UART Interrupt Enable Register

Name: Access Type:	US_IE Write-						
31	30	29	28	27	26	25	24
-	-	-	-	-	-	-	-
23	22	21	20	19	18	17	16
-	-	-	-	-	-	-	-
15	14	13	12	11	10	9	8
_	_	_	_	_	DMSI	TXEMPTY	-
7	6	5	4	3	2	1	0
PARE	FRAME	OVRE	ENDTX	ENDRX	-	TXRDY	RXRDY

- RXRDY: Enable RXRDY Interrupt
- TXRDY: Enable TXRDY Interrupt
- ENDRX: Enable End of Receive Transfer Interrupt
- ENDTX: Enable End of Transmit Transfer Interrupt
- OVRE: Enable Overrun Error Interrupt
- FRAME: Enable Framing Error Interrupt
- PARE: Enable Parity Error Interrupt
- TXEMPTY: Enable TXEMPTY Interrupt
- DMSI: Delta Modem Interrupt
- 0 = No effect.
- 1 = Enables the corresponding interrupt.

19.10 UART Interrupt Disable Register

Name: Access Type:	US_ID Write-	DR					
31	30	29	28	27	26	25	24
-	-	-	-	-	-	-	-
23	22	21	20	19	18	17	16
-	-	-	-	-	-	-	-
15	14	13	12	11	10	9	8
-	-	-	-	-	DMSI	TXEMPTY	-
7	6	5	4	3	2	1	0
PARE	FRAME	OVRE	ENDTX	ENDRX	_	TXRDY	RXRDY

- RXRDY: Disable RXRDY Interrupt
- TXRDY: Disable TXRDY Interrupt
- ENDRX: Disable End of Receive Transfer Interrupt
- ENDTX: Disable End of Transmit Transfer Interrupt
- OVRE: Disable Overrun Error Interrupt
- FRAME: Disable Framing Error Interrupt
- PARE: Disable Parity Error Interrupt
- TXEMPTY: Disable TXEMPTY Interrupt
- DMSI: Disable Delta Modem Interrupt
- 0 = No effect.
- 1 = Disables the corresponding interrupt.





19.11 UART Interrupt Mask Register

Name: Access Type:	US_IN Read-						
31	30	29	28	27	26	25	24
-	_	-	-	-	_	-	-
23	22	21	20	19	18	17	16
-	-	-	-	-	-	-	-
15	14	13	12	11	10	9	8
-	_	-	-	-	DMSI	TXEMPTY	-
7	6	5	4	3	2	1	0
PARE	FRAME	OVRE	ENDTX	ENDRX	RXBRK	_	RXRDY

- RXRDY: RXRDY Interrupt Mask
- TXRDY: TXRDY Interrupt Mask
- ENDRX: End of Receive Transfer Interrupt Mask
- ENDTX: End of Transmit Transfer Interrupt Mask
- OVRE: Overrun Error Interrupt Mask
- FRAME: Framing Error Interrupt Mask
- PARE: Parity Error Interrupt Mask
- TXEMPTY: TXEMPTY Interrupt Mask
- DMSI: Delta Modem Status Indication Interrupt Mask
- 0 = The corresponding interrupt is disabled.
- 1 = The corresponding interrupt is enabled.

110 AT91C140

19.11.1 UART Channel Status Register

Name: Access Type:	US_C Read-	SR					
31	30	29	28	27	26	25	24
-	-	-	-	-	-	-	-
23	22	21	20	19	18	17	16
-	-	-	-	-	-	-	-
15	14	13	12	11	10	9	8
-	-	-	-	-	DMSI	TXEMPTY	-
7	6	5	4	3	2	1	0
PARE	FRAME	OVRE	ENDTX	ENDRX	-	TXRDY	RXRDY

• RXRDY: Receiver Ready

0 = No complete character has been received since the last read of the US_RHR or the receiver is disabled.

1 = At least one complete character has been received and the US_RHR has not yet been read.

• TXRDY: Transmitter Ready

0 = US_THR contains a character waiting to be transferred to the Transmit Shift Register.

1 = US_THR is empty and there is no break request pending TSR availability.

Equal to zero when the UART is disabled or at reset. Transmitter enable command (in US_CR) sets this bit to one.

• ENDRX: End-of-receive Transfer

0 = The end-of-transfer signal from the PDC channel dedicated to the receiver is inactive.

1 = The end-of-transfer signal from the PDC channel dedicated to the receiver is active.

• ENDTX: End-of-transmit Transfer

0 = The end-of-transfer signal from the PDC channel dedicated to the transmitter is inactive.

1 = The end-of-transfer signal from the PDC channel dedicated to the transmitter is active.

OVRE: Overrun Error

0 = No byte has been transferred from the Receive Shift Register to the US_RHR when RxRDY was asserted since the last reset status bits command.

1 = At least one byte has been transferred from the Receive Shift Register to the US_RHR when RxRDY was asserted since the last reset status bits command.

• FRAME: Framing Error

0 = No stop bit has been detected low since the last reset status bits command.

1 = At least one stop bit has been detected low since the last reset status bits command.

• PARE: Parity Error

1 = At least one parity bit has been detected false (or a parity bit high in multi-drop mode) since the last reset status bit" command.

0 = No parity bit has been detected false (or a parity bit high in multi-drop mode) since the last reset status bits command.

• TXEMPTY: Transmitter Empty

0 = There are characters in either US_THR or the Transmit Shift Register or a break is being transmitted.

1 = There are no characters in US_THR and the Transmit Shift Register and break is not active.

Equal to zero when the UART is disabled or at reset. Transmitter enable command (in US_CR) sets this bit to one.

DMSI: Delta Modem Status Indication Interrupt

0 = No effect.

1 = There has been a change in the modem status delta bits since the last reset status bits command.





19.11.2 UART Receiver Holding Register

Name: Access Type:	US_R Read-										
31	30	29	28	27	26	25	24				
-	-	-	-	-	-	-	-				
23	22	21	20	19	18	17	16				
-	-	-	-	-	-	-	-				
15	14	13	12	11	10	9	8				
_	_	-	-	_	_	_	-				
7	6	5	4	3	2	1	0				
	RXCHR										

• RXCHR: Received Character

Last character received if RXRDY is set. When number of data bits is less than eight, the bits are right-aligned.

19.11.3 UART Transmitter Holding Register

Name: Access Type:	US_T Write-	HR only									
31	30	29	28	27	26	25	24				
-	-	-	-	-	-	-	-				
23	22	21	20	19	18	17	16				
-	-	-	-	-	-	-	-				
15	14	13	12	11	10	9	8				
-	-	-	-	-	-	_	-				
7	6	5	4	3	2	1	0				
	TXCHR										

• TXCHR: Character to be Transmitted

Next character to be transmitted after the current character if TXRDY is not set. When number of data bits is less than eight, the bits are right-aligned.

112 AT91C140

19.11.4 UART Baud Rate Generator Register

Name: Access Type:	US_B Read/										
31	30	29	28	27	26	25	24				
-	-	-	-	-	-	_	-				
23	22	21	20	19	18	17	16				
-	_	_	-	-	-	_	-				
15	14	13	12	11	10	9	8				
	CD										
7	6	5	4	3	2	1	0				
	CD										

• CD: Clock Divisor

This register has no effect if synchronous mode is selected with an external clock.

CD	Effect
0	Disables clock
1	Clock divisor bypass
2 to 65535	Baud rate = Selected clock/(16 x CD)





19.11.5 UART Receive Pointer Register

Name: Access Type:	US_R Read/						
31	30	29	28	27	26	25	24
			RXF	PTR			
23	22	21	20	19	18	17	16
			RXF	PTR			
15	14	13	12	11	10	9	8
			RXF	PTR			
7	6	5	4	3	2	1	0
			RXF	PTR			

• RXPTR: Receive Pointer

RXPTR must be loaded with the address of the receive buffer.

19.11.6 UART Receive Counter Register

Name: Access Type: Reset Value:	US_R0 Read/\ 0x0						
31	30	29	28	27	26	25	24
-	-	-	-	-	-	-	-
23	22	21	20	19	18	17	16
-	-	-	-	-	-	-	-
15	14	13	12	11	10	9	8
			RX	CTR			
7	6	5	4	3	2	1	0
			RX	CTR			

• RXCTR: Receive Counter

RXCTR must be loaded with the size of the receive buffer.

- 0 =Stop peripheral data transfer dedicated to the receiver.
- 1 65535: Start peripheral data transfer if RXRDY is active.

114 AT91C140

19.11.7 UART Name: Access Type: Reset Value:	Transmit Poin US_TF Read/\ 0x0	PR					
31	30	29	28	27	26	25	24
			TXI	PTR			
23	22	21	20	19	18	17	16
			TXI	PTR			
15	14	13	12	11	10	9	8
			TXI	PTR			
7	6	5	4	3	2	1	0
			TXI	PTR			

• TXPTR: Transmit Pointer

TXPTR must be loaded with the address of the transmit buffer.

19.11.8 UAR Name: Access Type: Reset Value:	T Transmit Cou US_TC Read/V 0x0	R					
31	30	29	28	27	26	25	24
-	-	-	-	-	-	-	-
23	22	21	20	19	18	17	16
-	-	-	_	-	-	_	_
15	14	13	12	11	10	9	8
			TX	CTR			
7	6	5	4	3	2	1	0
			TX	CTR			

• TXCTR: Transmit Counter

TXCTR must be loaded with the size of the transmit buffer.

0 =Stop peripheral data transfer dedicated to the transmitter.

1 - 65535: Start peripheral data transfer if TXRDY is active.



19.11.9 Modem Control Register

Register Name Access Type: Reset Value:	: US_N Write- Undef	only					
31	30	29	28	27	26	25	24
-	-	-	-	-	-	-	-
23	22	21	20	19	18	17	16
-	_	_	_	_	_	_	-
15	14	13	12	11	10	9	8
-	_	_	_	-	-	_	-
7	6	5	4	3	2	1	0
-	_	-	-	_	_	RTS	DTR

This register controls the interface with the modem or data set (or a peripheral device emulating a modem). The contents of the Control Register are indicated below.

• DTR: Data Terminal Ready

This bit controls the NDTR output. When bit 0 is set to a logic 1, the NDTR output is forced to a logic 0.

When bit 0 is reset to a logic 0, the NDTR output is forced to a logic 1.

The NDTR output of the UART can be applied to an EIA inverting line driver to obtain proper polarity input at the succeeding modem or data set.

• RTS: Request to Send

This bit controls the NRTS output. Bit 1 affects the NRTS output in a manner identical to that described above for bit 0.

19.11.10 Modem Status Register Register Name: US_MS

Access Type:	Read-						
31	30	29	28	27	26	25	24
-	-	-	-	-	_	_	_
23	22	21	20	19	18	17	16
-	-	-	-	-	-	-	-
15	14	13	12	11	10	9	8
_	-	-	-	-	_	_	_
7	6	5	4	3	2	1	0
DCD	RI	DSR	CTS	DDCD	TERI	DDSR	DCTS

This register provides the current state of the control lines from the modem (or peripheral device) to the CPU. In addition to this current-state information, four bits of the Modem Status Register provide change information. These bits are set to a logic 1 whenever a control input from the modem changes state. They are reset to logic 0 whenever the CPU reads the Modem Status Register.

• DCTS: Delta Clear to Send

Bit 0 indicates that the NCTS input to the chip has changed state since the last time it was read by the CPU.

• DDSR: Delta Data Set Ready

Bit 1 indicates that the NDSR input to the chip has changed state since the last time it was read by the CPU.

• TERI: Trailing Edge Ring Indicator

Bit 2 indicates that the NRI input to the chip has changed from a low to a high state.

DDCD: Delta Data Carrier Detect

Bit 3 indicates that the NDCD input has changed state.

Note that whenever bit 0, 1, 2, or 3 is set to logic 1, a modem status interrupt is generated. This is reflected in the modem status register.

CTS: Clear to Send

This bit is the complement of the Clear to Send (NCTS) input.

• DSR: Data Set Ready

This bit is the complement of the Data Set Ready (NDSR) input.

• RI: Ring Indicator

This bit is the complement of the Ring Indicator (NRI) input.

• DCD: Data Carrier Detect

This bit is the complement of the Data Carrier Detect (NDCD) input.



20. Timer/Counter (TC)

The AT91C140 features a timer/counter block that includes three identical 16-bit timer/counter channels. Each channel can be independently programmed to perform a wide range of functions including frequency measurement, event counting, interval measurement, pulse generation, delay timing and pulse-width modulation.

Each timer/counter channel has three external clock inputs, five internal clock inputs, and two multi-purpose input/output signals that can be configured by the user. Each channel drives an internal interrupt signal that can be programmed to generate processor interrupts via the AIC.

The timer/counter block has two global registers which act upon all three TC channels. The Block Control Register allows the three channels to be started simultaneously with the same instruction. The Block Mode Register defines the external clock inputs for each timer/counter channel, allowing them to be chained.

20.1 Block Diagram

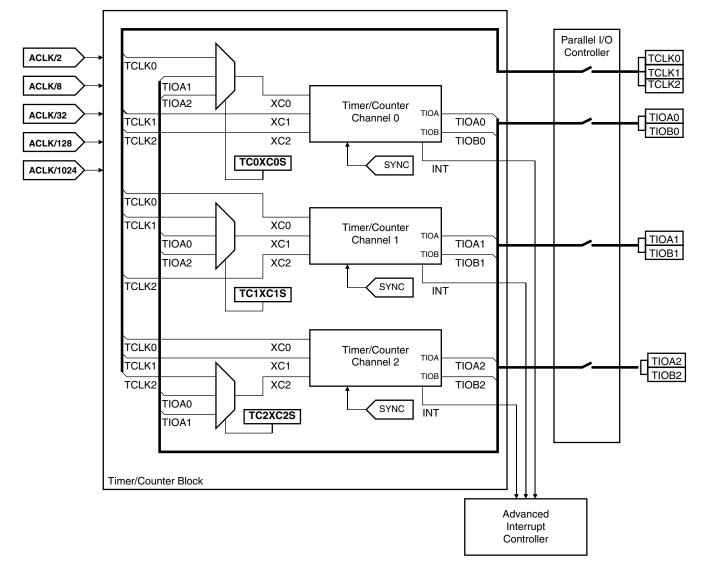


Figure 20-1. Timer/Counter Block Diagram

118 **AT91C140**

20.2 Signal Name Description

Channel Signal	Description	Туре
XC0, XC1, XC2	External clock inputs	I
ΤΙΟΑ	Capture mode: General-purpose input Waveform mode: General-purpose output	I O
ТІОВ	Capture mode: General-purpose input Waveform mode: General-purpose input/output	I O
INT	Interrupt signal output	0
SYNC	Synchronization input signal	I
Block Signal		
TCLK0, TCLK1, TCLK2	External clock inputs	I
TIOA0	TIOA signal for Channel 0	I/O
TIOB0	TIOB signal for Channel 0	I/O
TIOA1	TIOA signal for Channel 1	I/O
TIOB1	TIOB signal for Channel 1	I/O
TIOA2	TIOA signal for Channel 2	I/O
TIOB2	TIOB signal for Channel 2	I/O

 Table 20-1.
 Timer Counter Signal Description

Note: After a hardware reset, the timer/counter block pins are controlled by the PIO controller. They must be configured to be controlled by the peripheral before being used.

20.3 Description

The three timer/counter channels are independent and identical in operation.

20.3.1 Counter

Each timer/counter channel is organized around a 16-bit counter. The value of the counter is incremented at each positive edge of the selected clock. When the counter has reached the value 0xFFFF and passes to 0x0000, an overflow occurs and the COVFS bit in TC_SR (Status Register) is set.

The current value of the counter is accessible in real time by reading TC_CV. The counter can be reset by a trigger. In this case, the counter value passes to 0x0000 on the next valid edge of the selected clock.

20.3.2 Clock Selection

At block level, input clock signals of each channel can either be connected to the external inputs TCLK0, TCLK1 or TCLK2, or be connected to the configurable I/O signals TIOA0, TIOA1 or TIOA2 for chaining by programming the TC_BMR (Block Mode).

Each channel can independently select an internal or external clock source for its counter:

- Internal clock signals: ACLK/2, ACLK/8, ACLK/32, ACLK/128, ACLK/1024
- External clock signals: XC0, XC1 or XC2







The selected clock can be inverted with the CLKI bit in TC_CMR (Channel Mode). This allows counting on the opposite edges of the clock.

The burst function allows the clock to be validated when an external signal is high. The BURST parameter in the Mode Register defines this signal (none, XC0, XC1, XC2).

Note: In all cases, if an external clock is used, the duration of each of its levels must be longer than the system clock (ACLK) period. The external clock frequency must be at least 2.5 times lower than the system clock (ACLK).



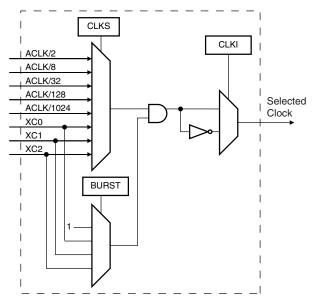

20.3.3 Clock Control

The clock of each counter can be controlled in two different ways: it can be enabled/disabled and started/stopped.

- The clock can be enabled or disabled by the user with the CLKEN and the CLKDIS commands in the Control Register. In capture mode, it can be disabled by an RB load event if LDBDIS is set to 1 in TC_CMR. In waveform mode, it can be disabled by an RC Compare event if CPCDIS is set to 1 in TC_CMR. When disabled, the start or the stop actions have no effect: only a CLKEN command in the Control Register can reenable the clock. When the clock is enabled, the CLKSTA bit is set in the Status Register.
- The clock can also be started or stopped: a trigger (software, synchro, external or compare) always starts the clock. The clock can be stopped by an RB load event in capture mode (LDBSTOP = 1 in TC_CMR) or a RC compare event in waveform mode (CPCSTOP = 1 in TC_CMR). The start and the stop commands have an effect only if the clock is enabled.

20.3.4 Timer/Counter Operating Modes

Each timer/counter channel can operate independently in two different modes:

- 1. Capture mode allows measurement on signals
- 2. Waveform mode allows wave generation

120 **AT91C140**

The timer/counter operating mode is programmed with the WAVE bit in the TC Mode Register. In capture mode, TIOA and TIOB are configured as inputs. In waveform mode, TIOA is always configured to be an output and TIOB is an output if it is not selected to be the external trigger.

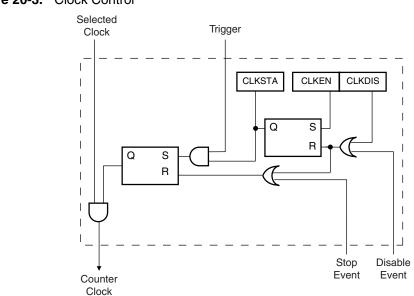


Figure 20-3. Clock Control

20.3.5 Trigger

A trigger resets the counter and starts the counter clock. Three types of triggers are common to both modes, and a fourth external trigger is available to each mode.

The following triggers are common to both modes:

- 1. Software trigger: Each channel has a software trigger, available by setting SWTRG in TC_CCR.
- SYNC: Each channel has a synchronization signal, SYNC. When asserted, this signal has the same effect as a software trigger. The SYNC signals of all channels are asserted simultaneously by writing TC_BCR (Block Control) with SYNC set.
- 3. Compare RC trigger: RC is implemented in each channel and can provide a trigger when the counter value matches the RC value if CPCTRG is set in TC_CMR.

The timer/counter channel can also be configured to have an external trigger. In capture mode, the external trigger signal can be selected between TIOA and TIOB. In waveform mode, an external event can be programmed on one of the following signals: TIOB, XC0, XC1 or XC2. This external event can then be programmed to perform a trigger by setting ENETRG in TC_CMR.

If an external trigger is used, the duration of the pulses must be longer than the system clock (ACLK) period in order to be detected.

Whatever the trigger used, it will be taken into account at the following active edge of the selected clock. This means that the counter value may not read zero just after a trigger, especially when a low-frequency signal is selected as the clock.





20.4 Capture Operating Mode

This mode is entered by clearing the WAVE parameter in TC_CMR (Channel Mode Register). Capture mode allows the TC Channel to perform measurements such as pulse timing, frequency, period, duty cycle and phase on TIOA and TIOB signals which are inputs.

Figure 20-4 shows the configuration of the TC Channel when programmed in capture mode.

20.4.1 Capture Registers A and B (RA and RB)

Registers A and B are used as capture registers; thus, they can be loaded with the counter value when a programmable event occurs on the TIOA signal.

The parameter LDRA in TC_CMR defines the TIOA edge for the loading of Register A, and the parameter LDRB defines the TIOA edge for the loading of Register B.

RA is loaded only if it has not been loaded since the last trigger or if RB has been loaded since the last loading of RA.

RB is loaded only if RA has been loaded since the last trigger or the last loading of RB.

Loading RA or RB before the read of the last value loaded sets the Overrun Error Flag (LOVRS) in TC_SR (Status Register). In this case, the old value is overwritten.

20.4.2 Trigger Conditions

In addition to the SYNC signal, the software trigger and the RC compare trigger, an external trigger can be defined.

Bit ABETRG in TC_CMR selects input signal TIOA or TIOB as an external trigger. Parameter ETRGEDG defines the edge (rising, falling or both) detected to generate an external trigger. If ETRGEDG = 0 (none), the external trigger is disabled.

20.4.3 Status Register

The following bits in the status register are significant in capture operating mode.

• CPCS: RC Compare Status

There has been an RC Compare match at least once since the last read of the status.

COVFS: Counter Overflow Status

The counter has attempted to count past \$FFFF since the last read of the status.

LOVRS: Load Overrun Status

RA or RB has been loaded at least twice without any read of the corresponding register since the last read of the status.

• LDRAS: Load RA Status

RA has been loaded at least once without any read since the last read of the status.

• LDRBS: Load RB Status


RB has been loaded at least once without any read since the last read of the status.

• ETRGS: External Trigger Status An external trigger on TIOA or TIOB has been detected since the last read of the status.

www.BDTIC.com/ATMEL

122 AT91C140

Figure 20-4. Capture Mode

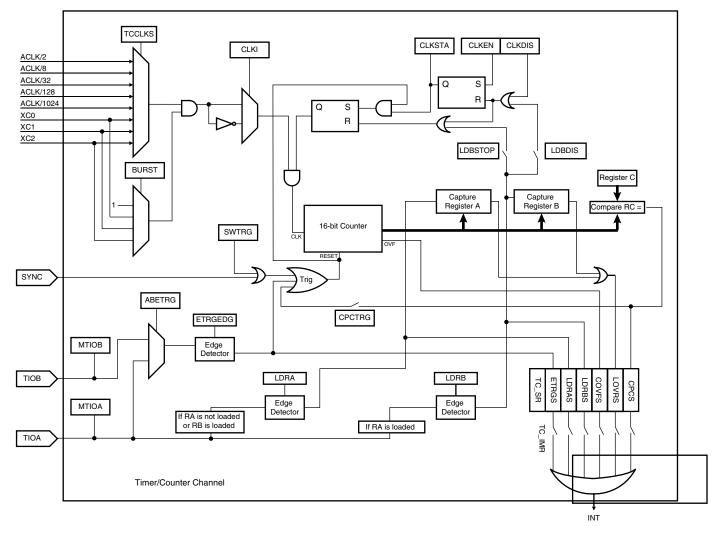

20.5 Waveform Operating Mode

This mode is entered by setting the WAVE parameter in TC_CMR (Channel Mode Register).

Waveform operating mode allows the TC channel to generate 1 or 2 PWM signals with the same frequency and independently programmable duty cycles, or to generate different types of one-shot or repetitive pulses.

In this mode, TIOA is configured as output and TIOB is defined as output if it is not used as an external event (EEVT parameter in TC_CMR).

Figure 20-5 on page 126 shows the configuration of the TC channel when programmed in waveform operating mode.

20.5.1 Compare Register A, B and C (RA, RB, and RC)

In waveform operating mode, RA, RB and RC are all used as compare registers.

RA Compare is used to control the TIOA output. RB Compare is used to control the TIOB (if configured as output). RC Compare can be programmed to control TIOA and/or TIOB outputs.





RC Compare can also stop the counter clock (CPCSTOP = 1 in TC_CMR) and/or disable the counter clock (CPCDIS = 1 in TC_CMR).

As in capture mode, RC Compare can also generate a trigger if CPCTRG = 1. A trigger resets the counter so RC can control the period of PWM waveforms.

20.5.2 External Event/Trigger Conditions

An external event can be programmed to be detected on one of the clock sources (XC0, XC1, XC2) or TIOB. The external event selected can then be used as a trigger.

The parameter EEVT in TC_CMR selects the external trigger. The parameter EEVTEDG defines the trigger edge for each of the possible external triggers (rising, falling or both). If EEVTEDG is cleared (none), no external event is defined.

If TIOB is defined as an external event signal (EEVT = 0), TIOB is no longer used as output and the TC channel can only generate a waveform on TIOA.

When an external event is defined, it can be used as a trigger by setting bit ENETRG in TC_CMR.

As in capture mode, the SYNC signal, the software trigger and the RC compare trigger are also available as triggers.

20.5.3 Output Controller

The output controller defines the output level changes on TIOA and TIOB following an event. TIOB control is used only if TIOB is defined as output (not as an external event).

The following events control TIOA and TIOB: software trigger, external event and RC compare. RA compare controls TIOA and RB compare controls TIOB. Each of these events can be programmed to set, clear or toggle the output as defined in the corresponding parameter in TC_CMR.

Table 20-2 and Table 20-3 show which parameter in TC_CMR is used to define the effect of each event.

Parameter	TIOA Event
ASWTRG	Software trigger
AEEVT	External event
ACPC	RC compare
ACPA	RA compare

Table 20-2. TIOA Events

Table 20-3. TIOB Events

Parameter	TIOB Event
BSWTRG	Software trigger
BEEVT	External event
BCPC	RC compare
BCPB	RB compare

If two or more events occur at the same time, the priority level is defined as follows:

- 1. Software trigger
- 2. External event
- 3. RC compare
- 4. RA or RB compare

20.5.4 Status


The following bits in the status register are significant in waveform mode:

- CPAS: RA Compare Status There has been a RA Compare match at least once since the last read of the status
- CPBS: RB Compare Status There has been a RB Compare match at least once since the last read of the status
- CPCS: RC Compare Status There has been a RC Compare match at least once since the last read of the status
- COVFS: Counter Overflow
 Counter has attempted to count past \$FFFF since the last read of the status
- ETRGS: External Trigger External trigger has been detected since the last read of the status





Figure 20-5. Waveform Mode

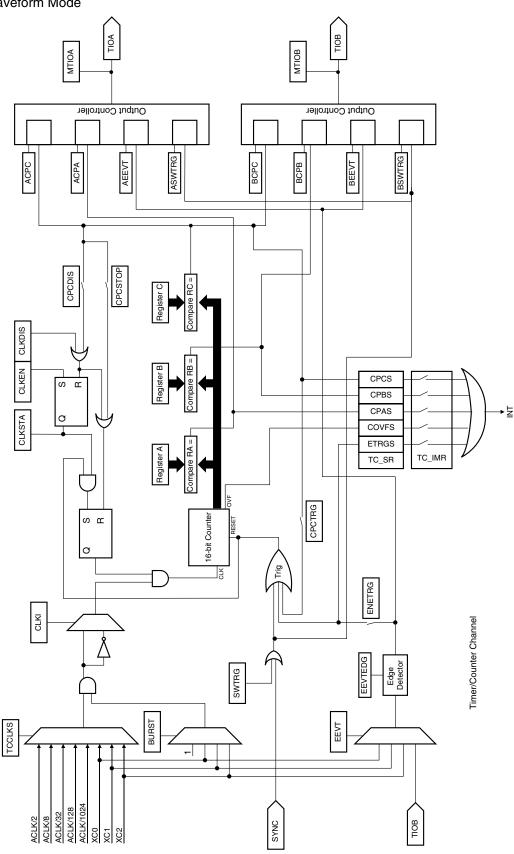

126 AT91C140

20.6 Timer/Counter (TC) User Interface

Offset	Register Name	Channel/Register	Access	Reset Value	
0x00		TC Channel 0	See Table 20-5		
0x40		TC Channel 1	See Table 20-5		
0x80		TC Channel 2	See Table 20-5		
0xC0	TC_BCR	TC Block Control Register	Write-only	_	
0xC4	TC_BMR	TC Block Mode Register	Read/Write	0	

Table 20-4. TC Global Memory Map

TC_BCR (Block Control Register) and TC_BMR (Block Mode Register) control the whole TC block. TC channels are controlled by the registers listed in Table 20-5. The offset of each of the channel registers in Table 20-5 is in relation to the offset of the corresponding channel as specified in Table 20-4.

Table 20-5. TC Channel Memory Map

Offset	Register Name	Description	Access	Reset Value
0x00	TC_CCR	Channel Control Register	Write-only	-
0x04	TC_CMR	Channel Mode Register	Read/Write	0
0x08		Reserved		_
0x0C		Reserved		_
0x10	TC_CVR	Counter Value Register	Read/Write	0
0x14	TC_RA	Register A	Read/Write ⁽¹⁾	0
0x18	TC_RB	Register B	Read/Write ⁽¹⁾	0
0x1C	TC_RC	Register C	Read/Write	0
0x20	TC_SR	Status Register	Read-only	-
0x24	TC_IER	Interrupt Enable Register	Write-only	_
0x28	TC_IDR	Interrupt Disable Register	Write-only	_
0x2C	TC_IMR	Interrupt Mask Register	Read-only	0

Note: 1. Read only if WAVE = 0.





20.6.1 TC Block Control Register

Register Name Access Type:	: TC_B Write-						
31	30	29	28	27	26	25	24
-	-	-	-	-	-	-	-
23	22	21	20	19	18	17	16
-	-	-	-	-	-	-	-
15	14	13	12	11	10	9	8
-	_	-	-	-	-	_	-
7	6	5	4	3	2	1	0
_	_	_	-	_	_	_	SYNC

• SYNC: Synchro Command

0 = No effect.

1 = Asserts the SYNC signal which generates a software trigger simultaneously for each of the channels.

128 AT91C140

20.6.2 TC Block Mode Register

Register Name: Access Type:	TC_BI Read/						
31	30	29	28	27	26	25	24
-	-	-	-	-	-	-	-
23	22	21	20	19	18	17	16
-	_	_	_	-	-	_	_
15	14	13	12	11	10	9	8
-	_	_	_	-	-	_	_
7	6	5	4	3	2	1	0
-	_	TC2XC2S		TC12	XC1S	TC02	XC0S

• TC0XC0S: External Clock Signal 0 Selection

TC0XC0S		Signal Connected to XC0
0	0	TCLK0
0	1	None
1	0	TIOA1
1	1	TIOA2

• TC1XC1S: External Clock Signal 1 Selection

TC1XC1S		Signal Connected to XC1
0	0	TCLK1
0	1	none
1	0	TIOA0
1	1	TIOA2

• TC2XC2S: External Clock Signal 2 Selection

TC2X	C2S	Signal Connected to XC2
0	0	TCLK2
0	1	none
1	0	TIOA0
1	1	TIOA1





20.6.3 TC Channel Control Register

Register Name Access Type:	: TC_C Write-						
31	30	29	28	27	26	25	24
-	-	-	-	-	-	-	_
23	22	21	20	19	18	17	16
-	-	-	-	-	-	-	-
15	14	13	12	11	10	9	8
-	-	-	-	-	-	-	_
7	6	5	4	3	2	1	0
_	_	_	_	-	SWTRG	CLKDIS	CLKEN

• CLKEN: Counter Clock Enable Command

0 = No effect.

1 = Enables the clock if CLKDIS is not 1.

• CLKDIS: Counter Clock Disable Command

0 = No effect.

1 = Disables the clock.

• SWTRG: Software Trigger Command

0 = No effect.

1 = A software trigger is performed: the counter is reset and clock is started.

130 AT91C140

20.6.4 TC Channel Mode Register: Capture Mode

Register Name Access Type:	: TC_C Read/						
31	30	29	28	27	26	25	24
-	_	_	_	_	-	_	-
23	22	21	20	19	18	17	16
-	-	-	-	LC	DRB	L	ORA
15	14	13	12	11	10	9	8
WAVE	CPCTRG	_	-	-	ABETRG	ETR	GEDG
7	6	5	4	3	2	1	0
LDBDIS	LDBSTOP	BU	IRST	CLKI		TCCLKS	

• TCCLKS: Clock Selection

	TCCLKS		Clock Selected
0	0	0	ACLK/2
0	0	1	ACLK/8
0	1	0	ACLK/32
0	1	1	ACLK/128
1	0	0	ACLK/1024
1	0	1	XC0
1	1	0	XC1
1	1	1	XC2

CLKI: Clock Invert

0 = Counter is incremented on rising edge of the clock.

1 = Counter is incremented on falling edge of the clock.

• BURST: Burst Signal Selection

BURST			
0	0	The clock is not gated by an external signal.	
0	1	XC0 is ANDed with the selected clock.	
1	0	XC1 is ANDed with the selected clock.	
1	1	XC2 is ANDed with the selected clock.	

• LDBSTOP: Counter Clock Stopped with RB Loading

0 = Counter clock is not stopped when RB loading occurs.

1 = Counter clock is stopped when RB loading occurs.

LDBDIS: Counter Clock Disable with RB Loading

- 0 = Counter clock is not disabled when RB loading occurs.
- 1 = Counter clock is disabled when RB loading occurs.





• ETRGEDG: External Trigger Edge Selection

ETRO	GEDG	Edge	
0	0	None	
0	1	Rising edge	
1	0	Falling edge	
1	1	Each edge	

ABETRG: TIOA or TIOB External Trigger Selection

0 = TIOB is used as an external trigger.

- 1 = TIOA is used as an external trigger.
- CPCTRG: RC Compare Trigger Enable
- 0 = RC Compare has no effect on the counter and its clock.
- 1 = RC Compare resets the counter and starts the counter clock.
- WAVE
- 0 = Capture mode is enabled.
- 1 = Capture mode is disabled (waveform mode is enabled).
- LDRA: RA Loading Selection

LD	RA	Edge	
0	0	None	
0	1	Rising edge of TIOA	
1	0	Falling edge of TIOA	
1	1	Each edge of TIOA	

• LDRB: RB Loading Selection

LDRB Edge		Edge	
0	0	None	
0	1	Rising edge of TIOA	
1	0	Falling edge of TIOA	
1	1	Each edge of TIOA	

132 AT91C140

20.6.5 TC Channel Mode Register: Waveform Mode

Register Name Access Type:	: TC_C Read/						
31	30	29	28	27	26	25	24
BSW	TRG	В	EEVT	BC	PC	BC	PB
23	22	21	20	19	18	17	16
ASW	ASWTRG		EEVT	ACPC		ACPA	
15	14	13	12	11	10	9	8
WAVE	CPCTRG	_	ENETRG	EE	VT	EEV	TEDG
7	6	5	4	3	2	1	0
CPCDIS	CPCSTOP	BURST		CLKI		TCCLKS	

• TCCLKS: Clock Selection

	TCCLKS		Clock Selected
0	0	0	ACLK/2
0	0	1	ACLK/8
0	1	0	ACLK/32
0	1	1	ACLK/128
1	0	0	ACLK/1024
1	0	1	XC0
1	1	0	XC1
1	1	1	XC2

• CLKI: Clock Invert

6069C-ATARM-15-Sep-05

0 = Counter is incremented on rising edge of the clock.

1 = Counter is incremented on falling edge of the clock.

• BURST: Burst Signal Selection

BURST		
0	0	The clock is not gated by an external signal.
0	1	XC0 is ANDed with the selected clock.
1	0	XC1 is ANDed with the selected clock.
1	1	XC2 is ANDed with the selected clock.

• CPCSTOP: Counter Clock Stopped with RC Compare

0 = Counter clock is not stopped when counter reaches RC.

1 = Counter clock is stopped when counter reaches RC.

• CPCDIS: Counter Clock Disable with RC Compare

- 0 = Counter clock is not disabled when counter reaches RC.
- 1 = Counter clock is disabled when counter reaches RC.



• EEVTEDG: External Event Edge Selection

EEVI	EDG	Edge
0	0	None
0	1	Rising edge
1	0	Falling edge
1	1	Each edge

• EEVT: External Event Selection

EE	VT	Signal Selected as External Event	TIOB Direction
0	0	TIOB	Input ⁽¹⁾
0	1	XC0	Output
1	0	XC1	Output
1	1	XC2	Output

Note: If TIOB is chosen as the external event signal, it is configured as an input and no longer generates waveforms.

• ENETRG: External Event Trigger Enable

0 = The external event has no effect on the counter and its clock. In this case, the selected external event only controls the TIOA output.

1 = The external event resets the counter and starts the counter clock.

- CPCTRG: RC Compare Trigger Enable
- 0 = RC Compare has no effect on the counter and its clock.
- 1 = RC Compare resets the counter and starts the counter clock.
- WAVE
- 0 = Waveform mode is disabled (Capture mode is enabled).
- 1 = Waveform mode is enabled.
- ACPA: RA Compare Effect on TIOA

AC	PA	Effect
0	0	None
0	1	Set
1	0	Clear
1	1	Toggle

• ACPC: RC Compare Effect on TIOA

AC	PC	Effect
0	0	None
0	1	Set
1	0	Clear
1	1	Toggle

6069C-ATARM-15-Sep-05

• AEEVT: External Event Effect on TIOA

AE	EVT	Effect
0	0	None
0	1	Set
1	0	Clear
1	1	Toggle

• ASWTRG: Software Trigger Effect on TIOA

ASW	TRG	Effect
0	0	None
0	1	Set
1	0	Clear
1	1	Toggle

BCPB: RB Compare Effect on TIOB

BC	PB	Effect
0	0	None
0	1	Set
1	0	Clear
1	1	Toggle

• BCPC: RC Compare Effect on TIOB

BC	PC	Effect
0	0	None
0	1	Set
1	0	Clear
1	1	Toggle

• BEEVT: External Event Effect on TIOB

BEI	EVT	Effect
0	0	None
0	1	Set
1	0	Clear
1	1	Toggle





• BSWTRG: Software Trigger Effect on TIOB

BSW	TRG	Effect
0	0	None
0	1	Set
1	0	Clear
1	1	Toggle

136 AT91C140

www.BDTIC.com/ATMEL

6069C-ATARM-15-Sep-05

20.6.6 TC Counter Value Register

Register Name Access Type:	: TC_C Read-								
31	30	29	28	27	26	25	24		
-	_	-	-	-	_	_	-		
23	22	21	20	19	18	17	16		
-	_	-	-	-	_	_	-		
15	14	13	12	11	10	9	8		
	CV								
7	6	5	4	3	2	1	0		
			(CV					

• CV: Counter Value

CV contains the counter value in real-time.

20.6.7 TC Register A

Register Name:	TC_RA
Access Type:	Read-only if WAVE = 0, Read/Write if WAVE = 1

31	30	29	28	27	26	25	24	
_	_	_	_	_	_	_	_	
23	22	21	20	19	18	17	16	
_	_	_	_	_	_	_	_	
15	14	13	12	11	10	9	8	
			F	RA				
7	6	5	4	3	2	1	0	
	RA							

• RA: Register A

RA contains the Register A value in real-time.

20.6.8 TC Register B

Register Name:	TC_RB
Access Type:	Read-only if WAVE = 0, Read/Write if WAVE = 1

31	30	29	28	27	26	25	24
-	_	-	_	_	_	_	-
23	22	21	20	19	18	17	16
-	_	_	_	_	_	_	-
15	14	13	12	11	10	9	8
			F	RB			
7	6	5	4	3	2	1	0
	RB						

• RB: Register B

6069C-ATARM-15-Sep-05

RB contains the Register B value in real-time.



27

26

25

24

20.6.9 TC Register C

Register Name:TC_RCAccess Type:Read/Write31302928----

		= = =	==		= =	==	
-	_	_	-	_	_	_	-
23	22	21	20	19	18	17	16
-	_	_	-	_	_	_	-
15	14	13	12	11	10	9	8
			F	RC			
7	6	5	4	3	2	1	0
	RC						

• RC: Register C

RC contains the Register C value in real-time.

20.6.10 TC Status Register

Register Name: TC_SR Access Type: Bead-only

Access Type.	neau-	Offiy					
31	30	29	28	27	26	25	24
-	_	_	_	-	_	_	-
23	22	21	20	19	18	17	16
-	_	_	_	-	MTIOB	MTIOA	CLKSTA
15	14	13	12	. 11	10	9	8
-	-	-	-	-	-	-	-
7	6	5	4	3	2	1	0
ETRGS	LDRBS	LDRAS	CPCS	CPBS	CPAS	LOVRS	COVFS

COVFS: Counter Overflow Status

0 = No counter overflow has occurred since the last read of the Status Register.

1 = A counter overflow has occurred since the last read of the Status Register.

LOVRS: Load Overrun Status

0 = Load overrun has not occurred since the last read of the Status Register or WAVE = 1.

1 = RA or RB have been loaded at least twice without any read of the corresponding register since the last read of the Status Register if WAVE = 0.

CPAS: RA Compare Status

- 0 = RA compare has not occurred since the last read of the Status Register or WAVE = 0.
- 1 = RA compare has occurred since the last read of the Status Register if WAVE = 1.

CPBS: RB Compare Status

- 0 = RB compare has not occurred since the last read of the Status Register or WAVE = 0.
- 1 = RB compare has occurred since the last read of the Status Register if WAVE = 1.

CPCS: RC Compare Status

- 0 = RC compare has not occurred since the last read of the Status Register.
- 1 = RC compare has occurred since the last read of the Status Register.

• LDRAS: RA Loading Status

- 0 = RA Load has not occurred since the last read of the Status Register or WAVE = 1.
- 1 = RA Load has occurred since the last read of the Status Register, if WAVE = 0.

138 AT91C140

• LDRBS: RB Loading Status

- 0 = RB load has not occurred since the last read of the Status Register or WAVE = 1.
- 1 = RB load has occurred since the last read of the Status Register if WAVE = 0.

• ETRGS: External Trigger Status

- 0 = External trigger has not occurred since the last read of the Status Register.
- 1 = External trigger has occurred since the last read of the Status Register.

• CLKSTA: Clock Enabling Status

- 0 = Clock is disabled.
- 1 = Clock is enabled.
- MTIOA: TIOA Mirror
- 0 = TIOA is low. If WAVE = 0, then TIOA pin is low. If WAVE = 1, then TIOA is driven low.
- 1 = TIOA is high. If WAVE = 0, then TIOA pin is high. If WAVE = 1, then TIOA is driven high.

• MTIOB: TIOB Mirror

- 0 = TIOB is low. If WAVE = 0, then TIOB pin is low. If WAVE = 1, then TIOB is driven low.
- 1 = TIOB is high. If WAVE = 0, then TIOB pin is high. If WAVE = 1, then TIOB is driven high.





20.6.11 TC Interrupt Enable Register

Register Name Access Type:	e: TC_IE Write-						
31	30	29	28	27	26	25	24
-	-	-	-	-	-	-	-
23	22	21	20	19	18	17	16
-	-	-	-	-	-	-	-
15	14	13	12	11	10	9	8
_	_	_	-	_	-	-	_
7	6	5	4	3	2	1	0
ETRGS	LDRBS	LDRAS	CPCS	CPBS	CPAS	LOVRS	COVFS

- COVFS: Counter Overflow
- LOVRS: Load Overrun
- CPAS: RA Compare
- CPBS: RB Compare
- CPCS: RC Compare
- LDRAS: RA Loading
- LDRBS: RB Loading
- ETRGS: External Trigger

0 = No effect.

1 = Enables the corresponding interrupt.

20.6.12 TC Interrupt Disable Register

Register Name: TC_IDR Access Type: Write-only

bess type.	WINC	,					
31	30	29	28	27	26	25	24
-	_	_	-	-	_	_	_
23	22	21	20	19	18	17	16
-	_	_	-	-	-	_	_
15	14	13	12	11	10	9	8
-	_	_	-	-	-	_	_
7	6	5	4	3	2	1	0
ETRGS	LDRBS	LDRAS	CPCS	CPBS	CPAS	LOVRS	COVFS
	31 - 23 - 15 - 7	31 30 - - 23 22 - - 15 14 - - 7 6	31 30 29 - - - 23 22 21 - - - 15 14 13 - - - 7 6 5	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$

COVFS: Counter Overflow

- LOVRS: Load Overrun
- CPAS: RA Compare
- CPBS: RB Compare
- CPCS: RC Compare
- LDRAS: RA Loading
- LDRBS: RB Loading
- ETRGS: External Trigger

0 = No effect.

1 = Disables the corresponding interrupt.

140 AT91C140

20.6.13 TC Interrupt Mask Register

Register Name: Access Type:	TC_IM Read-o						
31	30	29	28	27	26	25	24
-	_	_	_	_	_	_	_
23	22	21	20	19	18	17	16
-	-	-	-	-	-	-	-
15	14	13	12	11	10	9	8
-	_	_	_	_	_	_	_
7	6	5	4	3	2	1	0
ETRGS	LDRBS	LDRAS	CPCS	CPBS	CPAS	LOVRS	COVFS

- COVFS: Counter Overflow
- LOVRS: Load Overrun
- CPAS: RA Compare
- CPBS: RB Compare
- CPCS: RC Compare
- LDRAS: RA Loading
- LDRBS: RB Loading
- ETRGS: External Trigger
- 0 = The corresponding interrupt is disabled.
- 1 = The corresponding interrupt is enabled.





21. Serial Peripheral Interface (SPI)

The AT91C140 embeds a Serial Peripheral Interface featuring:

- Four Chip Selects with External Decoder Support Allowing Communication with Up to 15 Peripherals
- Serial Memories, such as DataFlash and 3-wire EEPROMS
- Serial Peripherals, such as ADCS, DACS, LCD Controllers, CAN Controllers And Sensors
- External Co-processors
- Master or Slave Serial Peripheral Bus Interface
- 8- to 16-bit Programmable Data Length Per Chip Select
- Programmable Phase and Polarity Per Chip Select
- Programmable Transfer Delays Between Consecutive Transfers and Between Clock and Data Per Chip Select
- Programmable Delay Between Consecutive Transfers
- Selectable Mode Fault Detection
- Connection to PDC Channel Capabilities Optimizes Data Transfers
- One Channel for the Receiver, One Channel for the Transmitter

21.1 Overview

The Serial Peripheral Interface (SPI) circuit is a synchronous serial data link that provides communication with external devices in Master or Slave Mode. It also allows communication between processors if an external processor is connected to the system.

The Serial Peripheral Interface is a shift register that serially transmits data bits to other SPIs. During a data transfer, one SPI system acts as the "master" that controls the data flow, while the other system acts as the "slave" that has data shifted into and out of it by the master. Different CPUs can take turn being masters (Multiple Master Protocol versus Single Master Protocol, where one CPU is always the master while all of the others are always slaves), and one master may simultaneously shift data into multiple slaves. However, only one slave may drive its output to write data back to the master at any given time.

A slave device is selected when the master asserts its NSS signal. If multiple slave devices exist, the master generates a separate slave select signal for each slave (NPCS).

The SPI system consists of two data lines and two control lines:

www.BDTIC.com/ATMEL

Master Out Slave In (MOSI): This data line supplies the output data from the master shifted into the input(s) of the slave(s).

Master In Slave Out (MISO): This data line supplies the output data from a slave to the input of the master. There may be no more than one slave transmitting data during any particular transfer.

Serial Clock (SPCK): This control line is driven by the master and regulates the flow of the data bits. The master may transmit data at a variety of baud rates; the SPCK line cycles once for each bit that is transmitted.


Slave Select (NSS): This control line allows slaves to be turned on and off by hardware.

142 AT91C140

AT91C140

21.2 Block Diagram

Figure 21-1. Block Diagram

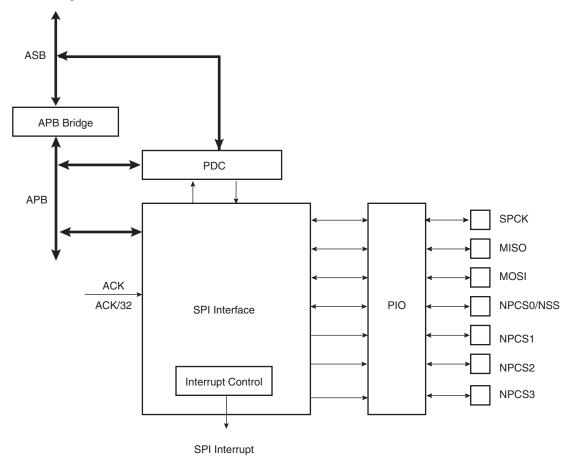





21.3 Connections

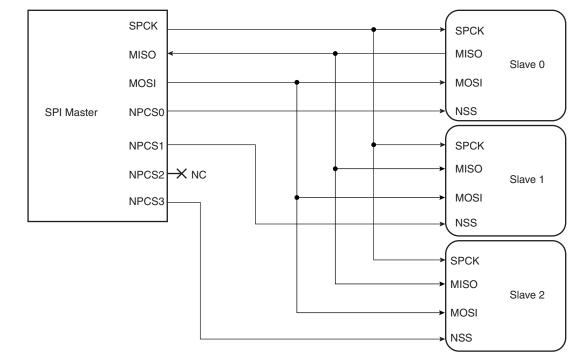


Figure 21-2. Application Block Diagram: Single Master/Multiple Slave Implementation

21.4 Pin Name List

Table 21-1.	I/O Lines Description
-------------	-----------------------

Pin Name	Pin Description	Туре	Mode	Comments
MISO	Master In Slave Out	I/O	Master Slave	Serial data input to SPI Serial data output from SPI
MOSI	Master Out Slave In	I/O	Master Slave	Serial data output from SPI Serial data input to SPI
SPCK	Serial Clock	I/O	Master Slave	Clock output from SPI Clock input to SPI
NPCS1-NPCS3	Peripheral Chip Selects	Input	Master	Select peripherals
NPCS0/NSS	Peripheral Chip Select/Slave Select	I/O	Master Master Slave	Output: Selects peripheral Input: low causes mode fault Input: chip select for SPI

www.BDTIC.com/ATMEL

21.5 Master Mode Operations

When configured in Master Mode, the Serial Peripheral Interface controls data transfers to and from the slave(s) connected to the SPI bus. The SPI drives the chip select(s) to the slave(s) and the serial clock (SPCK). After enabling the SPI, a data transfer begins when the core writes to the SPI_TDR (Transmit Data Register).

Transmit and Receive buffers maintain the data flow at a constant rate with a reduced requirement for high-priority interrupt servicing. When new data is available in the SPI_TDR, the SPI

144 **AT91C140**

continues to transfer data. If the SPI_RDR (Receive Data Register) has not been read before new data is received, the Overrun Error (OVRES) flag is set.

Note: As long as this flag is set, no data is loaded in the SPI_RDR. The user has to read the status register to clear it.

The delay between the activation of the chip select and the start of the data transfer (DLYBS), as well as the delay between each data transfer (DLYBCT), can be programmed for each of the four external chip selects. All data transfer characteristics, including the two timing values, are programmed in registers SPI_CSR0 to SPI_CSR3 (Chip Select Registers).

In Master Mode, the peripheral selection can be defined in two different ways:

- Fixed Peripheral Select: SPI exchanges data with only one peripheral
- Variable Peripheral Select: Data can be exchanged with more than one peripheral

Figure 21-6 and Figure 21-7 show the operation of the SPI in Master Mode. For details concerning the flag and control bits in these diagrams, see "SPI Chip Select Register" on page 161.

21.5.1 Fixed Peripheral Select

This mode is used for transferring memory blocks without the extra overhead in the transmit data register to determine the peripheral.

Fixed Peripheral Select is activated by setting bit PS to zero in SPI_MR (Mode Register). The peripheral is defined by the PCS field in SPI_MR.

This option is only available when the SPI is programmed in Master Mode.

21.5.2 Variable Peripheral Select

Variable Peripheral Select is activated by setting the PS bit to one. The PCS field in SPI_TDR is used to select the destination peripheral. The data transfer characteristics are changed when the selected peripheral changes, depending on the associated chip select register.

The PCS field in the SPI_MR has no effect.

This option is available only when the SPI is programmed in Master Mode.

21.5.3 Chip Selects

The Chip Select lines are driven by the SPI only if it is programmed in Master Mode. These lines are used to select the destination peripheral. The PCSDEC field in SPI_MR (Mode Register) selects one to four peripherals (PCSDEC = 0) or up to 15 peripherals (PCSDEC = 1).

If Variable Peripheral Select is active, the chip select signals are defined for each transfer in the PCS field in SPI_TDR. Chip select signals can thus be defined independently for each transfer.

If Fixed Peripheral Select is active, Chip Select signals are defined for all transfers by the field PCS in SPI_MR. If a transfer with a new peripheral is necessary, the software must wait until the current transfer is completed, then change the value of PCS in SPI_MR before writing new data in SPI_TDR.

The value on the NPCS pins at the end of each transfer can be read in the SPI_RDR (Receive Data Register).

By default, all NPCS signals are high (equal to one) before and after each transfer.





21.5.4 Mode Fault Detection


A mode fault is detected when the SPI is programmed in Master Mode and a low level is driven by an external master on the NPCS[0]/NSS signal.

When a mode fault is detected, the MODF bit in the SPI_SR is set until the SPI_SR is read and the SPI is disabled until re-enabled by bit SPIEN in the SPI_CR (Control Register).

By default, Mode Fault Detection is enabled. It is disabled by setting the MODFDIS bit in the SPI Mode Register.

146 AT91C140

21.5.5 Master Mode Flow Diagram

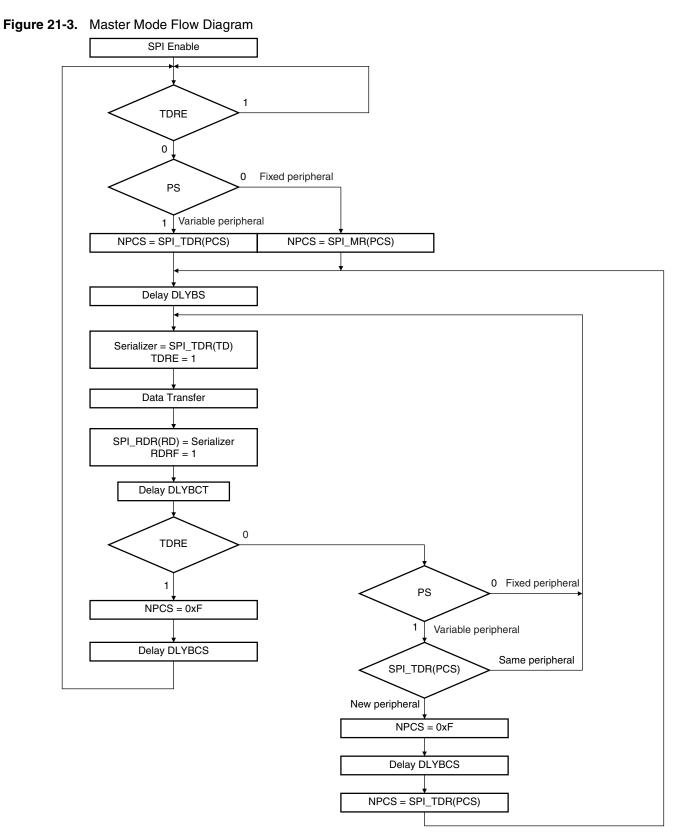






21.5.6 Master Mode Block Diagram

Figure 21-4. Master Mode Block Diagram

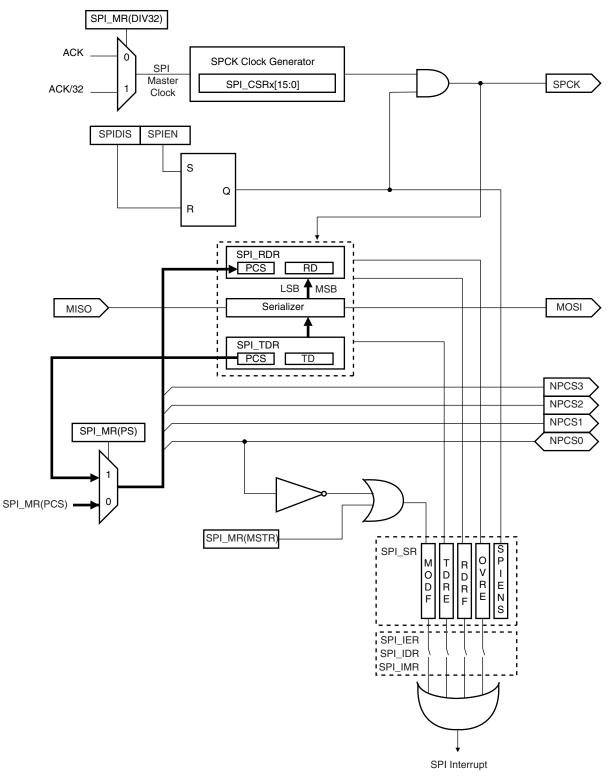

148 AT91C140

www.BDTIC.com/ATMEL


6069C-ATARM-15-Sep-05

21.6 SPI Slave Mode

In Slave Mode, the SPI waits for NSS to go active low before receiving the serial clock from an external master.

In Slave Mode, CPOL, NCPHA and BITS fields of SPI_CSR0 are used to define the transfer characteristics. The other Chip Select Registers are not used in Slave Mode.



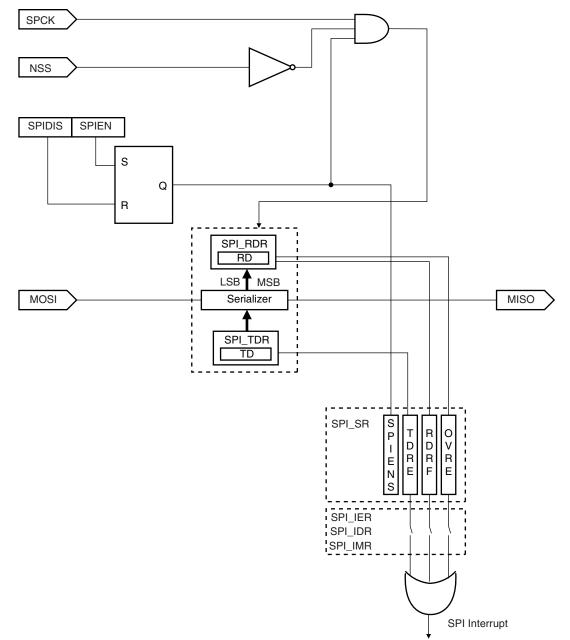

21.7 Data Transfers

Four modes are used for data transfers. These modes correspond to combinations of a pair of parameters called clock polarity (CPOL) and clock phase (CPHA) that determine the edges of






the clock signal on which the data are driven and sampled. Each of the two parameters has two possible states, resulting in four possible combinations that are incompatible with one another. Thus a master/slave pair must use the same parameter pair values to communicate. If multiple slaves are used and fixed in different configurations, the master must reconfigure itself each time it needs to communicate with a different slave.


Table 21-2 shows the four modes and corresponding parameter settings.

Table 21-2.SPI Bus Protocol Mode

SPI Mode	CPOL	СРНА
0	0	0
1	0	1
2	1	0
3	1	1

Figure 21-6 and Figure 21-7 show examples of data transfers.



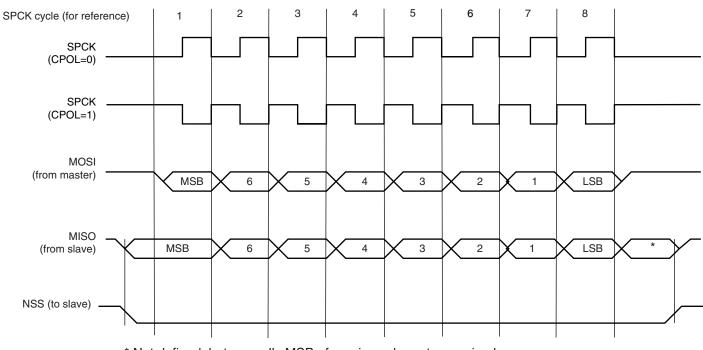

* Not defined, but normally MSB of previous character received.

150 AT91C140

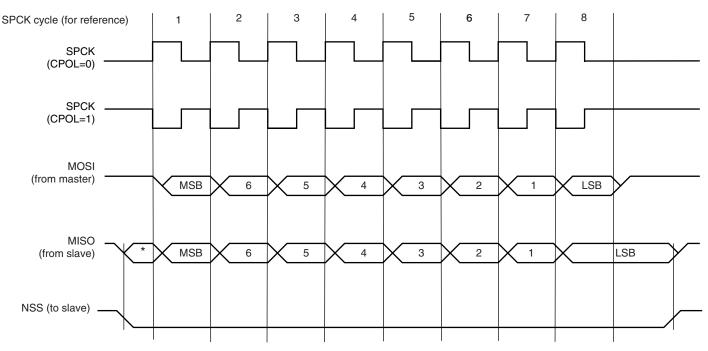


Figure 21-7. SPI Transfer Format (NCPHA = 0, 8 bits per transfer)

* Not defined but normally LSB of previous character transmitted.

21.8 Clock Generation

In Master Mode, the SPI Master Clock is either CLOCK or FDIV, as defined by the DIV32 field of SPI_MR. The SPI baud rate clock is generated by dividing the SPI Master Clock by a value between 4 and 510. The divisor is defined in the SCBR field in each Chip Select Register. The transfer speed can thus be defined independently for each chip select signal.

CPOL and NCPHA in the Chip Select Registers define the clock/data relationship between master and slave devices. CPOL defines the inactive value of the SPCK. NCPHA defines which edge causes data to change and which edge causes data to be captured.

In Slave Mode, the input clock low and high pulse duration must be longer than two system clock (CLOCK) periods.





21.9 Serial Peripheral Interface (SPI) User Interface

Table 21-3.SPI Memory Map

Offset	Register	Register Name	Access	Reset
0x00	Control Register	SPI_CR	Write-only	
0x04	Mode Register	SPI_MR	Read/Write	0x0
0x08	Receive Data Register	SPI_RDR	Read-only	0x0
0x0C	Transmit Data Register	SPI_TDR	Write-only	
0x10	Status Register	SPI_SR	Read-only	0x000000F0
0x14	Interrupt Enable Register	SPI_IER	Write-only	
0x18	Interrupt Disable Register	SPI_IDR	Write-only	
0x1C	Interrupt Mask Register	SPI_IMR	Read-only	0x0
0x20	Receive Pointer Register	SPI_RPR	Read/Write	0x0
0x24	Receive Counter Register	SPI_RCR	Read/Write	0x0
0x28	Transmit Pointer Register	inter Register SPI_TPR		0x0
0x2C	Transmit Counter Register	SPI_TCR	Read/Write	0x0
0x30	Chip Select Register 0	SPI_CSR0	Read/Write	0x0
0x34	Chip Select Register 1	SPI_CSR1	Read/Write	0x0
0x38	Chip Select Register 2	SPI_CSR2	Read/Write	0x0
0x3C	Chip Select Register 3	SPI_CSR3	Read/Write	0x0

152 AT91C140

21.9.1 SPI Control Register

Name:	SPI_CR		
Access Type:	Write-only		

Jieree Jpei							
31	30	29	28	27	26	25	24
_	_	_	_	—	-	—	_
23	22	21	20	19	18	17	16
-	_	_	_	_	-	_	_
15	14	13	12	11	10	9	8
-	_	—	_	-	-	-	_
7	6	5	4	3	2	1	0
SWRST	_	_	-	_	_	SPIDIS	SPIEN

• SPIEN: SPI Enable

0 = No effect.

1 = Enables the SPI to transfer and receive data.

• SPIDIS: SPI Disable

0 = No effect.

1 = Disables the SPI.

All pins are set in input mode and no data is received or transmitted.

If a transfer is in progress, the transfer is finished before the SPI is disabled.

If both SPIEN and SPIDIS are equal to one when the control register is written, the SPI is disabled

• SWRST: SPI Software Reset

0 = No effect.

1 = Resets the SPI. A software-triggered hardware reset of the SPI interface is performed.





21.9.2 SPI Mode Register

Name:	SPI_MR
Access Type:	Read/Write

31	30	29	28	27	26	25	24				
	DLYBCS										
23	22	21	20	19	18	17	16				
_	_	_	_		PCS						
15	14	13	12	11	10	9	8				
_	_	_	_	_	_	_	-				
7	6	5	4	3	2	1	0				
LLB	_	_	MODFDIS	DIV32	PCSDEC	PS	MSTR				

• MSTR: Master/Slave Mode

0 = SPI is in Slave mode.

1 = SPI is in Master mode.

• PS: Peripheral Select

0 = Fixed Peripheral Select.

1 = Variable Peripheral Select.

PCSDEC: Chip Select Decode

0 = The chip selects are directly connected to a peripheral device.

1 = The four chip select lines are connected to a 4- to 16-bit decoder.

When PCSDEC equals one, up to 16 Chip Select signals can be generated with the four lines using an external 4- to 16-bit decoder.

The Chip Select Registers define the characteristics of the 16 chip selects according to the following rules:

SPI_CSR0 defines peripheral chip select signals 0 to 3.

SPI_CSR1 defines peripheral chip select signals 4 to 7.

SPI_CSR2 defines peripheral chip select signals 8 to 11.

SPI_CSR3 defines peripheral chip select signals 12 to 15*.

*Note: The 16th state corresponds to a state in which all chip selects are inactive. This allows a different clock configuration to be defined by each chip select register.

www.BDTIC.com/ATMEL

DIV32: Clock Selection

0 = SPI Master Clock equals ACK.

1 = SPI Master Clock equals ACK/32.

MODFDIS: Mode Fault Detection

0 = Mode fault detection is enabled.

1 = Mode fault detection is disabled.

• LLB: Local Loopback Enable

0 = Local loopback path disabled

1 = Local loopback path enabled

LLB controls the local loopback on the data serializer for testing in Master Mode only.

154 AT91C140

• PCS: Peripheral Chip Select

This field is only used if Fixed Peripheral Select is active (PS = 0). If PCSDEC = 0:

 PCS = xxx0 NPCS[3:0] = 1110

 PCS = xx01 NPCS[3:0] = 1101

 PCS = x011 NPCS[3:0] = 1011

 PCS = 0111 NPCS[3:0] = 0111

 PCS = 1111 forbidden (no peripheral is selected)

 (x = don't care) (x = don't care)

If PCSDEC = 1:

NPCS[3:0] output signals = PCS

• DLYBCS: Delay Between Chip Selects

This field defines the delay from NPCS inactive to the activation of another NPCS. The DLYBCS time guarantees non-overlapping chip selects and solves bus contentions in case of peripherals having long data float times.

If DLYBCS is less than or equal to six, six SPI Master Clock periods will be inserted by default.

Otherwise, the following equation determines the delay:

NPCS_to_SCK_Delay = DLYBCS * SPI_Master_Clock_period





21.9.3 SPI Receive Data Register

Name: Access Type:	SPI_R Read-								
31	30	29	28	27	26	25	24		
_	_	_	-	_	_	_	_		
23	22	21	20	19	18	17	16		
-	_	_	-		PC	CS			
15	14	13	12	11	10	9	8		
RD									
7	6	5	4	3	2	1	0		
RD									

• RD: Receive Data

Data received by the SPI Interface is stored in this register right-justified. Unused bits read zero.

• PCS: Peripheral Chip Select

In Master Mode only, these bits indicate the value on the NPCS pins at the end of a transfer. Otherwise, these bits read zero.

156 AT91C140

21.9.4 SPI Tr Name: Access Type:	r ansmit Data SPI_T Write-	DR								
31	30	29	28	27	26	25	24			
_	_	_	_	_	_	_	_			
23	22	21	20	19	18	17	16			
-	_	_	-	PCS						
15	14	13	12	11	10	9	8			
TD										
7	6	5	4	3	2	1	0			
	TD									

• TD: Transmit Data

Data to be transmitted by the SPI is stored in this register. Information to be transmitted must be written to the transmit data register in a right-justified format.

PCS: Peripheral Chip Select

This field is only used if Variable Peripheral Select is active (PS = 1).

If PCSDEC = 0:

PCS = xxx0	NPCS[3:0] = 1110
PCS = xx01	NPCS[3:0] = 1101
PCS = x011	NPCS[3:0] = 1011
PCS = 0111	NPCS[3:0] = 0111
PCS = 1111	forbidden (no peripheral is selected)
(x = don't care)	

If PCSDEC = 1:

NPCS[3:0] output signals = PCS





21.9.5 SPI Status Register

Name:	SPI_SR			
Access Type:	Read-or	nly		
31	30	29	28	27
-	-	—	-	-
23	22	21	20	19

23	22	21	20	19	18	17	16
_	-	—	-	-	-	-	SPIENS
15	14	13	12	11	10	9	8
_	—	—	-	-	—	-	_
7	6	5	4	3	2	1	0
_	-	ENDTX	ENDRX	OVRES	MODF	TDRE	RDRF

25

26

24

• RDRF: Receive Data Register Full

0 = No data has been received since the last read of SPI_RDR

1 = Data has been received and the received data has been transferred from the serializer to SPI_RDR since the last read of SPI_RDR.

• TDRE: Transmit Data Register Empty

0 = Data has been written to SPI_TDR and not yet transferred to the serializer.

1 = The last data written in the Transmit Data Register has been transferred to the serializer.

TDRE equals zero when the SPI is disabled or at reset. The SPI enable command sets this bit to one.

• MODF: Mode Fault Error

0 = No Mode Fault has been detected since the last read of SPI_SR.

1 = A Mode Fault occurred since the last read of the SPI_SR.

OVRES: Overrun Error Status

0 = No overrun has been detected since the last read of SPI_SR.

1 = An overrun has occurred since the last read of SPI_SR.

An overrun occurs when SPI_RDR is loaded at least twice from the serializer since the last read of the SPI_RDR.

• ENDRX: End of RX buffer

0 = The Receive Counter Register has not reached 0 since the last write in SPI_RCR.

1 = The Receive Counter Register has reached 0 since the last write in SPI_RCR.

• ENDTX: End of TX buffer

- 0 = The Transmit Counter Register has not reached 0 since the last write in SPI_TCR.
- 1 = The Transmit Counter Register has reached 0 since the last write in SPI_TCR.

• SPIENS: SPI Enable Status

0 = SPI is disabled.

1 = SPI is enabled.

158 AT91C140

21.9.6 SPI Interrupt Enable Register

Name: Access Type:	SPI_II Write-						
31	30	29	28	27	26	25	24
_	_	_	_	_	_	_	-
23	22	21	20	19	18	17	16
_	-	—	_	_	_	_	_
15	14	13	12	11	10	9	8
—	-	-	—	-	-	-	_
7	6	5	4	3	2	1	0
_	_	ENDTX	ENDRX	OVRES	MODF	TDRE	RDRF

- RDRF: Receive Data Register Full Interrupt Enable
- TDRE: SPI Transmit Data Register Empty Interrupt Enable
- MODF: Mode Fault Error Interrupt Enable
- OVRES: Overrun Error Interrupt Enable
- ENDRX: End of Receive Buffer Interrupt Enable
- ENDTX: End of Transmit Buffer Interrupt Enable
- 0 = No effect.
- 1 = Enables the corresponding interrupt.

21.9.7 SPI Interrupt Disable Register

Name:	SPI_IDR
Access Type:	Write-only

31	30	29	28	27	26	25	24
_	_	-	—	-	-	-	_
23	22	21	20	19	18	17	16
-	_	I	_	-	Ι	Ι	—
15	14	13	12	11	10	9	8
_	_	-	-	-	-	-	-
7	6	5	4	3	2	1	0
—	—	ENDTX	ENDRX	OVRES	MODF	TDRE	RDRF

- RDRF: Receive Data Register Full Interrupt Disable
- TDRE: SPI Transmit Data Register Empty Interrupt Disable
- MODF: Mode Fault Error Interrupt Disable
- OVRES: Overrun Error Interrupt Disable
- ENDRX: End of Receive Buffer Interrupt Disable
- ENDTX: End of Transmit Buffer Interrupt Disable
- 0 = No effect.
- 1 = Disables the corresponding interrupt.



21.9.8 SPI Interrupt Mask Register

Name: Access Type:	SPI_II Read-						
31	30	29	28	27	26	25	24
-	_	_	_	_	_	_	_
23	22	21	20	19	18	17	16
_	_	_	_	_	_	_	_
15	14	13	12	11	10	9	8
-	-	-	_	-	-	-	-
7	6	5	4	3	2	1	0
_	_	ENDTX	ENDRX	OVRES	MODF	TDRE	RDRF

- RDRF: Receive Data Register Full Interrupt Mask
- TDRE: SPI Transmit Data Register Empty Interrupt Mask
- MODF: Mode Fault Error Interrupt Mask
- OVRES: Overrun Error Interrupt Mask
- ENDRX: End of Receive Buffer Interrupt Mask
- ENDTX: End of Transmit Buffer Interrupt Mask
- 0 = The corresponding interrupt is not enabled.
- 1 = The corresponding interrupt is enabled.

AT91C140 160

21.9.9 SPI C Name: Access Type:	hip Select Re SPI_C Read/	SR0 SPI_CS	R3				
31	30	29	28	27	26	25	24
			DLY	ВСТ			
23	22	21	20	19	18	17	16
			DLY	′BS			
15	14	13	12	11	10	9	8
			SC	BR			
7	6	5	4	3	2	1	0
	Bľ	TS		_	_	NCPHA	CPOL

• CPOL: Clock Polarity

0 = The inactive state value of SCK is logic level zero.

1 = The inactive state value of SCK is logic level one.

CPOL is used to determine the inactive state value of the serial clock (SCK). It is used with NCPHA to produce the required clock/data relationship between master and slave devices.

• NCPHA: Clock Phase

0 = Data is changed on the leading edge of SCK and captured on the following edge of SCK.

1 = Data is captured on the leading edge of SCK and changed on the following edge of SCK.

NCPHA determines which edge of SCK causes data to change and which edge causes data to be captured. NCPHA is used with CPOL to produce the required clock/data relationship between master and slave devices.

• BITS: Bits Per Transfer

The BITS field determines the number of data bits transferred. Reserved values should not be used.

BITS[3:0]	Bits Per Transfer
0000	8
0001	9
0010	10
0011	11
0100	12
0101	13
0110	14
0111	15
1000	16
1001	Reserved
1010	Reserved
1011	Reserved
1100	Reserved
1101	Reserved
1110	Reserved
1111	Reserved



• SCBR: Serial Clock Baud Rate

In Master Mode, the SPI Interface uses a modulus counter to derive the SPCK baud rate from the SPI Master Clock (selected between CLOCK and FDIV). The Baud rate is selected by writing a value from 2 to 255 in the field SCBR. The following equation determines the SPCK baud rate:

SPCK Baudrate = SPI_Master_Clock / (2 * SCBR)

Giving SCBR a value of zero or one disables the baud rate generator. SPCK is disabled and assumes its inactive state value. No serial transfers may occur. At reset, baud rate is disabled.

• DLYBS: Delay Before SCK

This field defines the delay from NPCS valid to the first valid SCK transition.

When DLYBS equals zero, the NPCS valid to SCK transition is 1/2 the SCK clock period.

Otherwise, the following equation determines the delay:

NPCS_to_SCK_Delay = DLYBS * SPI_Master_Clock_period

• DLYBCT: Delay Between Consecutive Transfers

This field defines the delay between two consecutive transfers with the same peripheral without removing the chip select. The delay is always inserted after each transfer and before removing the chip select if needed.

When DLYBCT equals zero, a delay of four SPI Master Clock periods are inserted.

Otherwise, the following equation determines the delay:

Delay_After_Transfer = 32 * DLYBCT * SPI_Master_Clock_period.

21.9.10 SPI Receive Pointer Register

Register Name: Access Type:	SPI_F Read/						
31	30	29	28	27	26	25	24
			RXI	PTR			
23	22	21	20	19	18	17	16
			RXI	PTR			
15	14	13	12	11	10	9	8
			RXI	PTR			
7	6	5	4	3	2	1	0
			RXI	PTR			

• RXPTR: Receive Pointer

RXPTR must be loaded with the address of the receive buffer.

21.9.11 SPI Receive Counter Register

Register Name Access Type:	e: SPI_F Read/								
31	30	29	28	27	26	25	24		
23	22	21	20	19	18	17	16		
15	14	13	12	11	10	9	8		
	RXCTR								
7	6	5	4	3	2	1	0		
			RX	CTR					

• RXCTR: Receive Counter Register

RXCTR must be loaded with the size of the receive buffer.

0 = Stops peripheral data transfer

1 - 65535 = Start peripheral data transfer if RDRF is active.





21.9.12 SPI Transmit Pointer Register

Register Name: Access Type:	SP_TF Read/						
31	30	29	28	27	26	25	24
			TXF	PTR			
23	22	21	20	19	18	17	16
			TXF	PTR			
15	14	13	12	11	10	9	8
			TXF	PTR			
7	6	5	4	3	2	1	0
			TXF	PTR			

• TXPTR: Transmit Pointer Register

TXPTR must be loaded with the address of the transmit buffer.

21.9.13 SPI Transmit Counter Register

Register Name: Access Type:	SP_T Read/								
31	30	29	28	27	26	25	24		
23	22	21	20	19	18	17	16		
15	14	13	12	11	10	9	8		
	TXCTR								
7	6	5	4	3	2	1	0		
	TXCTR								

• TXCTR: Transmit Counter Register

TXCTR must be loaded with the size of the receive buffer.

0 = Stops peripheral data transfer


1 - 65535 = Start peripheral data transfer if TDRE is active.

164 AT91C140

22. Mechanical Characteristics and Packaging

22.1 PQFP Packaging Information

Figure 22-1. AT91C140 PQFP Package

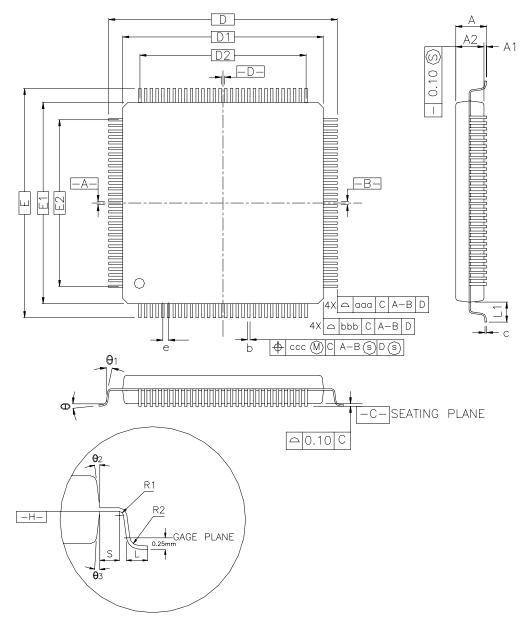

For PQFP package data, see Table 22-1 on page 166,





22.2 PQFP Package Data

Symbol	Min	Nom	Мах		
А			4.10		
A1	0.25				
A2	3.20	3.32	3.60		
D		31.20 BASIC			
D1		28.00 BASIC			
E		31.20 BASIC			
E1		28.00 BASIC			
R2	0.13		0.30		
R1	0.13				
Q	0 °		7 °		
Q ₁	0 °				
Q ₂		8° Ref			
Q ₃		8° Ref			
С	0.11	0.15	0.23		
L	0.73	0.88	1.03		
L1		1.60 REF			
S	0.20				
b	0.17	0.20	0.27		
е		0.50 BSC			
D2	25.50				
E2	25.50				
	Tolerances of	form and position			
aaa	0.25		0.010		
bbb	0.20		0.008		
CCC	0.08		0.003		

 Table 22-1.
 Package Dimensions for 208-lead PQFP Package (in mm)

166 AT91C140

www.BDTIC.com/ATMEL

23. Ordering Information

Table 23-1.	Ordering Information
-------------	----------------------

Ordering Code	Package	Package Type	Temperature Operating Range	
AT91C140-QU-001	PQFP208	Green	-40°C to +85°C	





www.BDTIC.com/ATMEL

6069C-ATARM-15-Sep-05

Table of Contents

Features1

1	Description	1
2	Block Diagram	2
3	Pinout	3
	3.1Mechanical Overview of the 208-lead PQFP Package	.4
4	Peripheral Multiplexing on PIO Lines	5
	4.1PIO Controller A Multiplexing	.6
	4.2PIO Controller B Multiplexing	.6
5	Signal Description	, 7
6	ARM7TDMI Core	10
7	Power Supplies	10
8	System Controller	11
	8.1Test	11
	8.2Reset Controller	11
	8.3Clock Generator	11
	8.4Chip ID	12
	8.5System Controller User Interface	13
9	Memory Controller (MC)	16
	9.1Architecture	16
	9.2Memory Map	17
	9.3ARM ASB Arbitration	18
	9.4MAC ASB Arbitration	18
	9.5ASB-ASB Bridge Arbitration	18
	9.6Boot Mode	19
	9.7Endianness	20
10	Peripherals2	21
	10.1Peripheral Registers	21
	10.2Peripheral Memory Map	22
11	Peripheral Data Controller (PDC)2	<u>23</u>
	11.1PDC Overview	23
	11.2PDC Channel Priority	23





12	Boot Program	24
	12.1Boot Mode	24
	12.2Hardware Connection of the DataFlash	24
	12.3Internal Boot Software	24
	12.4DataFlash Header Details	25
	12.5Reserved Resources	26
13	External Bus Interface (EBI)	27
	13.1Signal Multiplexing	
14	SDRAM Controller (SDRAMC)	28
	14.1Description	28
	14.2Block Diagram	28
	14.3I/O Lines Description	29
	14.4Application Example	29
	14.5SDRAM Device Initialization	31
	14.6SDRAM Controller Write Cycle	32
	14.7SDRAM Controller Read Cycle	33
	14.8Border Management	34
	14.9SDRAM Controller Refresh Cycles	35
	14.10SDRAM User Interface	36
15	14.10SDRAM User Interface	
15		42
15	Static Memory Controller (SMC)	 42 42
15	Static Memory Controller (SMC) 15.1External Memory Mapping	 42 42 42
15	Static Memory Controller (SMC) 15.1External Memory Mapping 15.2Pin Description	 42 42 42 42
15	Static Memory Controller (SMC) 15.1External Memory Mapping 15.2Pin Description 15.3Byte Write or Byte Select Mode	 42 42 42 42 43
15	Static Memory Controller (SMC) 15.1External Memory Mapping 15.2Pin Description 15.3Byte Write or Byte Select Mode 15.4Read Protocols	42 42 42 42 43 44
15	Static Memory Controller (SMC) 15.1External Memory Mapping 15.2Pin Description 15.3Byte Write or Byte Select Mode 15.4Read Protocols 15.5Write Protocol	 42 42 42 42 43 44 44
15	Static Memory Controller (SMC) 15.1External Memory Mapping 15.2Pin Description 15.3Byte Write or Byte Select Mode 15.4Read Protocols 15.5Write Protocol 15.6Wait States	42 42 42 42 43 44 44 45
	Static Memory Controller (SMC) 15.1External Memory Mapping 15.2Pin Description 15.3Byte Write or Byte Select Mode 15.4Read Protocols 15.5Write Protocol 15.6Wait States 15.7SMC User Interface	42 42 42 43 43 44 45 49
	Static Memory Controller (SMC) 15.1External Memory Mapping 15.2Pin Description 15.3Byte Write or Byte Select Mode 15.4Read Protocols 15.5Write Protocol 15.6Wait States 15.7SMC User Interface Ethernet MAC (EMAC)	42 42 42 43 43 44 45 49
	Static Memory Controller (SMC) 15.1External Memory Mapping 15.2Pin Description 15.3Byte Write or Byte Select Mode 15.4Read Protocols 15.5Write Protocol 15.6Wait States 15.7SMC User Interface Ethernet MAC (EMAC) 16.1Block Diagram	42 42 42 42 43 43 44 45 49 50
	Static Memory Controller (SMC) 15.1External Memory Mapping 15.2Pin Description 15.3Byte Write or Byte Select Mode 15.4Read Protocols 15.5Write Protocol 15.6Wait States 15.7SMC User Interface Ethernet MAC (EMAC) 16.1Block Diagram 16.2Media Independent Interface	42 42 42 43 43 44 45 49 50 50
	Static Memory Controller (SMC) 15.1External Memory Mapping 15.2Pin Description 15.3Byte Write or Byte Select Mode 15.4Read Protocols 15.5Write Protocol 15.6Wait States 15.7SMC User Interface 16.1Block Diagram 16.2Media Independent Interface 16.3Transmit/Receive Operation	42 42 42 43 43 44 44 45 49 50 50 52
	Static Memory Controller (SMC) 15.1External Memory Mapping 15.2Pin Description 15.3Byte Write or Byte Select Mode 15.4Read Protocols 15.5Write Protocol 15.6Wait States 15.7SMC User Interface Ethernet MAC (EMAC) 16.1Block Diagram 16.2Media Independent Interface 16.3Transmit/Receive Operation 16.4DMA Operations	42 42 42 43 44 44 45 49 50 50 52 55

ii

17	Advanced Interrupt Controller (AIC)	73
	17.1Priority Controller	74
	17.2Interrupt Handling	74
	17.3Standard Interrupt Sequence	75
	17.4Fast Interrupt	76
	17.5Software Interrupt	77
	17.6Spurious Interrupt	77
	17.7AIC User Interface	78
18	Parallel I/O Controller (PIO)	87
	18.1Output Selection	87
	18.2I/O Levels	87
	18.3Interrupts	87
	18.4I/O Line Control	
	18.5Parallel I/O Controller (PIO) User Interface	
19	Universal Asynchronous Receiver Transmitter (UART)	97
	19.1Block Diagram	97
	19.2Pin Description	98
	19.3Baud Rate Generator	98
	19.4Receiver Operations	99
	19.5Transmitter	100
	19.6Channel Modes	101
	19.7Peripheral Data Controller	102
	19.8Modem Control and Status Signals	102
	19.9Universal Asynchronous Receiver/Transmitter (UART) User Interface .	104
	19.10UART Interrupt Disable Register	109
	19.11UART Interrupt Mask Register	110
20	Timer/Counter (TC)	118
	20.1Block Diagram	118
	20.2Signal Name Description	119
	20.3Description	119
	20.4Capture Operating Mode	122
	20.5Waveform Operating Mode	
	20.6Timer/Counter (TC) User Interface	127
21	Serial Peripheral Interface (SPI)	142
	21.10verview	142





	21.2Block Diagram	143
	21.3Connections	144
	21.4Pin Name List	144
	21.5Master Mode Operations	144
	21.6SPI Slave Mode	149
	21.7Data Transfers	149
	21.8Clock Generation	151
	21.9Serial Peripheral Interface (SPI) User Interface	
		-
22		
22 23		
	Ordering Information	165 166
	Ordering Information Mechanical Characteristics and Packaging	165 166
	Ordering Information Mechanical Characteristics and Packaging 23.1PQFP Packaging Information	165 166

Revision History

Doc. Rev.	Date	Comments	Change Request Ref.
6069A	21-May-04	First issue.	
6069B	16-May-05	Changed package to PQFP208. Updated ordering information.	CSR 04-420, 05-156
6069C	01-Sep-05	Global, External Bus Interface references to 32-bit changed to 16-bit or removed. Table 3-1, "Pinout for 208-lead PQFP Package," DBW32 and BO256 changed to GND Table 5-1, "Signal Description," DBW32 removed Global all instances of the following changed DQM0-DQM3 changed to DQM0-DQM1 NWE0-NWE3 changed to NWE0-NWE1 Signal Waveforms section removed Data Bus Width section removed	CSR 05-403
		Table 3-1, "Pinout for 208-lead PQFP Package," Replaced SCLKA,FSA, STXA, SRXA by GND or NC	CSR 05-409
		Table 5-1, "Signal Description,"SCKA added to UART description,PIO descriptions changed.	Hli

