

UM0470 User manual

STM8 SWIM communication protocol and debug module

Introduction

This manual has been written for developers who need to build programming, testing or debugging tools for the STM8 microcontroller family. It explains the debug architecture of the STM8 core.

The STM8 debug system consists of two modules:

- DM: Debug module
- SWIM: Single wire interface module

Related documentation:

- How to program STM8S and STM8A Flash program memory and data EEPROM (PM0051)
 (STM8A version is not published yet)
- How to program STM8L Flash program memory and data EEPROM (PM0054)

June 2011 Doc ID 14024 Rev 3 1/37

Contents UM0470

Contents

1	Debu	g systei	m overview	6			
2	Comr	nunicat	ion layer	7			
3	Single	e wire ir	nterface module (SWIM)	8			
	3.1	Operatir	ng modes	8			
	3.2	SWIM e	entry sequence	9			
	3.3	Bit form	at	11			
		3.3.1	High speed bit format	11			
		3.3.2	Low speed bit format	12			
	3.4	SWIM c	communication protocol	13			
	3.5	SWIM c	ommands	14			
		3.5.1	SRST: system reset	14			
		3.5.2	ROTF: read on the fly	14			
		3.5.3	WOTF: write on the fly	15			
	3.6	SWIM communication reset					
	3.7	CPU register access					
	3.8	SWIM c	communication in Halt mode	16			
	3.9	Physica	l layer	17			
	3.10		SWIM registers				
		3.10.1	SWIM control status register (SWIM_CSR)				
		3.10.2	SWIM clock control register (CLK_SWIMCCR)				
4	Debu	g modu	le (DM)	20			
	4.1	Introduc	etion	20			
	4.2	Main features					
	4.3						
	4.0	4.3.1	Reset				
		4.3.2	Breakpoints				
		4.3.3	Abort				
		4.3.4	Watchdog control				
		4.3.5	Interaction with SWIM				
	4.4		pint decoding table				



4.5	Softwar	e breakpoint mode	24
4.6	Timing	description	24
4.7	Abort .		24
4.8	Data br	eakpoint	25
4.9	Instruct	ion breakpoint	25
4.10	0 Step mo	ode	25
4.1	1 Applicat	tion notes	26
	4.11.1	Illegal Memory access	
	4.11.2	Forbidden stack access	
	4.11.3	DM break	26
4.1	2 DM regi	isters	27
	4.12.1	DM breakpoint register 1 extended byte (DM_BKR1E)	27
	4.12.2	DM breakpoint register 1 high byte (DM_BKR1H)	
	4.12.3	DM breakpoint register 1 low byte (DM_BKR1L)	27
	4.12.4	DM breakpoint register 2 extended byte (DM_BKR2E)	28
	4.12.5	DM breakpoint register 2 high byte (DM_BKR2H)	28
	4.12.6	DM breakpoint register 2 low byte (DM_BKR2L)	28
	4.12.7	DM control register 1 (DM_CR1)	29
	4.12.8	DM control register 2 (DM_CR2)	30
	4.12.9	DM control/status register 1 (DM_CSR1)	31
	4.12.10	DM control/status register 2 (DM_CSR2)	32
	4.12.11	DM enable function register (DM_ENFCTR)	33
	4.12.12	Summary of SWIM, DM and core register maps	34
Appendix A	•	on of the DM_ENFCTR register	
	for each	STM8 product	35
Revision hist	torv		36



List of tables UM0470

List of tables

Table 1.	SWIM command summary	14
Table 2.	CPU register memory mapping in STM8	16
Table 3.	SWIM pin characteristics	17
Table 4.	Decoding table for breakpoint interrupt generation	
Table 5.	STM8 registers	
Table 6.	Peripherals which are frozen by the bits of the DM ENFCTR register	
	for each STM8 product	35
Table 7.	Document revision history	
	·	



UM0470 List of figures

List of figures

Figure 1.	Debug system block diagram	. 6
Figure 2.	SWIM pin external connections	. 7
Figure 3.	SWIM activation sequence	. 8
Figure 4.	SWIM activation timing diagram	. 9
Figure 5.	SWIM entry sequence	
Figure 6.	High speed bit format	11
Figure 7.	Low speed bit format	12
Figure 8.	Command format (Host -> Target)	13
Figure 9.	Data format (Target -> Host)	13
Figure 10.	Timings on SWIM pin	17
Figure 11.	Debug module block diagram	21
Figure 12.	STM8 Instruction Model	24
Figure 13.	STM8 Debug Module Stall Timing	24
Figure 14.	STM8 DM Data Break Timing	25
Figure 15.	STM8 DM instruction break timing	25
Figure 16.	STM8 DM step timing	25



Doc ID 14024 Rev 3 5/37


1 Debug system overview

The STM8 debug system interface allows a debugging or programming tool to be connected to the MCU through a single wire bidirectional communication based on open-drain line.

It provides non-intrusive read/write access to RAM and peripherals during program execution

The block diagram is shown in *Figure 1*.

Figure 1. Debug system block diagram

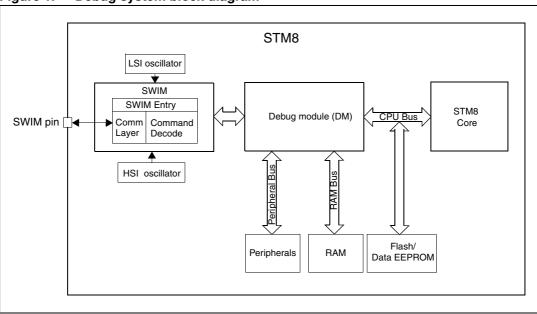

The debug module uses the two internal clock sources present in the device, the LSI Low Speed Internal clock (usually in the range 30 kHz-200 kHz, depending on the product) one and the HSI High Speed Internal clock (usually in the range 10 MHz to 25 MHz, depending on the device). The clocks are automatically started when necessary.

577

2 Communication layer

The SWIM is a single wire interface based on asynchronous, high sink (8 mA), open-drain, bidirectional communication.

While the CPU is running, the SWIM allows non-intrusive read/write accesses to be performed on-the-fly to the RAM and peripheral registers, for debug purposes.

In addition, while the CPU is stalled, the SWIM allows read/write accesses to be performed to any other part of the MCU's memory space (Data EEPROM and program memory).

CPU registers (A, X, Y, CC, SP) can also be accessed. These registers are mapped in memory and can be accessed in the same way as other memory addresses.

- Register, peripherals and memory can be accessed only when the SWIM_DM bit is set.
- When the system is in HALT, WFI or readout protection mode, the NO_ACCESS flag in the SWIM_CSR register is set. In this case, it is forbidden to perform any accesses because parts of the device may not be clocked and a read access could return garbage or a write access might not succeed.

The SWIM can perform a MCU device software reset.

The SWIM pin can also be used by the MCU target application as a standard I/O port with some restrictions if you also want to use it for debug. The safest way is to provide a strap option on the application PCB.

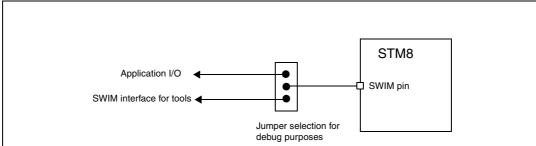


Figure 2. SWIM pin external connections

3 Single wire interface module (SWIM)

3.1 Operating modes

After a Power-On Reset (powering of the device) the SWIM is reset and enters in its OFF mode.

- 1. **OFF**: In this mode the SWIM pin must not be used as an I/O by the application. It is waiting for the SWIM entry sequence or to be switched to I/O mode by the application software.
- 2. I/O: This state is entered by the software application by setting the SWIM disable bit (SWD) bit in the core configuration register (CFG_GCR). In this state, the user application can use the SWIM pin as a standard I/O pin, the only drawback is that there is no way to debug the functionality of this pin with the built-in debug capabilities. In case of a reset, the SWIM goes back to OFF mode.
- 3. **ACTIVE**: This mode is entered when a specific sequence is detected on the SWIM pin while in OFF state. In this state, the SWIM pin is used by the host tool to control the STM8 with 3 commands. (SRST System Reset, ROTF Read On The Fly, WOTF Write On The Fly)

Note: Please note that the SWIM can be set Active and communicate while the device is in RESET state (NRST pin forced low)

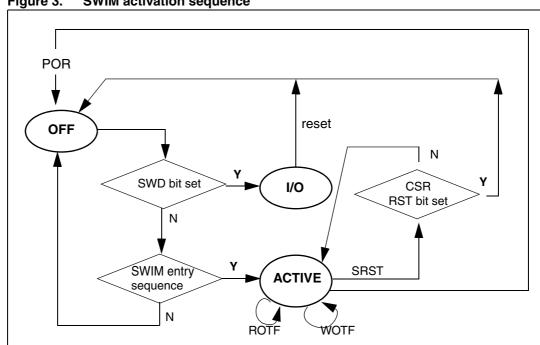


Figure 3. SWIM activation sequence

3.2 SWIM entry sequence

After a POR, and as long as the SWIM is in OFF mode, the SWIM pin is sampled for entry sequence detection. In order to do this, the internal low speed RC clock is automatically turned ON after POR and remains forced ON as long as the SWIM is in OFF mode.

If the register which forces the SWIM in I/O mode is written before the entry sequence is finalized, the SWIM enters I/O mode. Once the SWIM is ACTIVE, writing this bit has no influence on communication and the SWIM interface remains in ACTIVE mode.

If an application uses the SWIM pin as standard I/O, it puts the SWIM interface in I/O mode in the initialization section of the software code (typically, this is performed just after the reset). However, even in this case, it is still possible to put the SWIM interface in ACTIVE mode by forcing the RESET pin to 0 and keep it low for the duration of the SWIM entry sequence.

As long as the SWIM is in OFF mode, the SWIM entry sequence is detected at any moment, during reset or when the application is running.

If both the SWIM pin and the reset pin are multiplexed with I/Os, the way to enter SWIM ACTIVE state is to power down the MCU device, power up and to maintain the reset until the end of the SWIM entry sequence.


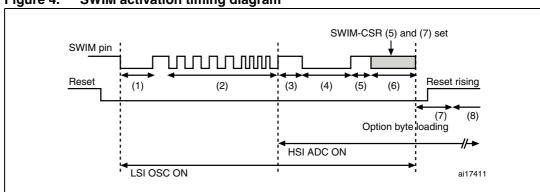


Figure 4. SWIM activation timing diagram

SWIM activation is shown in Figure 4 and each segment on the diagram is described below.

- To make the SWIM active, the SWIM pin must be forced low during a period of 16 μs (which is 64 pulses minimum at the frequency of HSI).
- 2. After this first pulse at 0, the SWIM detects a **specific sequence** to guarantee robustness in the SWIM active state entry. The SWIM entry sequence is: 4 pulses at 1 kHz followed by 4 pulses at 2 kHz. The frequency ratio is detected and allows SWIM entry. The ratio can be easily detected whatever the internal RC frequency. The waveform of the entry sequence is shown in *Figure 5*. Note that the sequence starts and ends with the SWIM pin at 1.
- 3. After the entry sequence, the SWIM enters in SWIM active state, and the HSI oscillator is automatically turned ON.
- 4. After this delay, the SWIM sends a **synchronization** frame to the host.
 - **Synchronization frame description:** A synchronization frame of 128 x HSI clock periods with the SWIM line at 0 is sent out by the MCU device to allow for the measurement of the RC by the debug host. An advanced debug host can re-calibrate its clock to adapt to the frequency of Internal RC.
- 5. Before starting a SWIM communication, the SWIM line must be released at 1 to guarantee that the SWIM is ready for communication (at least 300 ns).
- 6. Write 0A0h in the SWIM_CSR:
 - setting bit 5 allows the whole memory range and SRST command to be accessed.
 - setting bit 7 masks the internal reset sources
- Release reset which starts the option byte loading sequence. Wait 1 ms for stabilization.
- 8. Once option byte loading has occurred and stabilization time is reached, the CPU is in phase 8:
 - STM8S is stalled and HSI = 16 Mhz (see STM8S datasheets for % accuracy)
 - SWIM clock is at HSI/2 = 8 Mhz
 - SWIM is active in low speed bit format (see Section 3.3.2)



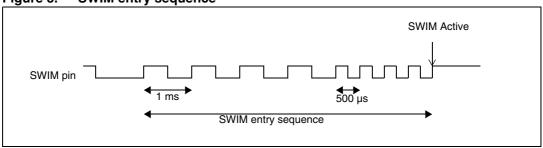

3.3 Bit format

The bit format is a Return-To-Zero format, which allows synchronization of every bit.

Two communication speeds are available. At SWIM activation, the low speed is selected. The high speed is selected by setting the HS bit in the SWIM_CSR register with the SWIM protocol.

When entering SWIM mode during the RESET phase, it is possible that the option bytes have not yet been loaded from non volatile memory to their respective registers.

Option byte loading is triggered by any internal or external reset.

In order to ensure proper system behavior, the HS bit should not be set until the option byte loading is finished. At the end of the option byte loading, the HSIT bit in the SWIM_CSR is set by hardware.

3.3.1 High speed bit format

1 bit is generated with ten HSI oscillator pulses.


The bit format is:

- 2 pulses at '0' followed by 8 pulses at '1' for '1' value.
- 8 pulses at '0' followed by 2 pulses at '1' for '0' value.

When the SWIM receives a data packet, it will decode:

- '1' when the number of consecutive samples at '0' is less or equal to 4.
- '0' when the number of consecutive samples at '0' is greater or equal to 5.

Figure 6. High speed bit format

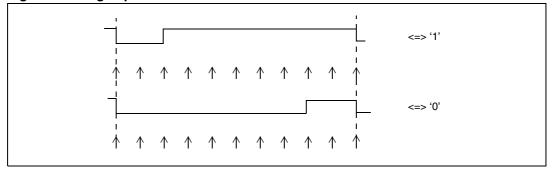

5/

3.3.2 Low speed bit format

1 bit is generated with twenty-two HSI oscillator pulses.


The bit format is:

- 2 pulses at '0' followed by 20 pulses at '1' for '1' value.
- 20 pulses at '0' followed by 2 pulses at '1' for '0' value.

When the SWIM receives a data packet, it will decode:

- '1' when the number of consecutive samples at '0' is less or equal to 8.
- '0' when the number of consecutive samples at '0' is greater or equal to 9.



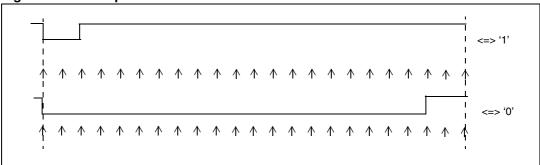


3.4 SWIM communication protocol

When in ACTIVE mode, communication can be initiated by host or device. Each byte or command is preceded by a 1-bit header in order to arbitrate if both host and device initiate the communication at the same time.

The host header is '0' in order to have the priority over the device in case of arbitration, due to open-drain capability. The host can start the transfer only if there is no transfer on-going.

Figure 8. Command format (Host -> Target)

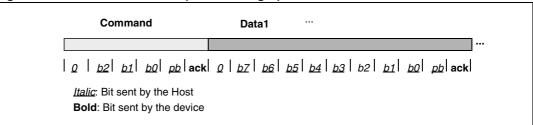

Each command sent by the host is made of:

1 command (ROTF, WOTF or SWRST) made of

Header: 1 bit at '0' b2-b0: 3-bit command

pb: parity bit: XOR between all b(i)

ack:acknowledge (1 bit at '1'). The receiver must send the not-acknowledge value if it has detected a parity error (NACK: not acknowledge = 1 bit at '0'), or it is not yet ready.


optionally several data packets (in case of WOTF) made of:

Header: 1 bit at '0' b7-b0: 8-bit data

pb: parity bit sent after data. XOR between all b(i)

ack: acknowledge

Figure 9. Data format (Target -> Host)

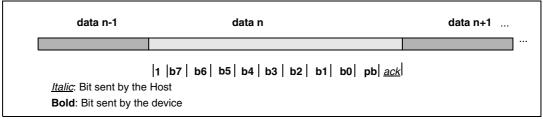

Each data frame is made of:

Header: 1 bit at '1' b7-b0: 8-bit data

pb: parity bit sent after data

ack: acknowledge

577

Doc ID 14024 Rev 3

13/37

3.5 SWIM commands

The Host can send a command when the line is idle or after each data byte from device. After sending the command, the host releases the line. When the SWIM is ready to answer to the command, it initiates the transfer. If a new command from the host occurs while a command is pending in SWIM, the pending command is cancelled and the new command is decoded, except in case of WOTF.

Three commands are available. They are listed in *Table 1*.

Table 1. SWIM command summary

Command	Binary Code
SRST	000
ROTF	001
WOTF	010
Reserved for future use	011
1 10301 Vod 101 Tuture use	1xx

3.5.1 SRST: system reset

Format: 1 command from Host to Target

SRST

Parameters:

None.

SRST command generates a system reset only if SWIM_CSR/SWIM_DM bit is set.

3.5.2 ROTF: read on the fly

Format: 1 command followed by the number of bytes to be read followed by the address on three bytes.

ROTF	N	@E	@H	@L	D[@]	D[@+N]	
------	---	----	----	----	------	--------	--

Parameters:

N The 8 bits are the number of bytes to read (from 1 to 255)

@E/H/L: This is the 24-bit address to be accessed.

D[...]: These are the data bytes read from the memory space

If the host sends a NACK to a data byte, the device will send the same byte again.

If SWIM_DM bit is cleared, ROTF can only be done on SWIM internal registers.

www.BDTIC.com/ST

3.5.3 WOTF: write on the fly

1 command followed by the number of bytes to be written followed by the address on three bytes.

WOTF	N	@E	@H	@L	D[@]	D[@+N]

Parameters:

N The 8 bits are the number of bytes to write (from 1 to 255)

@E/H/L: This is the 24-bit address to be accessed.

D[...]: These are the data bytes to write in the memory space

If a byte D [i] has not been written when the following byte D [i+1] arrives, D [i+1] will be followed by a NACK. In this case the Host must send D [i+1] again until it is acknowledged.

For the last byte, if it is not yet written when a new command occurs, the new command will receive a NACK and will not be taken into account.

If SWIM_DM bit is cleared, WOTF can only be done on SWIM internal registers.

3.6 SWIM communication reset

In case of a problem during communication, the host can reset the communication and the on-going command by sending 128 x HSI clock periods low on the SWIM pin. If the SWIM logic detects that the SWIM pin is low for more than 64 x HSI clock periods, it will reset the communication state machine and will switch the SWIM to low-speed mode (SWIM_CSR.HS <- 0). This is to allow for variation in the frequency of the internal RC oscillator.

In response to this communication reset, SWIM will send the synchronization frame which is 128x HSI oscillator periods low on DBG pin.

57

Doc ID 14024 Rev 3 15/37

3.7 CPU register access

The CPU registers are mapped in the STM8 memory, and they can be read or written directly using the ROTF and WOTF SWIM commands. Write operations to the CPU registers are committed only when the CPU is stalled.

To flush the instruction decode phase, you must set the FLUSH bit in the *DM control/status register 2 (DM_CSR2)* after writing a new value in the Program Counter (PCE, PCH, PCL).

Table 2. CPU register memory mapping in STM8

CPU register	Memory location
A	7F00h
PCE	7F01h
PCH	7F02h
PCL	7F03h
ХН	7F04h
XL	7F05h
YH	7F06h
YL	7F07h
SPH	7F08h
SPL	7F09h
CC	7F0Ah

3.8 SWIM communication in Halt mode

To maintain the communication link with the debug host, the HSI oscillator remains on when the MCU enters Halt mode. This means that halt mode power consumption measurements have no meaning when the SWIM is active.

The NO_ACCESS bit in the SWIM_CSR register is set when the system is in HALT, WFI or readout protection mode. This means the bus is not accessible in this case.

The OSCOFF bit in the SWIM_CSR register is used to switch off the oscillator. In this case, debug control is lost as long as the device is in Halt mode and the SWIM pin is high. The only way to recover the debug control is to induce a falling edge on SWIM pin: this will reenable the HSI oscillator.

3.9 Physical layer

During the communication, the SWIM pin will be in pseudo-open drain configuration. The SWIM pin in the device is capable of sinking 8 mA when it drives the line to 0. The external pull-up on the SWIM line should be sized in such a way that the maximum rise time t_r of the SWIM line should be less than 1 sampling period of the bit (which is 100 ns +/- 4 %).

Figure 10. Timings on SWIM pin

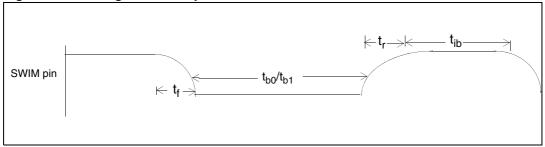


Table 3. SWIM pin characteristics

Parameter	Symbol	Generic formula	Timings for HSI = 10 MHz LSI = 32 to 64 kHz		
		Tormala	Min	Max	
Fall time on SWIM pin	t _f	TBD		50 ns	
Rise time on SWIM pin	t _r	TBD		96 ns	
Inter-bit time (The time which SWIM pin stays high between 2 bits)	t _{ib}	TBD	>0		
Inter-frame time (Time between end of a frame and the next one)	t _{if}	TBD	0		
Low time for a bit at 0	High speed: t _{b0}	TBD	768 ns	832 ns	
Low time for a bit at o	Low speed: t _{b0}	TBD	1.6 µs	2.4 µs	
Low time for a bit at 1	High speed: Tb1	TBD	192 ns	208 ns	
(High Speed)	Low speed: Tb1	TBD	150 ns	250 ns	
Injected current on SWIM pin		TBD		8 mA	

3.10 STM8 SWIM registers

3.10.1 SWIM control status register (SWIM_CSR)

Address: 7F80h Reset value: 00h

This register is reset only by a power on reset or by SWIM SRST command if the RST bit =1 in the SWIM_CSR register.

7	6	5	4	3	2	1	0
SAFE_MASK	NO_ACCESS	SWIM_DM	HS	OSCOFF	RST	HSIT	PRI
rw	r	rw	rw	rw	rw	r	rw

Bit 7	SAFE_MASK: Mask internal RESET sources This bit can be read or written through SWIM only. It cannot be accessed through the STM8 bus. It includes the Watchdog reset. 0: Internal Reset sources are not masked 1: Internal reset sources are masked
Bit 6	NO_ACCESS: Bus not accessible This bit can be read through SWIM only, to determine the bus is accessible or not. It is set automatically if the device is in HALT, WFI or readout protection mode. 0: Bus is accessible 1: Bus is not accessible Caution: Depending on the SWIM revision, in some devices, the NO_ACCESS bit indicates only that the device is in HALT mode.
Bit 5	SWIM_DM: SWIM for Debug Module This bit can be read or written to 1 through SWIM only. It cannot be accessed through the STM8 bus. 0: The SWIM can access only SWIM_CSR register. SWIM reset command has no effect 1: The whole memory range can be accessed with ROTF and WOTF commands. The SRST command generates a Reset
Bit 4	HS: High Speed This bit can be read or written through SWIM only. It cannot be accessed through STM8 bus. 0: Low speed bit format 1: High speed bit format The speed change occurs when the communication is IDLE. It is reset by the SWIM communication reset condition as described in Section 3.6.
Bit 3	OSCOFF: Oscillators Off control bit This bit can be read or written through SWIM only. It cannot be accessed through STM8 bus. 0: HSI oscillator remains ON in halt mode 1: HSI oscillator is not requested ON in Halt mode

	RST: SWIM Reset Control Bit
	This bit can be read or written through SWIM only. It cannot be accessed through
Bit 2	STM8 bus.
	0: SWIM is not reset when a SRST command occurs.
	1: SWIM is reset when a SRST command occurs. SWIM will re-enter OFF mode.
	HSIT: High Speed Internal Clock is trimmed
	This bit is read only through SWIM only. It cannot be accessed through STM8 bus. It
Bit 1	is set when the HSIT bit is set in the core configuration register and reset by an
	external reset.
	0: High Speed Internal Clock is not trimmed, SWIM must remain in low speed mode.
	1: High Speed Internal Clock is trimmed, SWIM high speed mode is allowed.
	PRI: SWIM access priority
	This bit can be read or written through SWIM only. Usually the SWIM accesses to
	system resources are non-intrusive, SWIM having the lowest priority. This can be
	overridden by setting this bit.
Bit 0	0: Non-intrusive access by SWIM to system resources (low priority)
	1: Intrusive access by SWIM to system resources (SWIM has priority, CPU is
	stalled).
	Note: The SWD bit is located in the STM8 core configuration register. Refer to the
	corresponding datasheet for information on this register

3.10.2 SWIM clock control register (CLK_SWIMCCR)

Address Offset: 50CDh (product dependent)

Reset value: xxxx 0000 (x0h)

,	0	3	4	3	2	ı	U
			Reserved				SWIMCLK

rw

Bits 7:1	Reserved, must be kept cleared.
	SWIMCLK SWIM clock divider
	This bit is set and cleared by software.
Bit 0	0: SWIM clock divided by 2
	1: SWIM clock not divided by 2
	Note: this register is not present in some STM8 devices.

5/

Doc ID 14024 Rev 3

19/37

4 Debug module (DM)

4.1 Introduction

The Debug Module (DM) allows the developer to perform certain debugging tasks without using an emulator. For example, the DM can interrupt the MCU to break infinite loops or output the core context (stack) at a given point. The DM is mainly used for in-circuit debugging.

4.2 Main features

- Two conditional breakpoints (break on instruction fetch, data read or write, stack access...)
- Software breakpoint control
- Step mode
- External Stall capability on WOTF command in SWIM mode
- Watchdog and peripherals control
- DM Version identification capability
- Interrupt Vector Table selection

UM0470 Debug module (DM)

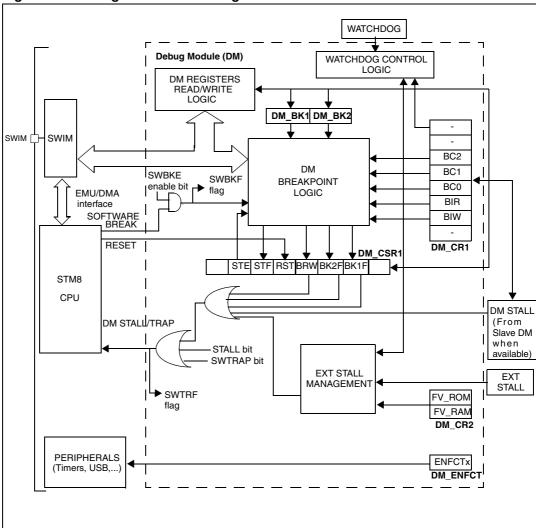


Figure 11. Debug module block diagram

4.3 Debug

The DM registers can be read and written only through the SWIM interface. STM8 core has no access to these registers.

4.3.1 Reset

Once the SWIM is active and SWIM_DM bit is set in SWIM_CSR register, a 'data read' breakpoint at the reset vector address is automatically set, due to the reset values of the debug module registers. This breakpoint can be used to initialize the debug session.

4.3.2 Breakpoints

The DM generates a stall to the core when a breakpoint is reached. When the processor is stalled, the host can read or modify any address in memory. Access to the processor registers is explained in *Section 3.7: CPU register access*.

To restart the program execution, the STALL bit in DM_CSR2 must be cleared using the WOTF command of the SWIM protocol.

4.3.3 Abort

To use the Abort function, the host must write the STALL bit in the DM_CSR2 using the SWIM WOTF command.

No interrupt is generated. The core is stalled in the current state. Using the SWIM commands, the host can read and modify the status of the MCU. If the CPU registers must be modified, the procedure described in *Section 3.7: CPU register access* has to be used.

The host can restart the program execution by resetting the STALL bit using the SWIM commands.

4.3.4 Watchdog control

Using the WDGOFF bit in the *DM control register 1 (DM_CR1)* you can configure the Window Watchdog and Independent Watchdog counters to be stopped while the CPU is stalled by the Debug Module. This bit must be set before the watchdogs are activated. If a watchdog is enabled by Hardware Watchdog option bit, the WDGOFF bit has no effect on it.

4.3.5 Interaction with SWIM

The SWIM sends the status bit which indicates the SWIM is active or not. When SWIM is not active, the DM will not generate any break/stall request to the CPU.

UM0470 Debug module (DM)

4.4 Breakpoint decoding table

 Table 4.
 Decoding table for breakpoint interrupt generation

DM_CR1			1		PREAK CONDITIONS	DM_CSR1			
BC2	BC1	ВС0	BIR	BIW	BREAK CONDITIONS	BK1F	BK2F	BRW	
0	0	0	0	0	Disabled (RESET state) 0		0	х	
0	0	0	0	1	Data Write on @=BK1 and Data=BK2L	1	0	0	
0	0	0	1	0	Data Read on @=BK1 and Data=BK2L	1	0	1	
0	0	0	1	1	Data R/W on @=BK1 and Data=BK2L	1	0	0/1	
0	0	1	0	0	Instruction fetch BK1<=@<=BK2	1	0	х	
0	0	1	0	1	Data Write on BK1<=@<=BK2	1	0	0	
0	0	1	1	0	Data Read on BK1<=@<=BK2	1	0	1	
0	0	1	1	1	Data R/W on BK1<=@<=BK2	1	0	0/1	
0	1	0	0	0	Instruction fetch on @<= BK1 or BK2<=@	1	0	х	
0	1	0	0	1	Data Write on @<= BK1 or BK2<=@	1	0	0	
0	1	0	1	0	Data Read on @<= BK1 or BK2<=@	1	0	1	
0	1	0	1	1	1 Data R/W on @<= BK1 or BK2<=@		0	0/1	
0	1	1	Х	Х	X Disabled		0	х	
1	0	0	0	0	Instruction fetch on @=BK1 then on @=BK2	0 1		х	
1	0	0	0	1	Data Write on @=BK1 or @=BK2	10 or 01 or 11		0	
1	0	0	1	0	Data Read on @=BK1 or @=BK2	10 or (01 or 11	1	
1	0	0	1	1	Data R/W on @=BK1 or @=BK2	10 or (01 or 11	0/1	
1	0	1	0	0	Instruction fetch on @=BK1 or @=BK2	10 or (01 or 11	х	
1	0	1	0	1	Instruction fetch on @=BK1 / Data Write on @=BK2	10	or 01	x-0	
1	0	1	1	0	Instruction fetch on @=BK1 / Data Read on @=BK2	10 or 01		x-1	
1	0	1	1	1	1 Instruction fetch on @=BK1 / Data R/W on @=BK2 10 or		or 01	x-0/1	
1	1	0	Х	Х	X Disabled		0	х	
1	1	1	0	0	ata Write in Stack on @<=BK1 / Instruction fetch on @=BK2 10 or 01		or 01	0-x	
1	1	1	0	1	1 Data Write in Stack on @<=BK1 / Data Write on @=BK2 10 or 0		01 or 11	0	
1	1	1	1	0	Data Write in Stack on @<=BK1 / Data Read on @=BK2	10	or 01	0-1	
1	1	1	1	1	Data Write in Stack on @<=BK1 / Data R/W on @=BK2	10 or 01 or 11		0-0/1	

4.5 Software breakpoint mode

Software breakpoint mode is reserved for debugging tools to insert breakpoints into user code by substituting a user instruction with a software break (reserved BKPT instruction #8b).

Software breakpoint mode is enabled using the SWBKPE bit in the *DM control/status register 2 (DM_CSR2)*.

When a BKPT instruction is decoded, the CPU is stalled and the STALL and SWBKF bits are set by hardware to indicate that a software breakpoint has occurred. To resume execution, the debugger must restore the user's instruction, then set the FLUSH bit and clear the STALL bit.


4.6 Timing description

This paragraph defines when the Debug Module stalls the CPU when using the different breakpoint sources.

• The STM8 instruction can be modelized in time with an op-code/operand FETCH phase DECODE and EXECUTION phases as shown in *Figure 12*.

The timing information is based on this models.


Figure 12. STM8 Instruction Model

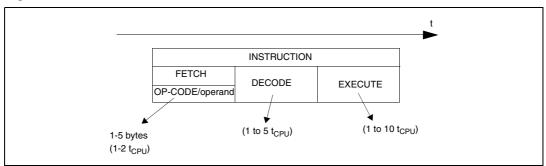

4.7 Abort

The stall is generated immediately on writing the STALL bit in the DM_CSR2 register.

Figure 13. STM8 Debug Module Stall Timing

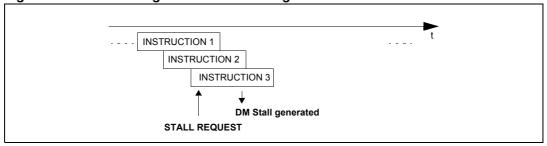


UM0470 Debug module (DM)

4.8 Data breakpoint

A stall is generated when SWIM is active, after the end of the current instruction execution.

Figure 14. STM8 DM Data Break Timing

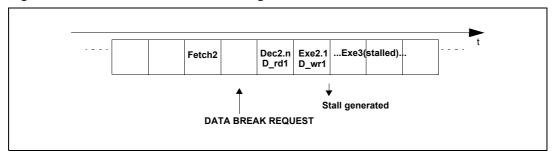


4.9 Instruction breakpoint

In the STM8, on an instruction break, DM stalls the CPU before the selected instruction execution (while the instruction is in the decode stage). See *Figure 15*.

Note:

When the specified address does not correspond to a valid instruction address, no stall is generated.


Figure 15. STM8 DM instruction break timing

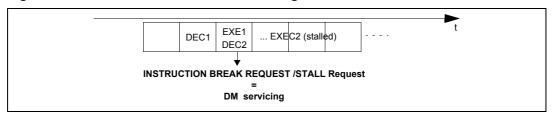

4.10 Step mode

The STM8 CPU stall is activated before the instruction execution, in the first decode cycle of the instruction. See *Figure 16*.

Figure 16. STM8 DM step timing

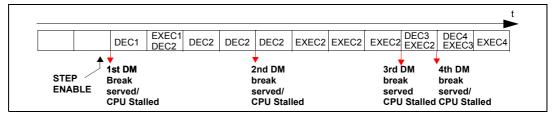

Note:

When Step mode and Instruction Break on the next instruction mode are both enabled, both the STF and the BKxF flags are set. When you clear the STALL bit, the step function continues its normal operation.

4.11 Application notes

4.11.1 Illegal Memory access

To verify if the program attempts to write or read in an illegal part of memory (reserved area), select the "Data R/W on BK1<=@<=BK2" condition, where BK1 and BK2 are the lower and upper addresses of the reserved memory.

4.11.2 Forbidden stack access

If part of the stack contains specific data or instructions that should not be overwritten, the DM can be used to prevent access to these locations. Select one of the "Data Write in Stack on @<=BK1" conditions and set BK1 to the upper value where the specific data are located in the stack. If the STM8 tries to overwrite these values (after an interrupt or a CALL...), DM will generate a break. The four possible associated conditions allow to manage another breakpoint capability at the same time.

4.11.3 DM break

After an DM break, the CPU is stalled (through the EMU_Stall signal). While the CPU is stalled, the SWIM can read/write any memory location or memory mapped register.

The program can be continued from the breakpoint, by resetting the Stall bit.

If a change of PC is needed, the SWIM must write the new PC value using the method described in *Section 3.7: CPU register access*. In order to fetch the code from the new PC address, the SWIM must set the FLUSH bit in the *DM control/status register 2 (DM_CSR2)* before resetting the STALL bit .

UM0470 Debug module (DM)

4.12 DM registers

These registers are read/write only through the SWIM interface.

In this section, the following abbreviations are used:

read/write (rw)	SWIM can read and write to these bits via the ROTF/WOTF commands.
read-only (r)	SWIM can only read these bits via the ROTF command.

4.12.1 DM breakpoint register 1 extended byte (DM_BKR1E)

STM8 Address: 7F90h

Reset value: 1111 1111 (FFh)




	BK1[23:16]: Breakpoint 1 extended byte value
Bits 7:0	This register is written by software to define the extended 8 address bits of
	Breakpoint 1.

4.12.2 DM breakpoint register 1 high byte (DM_BKR1H)

Address: 7F91h

Reset value: 1111 1111 (FFh)

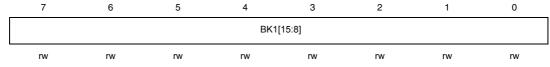


	BK1[15:8]: Breakpoint 1 high byte value
Bits 7:0	This register is written by software to define the higher 8 address bits of Breakpoint
	1.

4.12.3 DM breakpoint register 1 low byte (DM_BKR1L)

Address: 7F92h

Reset value: 1111 1111 (FFh)

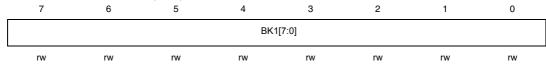


Bits 7:0	BK1[7:0]: Breakpoint 1 high byte value
Dits 7.0	This register is written by software to define the lower 8 address bits of Breakpoint 1.

4.12.4 DM breakpoint register 2 extended byte (DM_BKR2E)

Address: 7F93h

Reset value: 1111 1111 (FFh)

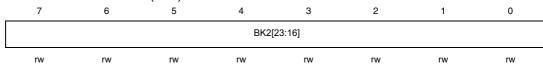

Bits 7:0

Bits 7:0

Bits 7:0

Bits 7:0

Bits 7:0

Bits 7:0


Breakpoint 2 extended byte value

This register is written by software to define the extended 8 address bits of Breakpoint 2.

4.12.5 DM breakpoint register 2 high byte (DM_BKR2H)

Address: 7F94h

Reset value: 1111 1111 (FFh)

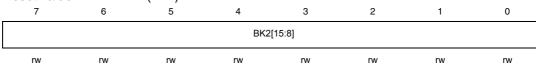

Bits 7:0


Comparison of Breakpoint 2 high byte value

This register is written by software to define the higher 8 address bits of Breakpoint 2.

4.12.6 DM breakpoint register 2 low byte (DM_BKR2L)

Address: 7F95h

Reset value: 1111 1111 (FFh)

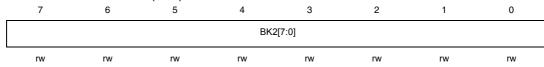

Bits 7:0

BK2[7:0]: Breakpoint 2 high byte value

This register is written by software to define the lower 8 address bits of Breakpoint 2.

4.12.7 DM control register 1 (DM_CR1)

Address: 7F96h

Reset value: 0000 0000 (00h)

7	6	5	4	3	2	1	0
WDGOFF	Reserved		BC[2:0]		BIR	BIW	Reserved
rw	-	rw	rw	rw	rw	rw	

	WDGOFF Watchdog control enable.					
D:4 7	This bit must be set or cleared by software before the watchdogs (WWDG and/or IWDG) are activated. This bit has no effect if the hardware watchdog option is					
Bit 7	selected.					
	0: Watchdog counters are not stopped while CPU is stalled by DM					
	1: Watchdog counters are stopped while CPU is stalled by DM					
Bit 6	Reserved.					
	BC[2:0] Breakpoint control					
Bits 5:3	These bits are set and cleared by software, they are used to configure the					
	breakpoints as shown in <i>Table 4</i> .					
	BIR Break on read control					
D:: 0	This bit enables a breakpoint on a data read operation. It is set and cleared by					
Bit 2	software.					
	0: No break on data read 1: Break on data read					
	BIW Break on write control					
Bit 1	This bit enables a breakpoint on a data write operation. It is set and cleared by software.					
	0: No break on data write					
	1: Break on data write					
Bit 0	Reserved.					

4.12.8 DM control register 2 (DM_CR2)

Address: 7F97h

Reset value: 0000 0000 (00h)



Bit 7:3	These bits are reserved and must be kept at 0.					
	FV_ROM Remap Vector table in ROM.					
Bit 2	This bit is set or cleared by software. It remaps the vector table to a ROM location (product dependent) instead of program memory (usually 8000h).					
	0: Vector table is in Program Memory area (8000h)					
	1: Vector table is in ROM memory area (depends on the product)					
Bit 1	Reserved, must be kept at 0.					
	FV_RAM Remap vector table in RAM					
Bit 0	This bit is set or cleared by software. It remaps the interrupt vector table to a RAM location instead of program memory (usually 8000h).					
	0: Vector table is in Program Memory area (8000h)					
	1: Vector table is in RAM memory area (address depends on the product)					

UM0470 Debug module (DM)

4.12.9 DM control/status register 1 (DM_CSR1)

Address: 7F98h

Reset value: 0001 0000 (10h)

7	6	5	4	3	2	1	0
Reserved	STE	STF	RST	BRW	BK2F	BK1F	Reserved
	rw	rw	r	r	r	r	

Bit 7	Reserved.
	STE Step mode enable (Read / Write)
Bit 6	This bit is set and cleared by software. It enables Step mode. 0: Step mode disabled
	1: Step mode enabled
	STF Step Flag (Read Only)
Bit 5	This bit indicates that the stall was generated by Step mode. It is set and cleared by hardware. Writing to this bit does not change the bit value.
	0: Step mode stall did not occur
	1: Step mode stall occurred
	RST Reset Flag (Read Only) This bit is set by hardware when the CPU was stalled by the debug module (DM),
Bit 4	just after reset. It is cleared by hardware when the STALL bit is cleared. Writing to this bit does not change the bit value.
	0: No reset occurred 1: A reset occurred
	BRW Break on Read/Write Flag (Read Only).
Bit 3	This bit gives the value of the read/write signal when a break occurs. Its value is not significant for instruction fetch breaks. It is set by hardware depending on the breakpoint conditions (see <i>Table 4: Decoding table for breakpoint interrupt generation on page 23</i>) and is cleared by hardware depending on the next breakpoint conditions. Writing to this bit does not change the bit value. 0: Breakpoint on write 1: Breakpoint on read
	BK2F Breakpoint 2 Flag (Read Only).
Bit 2	This bit indicates that the DM stall was generated by Breakpoint 2. It is set by hardware depending on the control conditions (see <i>Table 4: Decoding table for breakpoint interrupt generation on page 23</i>) and is cleared by hardware when the STALL bit is cleared. Writing to this bit does not change the bit value. 0: Breakpoint 2 did not occur 1: Breakpoint 2 occurred
	BK1F Breakpoint 1 Flag (Read Only).
Bit 1	This bit indicates that the DM interrupt was generated by Breakpoint 1. It is set by hardware depending on the control conditions (see <i>Table 4: Decoding table for breakpoint interrupt generation on page 23</i>) and is cleared by hardware when the STALL bit is cleared. Writing to this bit does not change the bit value. 0: Breakpoint 1 did not occur 1: Breakpoint 1 occurred
Bit 0	Reserved
	,


577

Doc ID 14024 Rev 3 31/37

4.12.10 DM control/status register 2 (DM_CSR2)

Address: 7F99h

Reset value: 0000 0000 (00h)

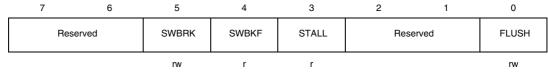

Bits 7:6	Reserved. Must be kept at 0					
	SWBKE Software breakpoint control bit (read/write)					
	This bit is used to enable/disable the software breakpoint capability with NOP instruction					
Bit 5	0: DM does not generate any event when NOP(SW BRK) instruction is fetched by CPU					
	 DM generates an event (CPU stalled in SWIM mode) when a software break instruction is fetched by CPU. 					
	SWBKF Software breakpoint status bit (read only)					
Bit 4	This flag is set when the CPU executes the software break instruction. 0: No software break instruction detected.					
	 Software break instruction detected. This bit is cleared when the STALL bit is cleared. 					
	STALL CPU stall control bit (R/W only in SWIM mode)					
	This bit is used to stall the CPU. This bit is kept cleared if the device is not in SWIM mode.					
Bit 3	This bit is set by WOTF command to generate an ABORT equivalent command					
Dit 0	It is also set by an DM trap interrupt event.					
	This bit is cleared by WOTF command to re-start the CPU.					
	0: CPU runs normally 1: CPU is stalled					
D'' 0 4						
Bit: 2:1	Reserved. Must be kept at 0					
	FLUSH Flush decode					
Bit: 10	This bit is set by software to flush the instruction decode phase after a PC modification. It is cleared by hardware when the flush is completed.					
	0: Default status					
	1: Flush decode					

UM0470 Debug module (DM)

4.12.11 DM enable function register (DM_ENFCTR)

Address: 7F9Ah

Reset Value: 1111 1111 (FFh)

| rw |
|--------|--------|--------|--------|--------|--------|--------|--------|
| ENFCT7 | ENFCT6 | ENFCT5 | ENFCT4 | ENFCT3 | ENFCT2 | ENFCT1 | ENFCT0 |
| , | | | | | | | U |

	ENFCTx Enable function
Bits 7:0	This bit is set and cleared by software. it allows to freeze a particular function of a peripheral when the core is stalled. The ENFCTx bit definitions are product dependent. 0: Function is frozen when CPU is stalled by DM 1: Function is active

See *Appendix A* for a full description of the DM_ENFCTR register.

4.12.12 Summary of SWIM, DM and core register maps

Table 5. STM8 registers

Table 5.	- OTIMOTOGI			1		ı		1	1
STM8 address	Register name	7	6	5	4	3	2	1	0
7F00h	A	A7	A6	A5	A4	A3	A2	A1	A0
	Reset value	0	0	0	0	0	0	0	0
7F01h	PCE ⁽¹⁾	PC23	PC22	PC21	PC20	PC19	PC18	PC17	PC16
7F02h	PCH ⁽¹⁾	PC15	PC14	PC13	PC12	PC11	PC10	PC9	PC8
7F03h	PCL ⁽¹⁾	PC7	PC6	PC5	PC4	PC3	PC2	PC1	PC0
7F04h	XH	X15	X14	X13	X12	X11	X10	X9	X8
	Reset value	0	0	0	0	0	0	0	0
7F05h	XL	X7	X6	X5	X4	X3	X2	X1	X0
	Reset value	0	0	0	0	0	0	0	0
7F06h	YH	Y15	Y14	Y13	Y12	Y11	Y10	Y9	Y8
	Reset value	0	0	0	0	0	0	0	0
7F07h	YL	Y7	Y6	Y5	Y4	Y3	Y2	Y1	Y0
	Reset value	0	0	0	0	0	0	0	0
7F08h	SPH ⁽¹⁾	SP15	SP14	SP13	SP12	SP11	SP10	SP9	SP8
7F09h	SPL ⁽¹⁾	SP7	SP6	SP5	SP4	SP3	SP2	SP1	SP0
7F0Ah	CC	V	-	l1	H	10	N	Z	C
	Reset value	0	0	1	0	1	0	0	0
7F80h	SWIM_CSR	SAFE_MASK	NO_ACCESS	SWIM_DM	HS	OSCOFF	RST	HSIT	PRI
	Reset value	0	0	0	0	0	0	0	0
7F90h	DM_BK1RE	BK1R23	BK1R22	BK1R21	BK1R20	BK1R19	BK1R18	BK1R17	BK1R16
	Reset value	1	1	1	1	1	1	1	1
7F91h	DM_BK1RH	BK1R15	BK1R14	BK1R13	BK1R12	BK1R11	BK1R10	BK1R9	BK1R8
	Reset value	1	1	1	1	1	1	1	1
7F92h	DM_BK1RL	BK1R7	BK1R6	BK1R5	BK1R4	BK1R3	BK1R2	BK1R1	BK1R0
	Reset value	1	1	1	1	1	1	1	1
7F93h	DM_BK2RE	BK2R23	BK2R22	BK2R21	BK2R20	BK2R19	BK2R18	BK2R17	BK2R16
	Reset value	1	1	1	1	1	1	1	1
7F94h	DM_BK2RH	BK2R15	BK2R14	BK2R13	BK2R12	BK2R11	BK2R10	BK2R9	BK2R8
	Reset value	1	1	1	1	1	1	1	1
7F95h	DM_BK2RL	BK2R7	BK2R6	BK2R5	BK2R4	BK2R3	BK2R2	BK2R1	BK2R0
	Reset value	1	1	1	1	1	1	1	1
7F96h	DM_CR1	WDGOFF	Reserved	BC2	BC1	BC0	BIR	BIW	Reserved
	Reset value	0	0	0	0	0	0	0	0
7F97h	DM_CR2 Reset value	Reserved					FV_ROM 0	Reserved 0	FV_RAM 0
7F98h	DM_CSR1	Reserved	STE	STF	RST	BRW	BK2F	BK1F	Reserved
	Reset value	0	0	0	0	0	0	0	0
7F99h	DM_CSR2 Reset value	Reserved 0	Reserved 0	SWBKE 0	SWBKF 0	STALL 0	Res	Reserved 0	FLUSH 0
7F9Ah	DM_ENFCTR	ENFCT7	ENFCT6	ENFCT5	ENFCT4	ENFCT3	ENFCT2	ENFCT1	ENFCT0
	Reset value	1	1	1	1	1	1	1	1

^{1.} The reset value for the SP and PC registers is product dependent. Refer to the device datasheet for more details

577

Appendix A Description of the DM_ENFCTR register for each STM8 product

Some peripherals can be frozen through the debug module during debug using the DM_ENFCTR register (address: 7F9Ah). *Table 6* shows the peripherals which are frozen by the bits (ENFCT0 to ENFCT7) of the DM_ENFCTR register.

Table 6. Peripherals which are frozen by the bits of the DM_ENFCTR register for each STM8 product

DM_ENFCTR register	STM8AF51A STM8S207/208 (128 Kbyte die)	STM8AF616 STM8S105 (32 Kbyte die)	STM8AF51B (256 Kbyte die)	STM8S103/903 (8 Kbyte die)	STM8L101 (8 Kbyte die)	STM8L15x (32 Kbyte die)				
Bit		Peripheral								
ENFCT0	Timer4/ System timer	Timer4/ System timer	Timer4/ System timer	Timer4/ System timer	I ² C	I ² C				
ENFCT1	Timer2	Timer2	Tmer2	Tmer2	Timer2	Timer2				
ENFCT2	Timer3	Timer3	Tmer3	Not used	Timer3	Timer3				
ENFCT3	Timer1	Timer1	Tmer1	Timer1	— bit not used	Timer1				
ENFCT4	— bit not used	bit not used	— bit not used	— bit not used	Timer4	Timer4				
ENFCT5	— bit not used	— bit not used	Tmer5	— bit not used	— bit not used	DMA				
ENFCT6	— bit not used	— bit not used	I ² C2	— bit not used	— bit not used	RTC				
ENFCT7	I ² C	I ² C	I ² C	I ² C	— bit not used	— bit not used				



Revision history UM0470

Revision history

Table 7. Document revision history

Date	Revision	Changes		
15-Jan-2008	1	Initial release.		
10-Dec-2009	2	Updated documentation references in <i>Introduction</i> . Section 3.2: SWIM entry sequence: updated Figure 4 and explanation. Section 3.3: Bit format: replaced OBL bit with HSIT bit. Added Appendix A.		
06-Jun-2011	3	Introduction: updated titles of reference documents. Updated name of 'IOM' bit to SWIM disable bit (SWD) in Section 3.1: Operating modes, Figure 3, and SWIM control status register (SWIM_CSR). Updated name of 'MCR' register to 'CFG_GCR' register in Section 3.1: Operating modes.		

Please Read Carefully:

Information in this document is provided solely in connection with ST products. STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, modifications or improvements, to this document, and the products and services described herein at any time, without notice.

All ST products are sold pursuant to ST's terms and conditions of sale.

Purchasers are solely responsible for the choice, selection and use of the ST products and services described herein, and ST assumes no liability whatsoever relating to the choice, selection or use of the ST products and services described herein.

No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted under this document. If any part of this document refers to any third party products or services it shall not be deemed a license grant by ST for the use of such third party products or services, or any intellectual property contained therein or considered as a warranty covering the use in any manner whatsoever of such third party products or services or any intellectual property contained therein.

UNLESS OTHERWISE SET FORTH IN ST'S TERMS AND CONDITIONS OF SALE ST DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY WITH RESPECT TO THE USE AND/OR SALE OF ST PRODUCTS INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE (AND THEIR EQUIVALENTS UNDER THE LAWS OF ANY JURISDICTION), OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

UNLESS EXPRESSLY APPROVED IN WRITING BY AN AUTHORIZED ST REPRESENTATIVE, ST PRODUCTS ARE NOT RECOMMENDED, AUTHORIZED OR WARRANTED FOR USE IN MILITARY, AIR CRAFT, SPACE, LIFE SAVING, OR LIFE SUSTAINING APPLICATIONS, NOR IN PRODUCTS OR SYSTEMS WHERE FAILURE OR MALFUNCTION MAY RESULT IN PERSONAL INJURY, DEATH, OR SEVERE PROPERTY OR ENVIRONMENTAL DAMAGE. ST PRODUCTS WHICH ARE NOT SPECIFIED AS "AUTOMOTIVE GRADE" MAY ONLY BE USED IN AUTOMOTIVE APPLICATIONS AT USER'S OWN RISK.

Resale of ST products with provisions different from the statements and/or technical features set forth in this document shall immediately void any warranty granted by ST for the ST product or service described herein and shall not create or extend in any manner whatsoever, any liability of ST.

ST and the ST logo are trademarks or registered trademarks of ST in various countries.

Information in this document supersedes and replaces all information previously supplied.

The ST logo is a registered trademark of STMicroelectronics. All other names are the property of their respective owners.

© 2011 STMicroelectronics - All rights reserved

STMicroelectronics group of companies

Australia - Belgium - Brazil - Canada - China - Czech Republic - Finland - France - Germany - Hong Kong - India - Israel - Italy - Japan - Malaysia - Malta - Morocco - Philippines - Singapore - Spain - Sweden - Switzerland - United Kingdom - United States of America

www.st.com



Doc ID 14024 Rev 3

37/37